Aspire 7745 Series
Service Guide

Service guide files and updates are available on the ACER/CSD web; for more information, please refer to http://csd.acer.com.tw

PRINTED IN TAIWAN

Downloaded from www.Manualslib.com manuals search engine

Revision History

Please refer to the table below for the updates made on this service guide.

Date	Chapter	Updates

Downloaded from www.Manualslib.com manuals search engine

Copyright

Copyright © 2010 by Acer Incorporated. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior written permission of Acer Incorporated.

Disclaimer

The information in this guide is subject to change without notice.

Acer Incorporated makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims any warranties of merchantability or fitness for any particular purpose. Any Acer Incorporated software described in this manual is sold or licensed "as is". Should the programs prove defective following their purchase, the buyer (and not Acer Incorporated, its distributor, or its dealer) assumes the entire cost of all necessary servicing, repair, and any incidental or consequential damages resulting from any defect in the software.

Acer is a registered trademark of Acer Corporation.
Intel is a registered trademark of Intel Corporation.
Other brand and product names are trademarks and/or registered trademarks of their respective holders.

Downloaded from www.Manualslib.com manuals search engine

Conventions

The following conventions are used in this manual:

SCREEN MESSAGES	Denotes actual messages that appear on screen.
NOTE	Gives bits and pieces of additional information related to the current topic.
WARNING	Alerts you to any damage that might result from doing or not doing specific actions.
CAUTION	Gives precautionary measures to avoid possible hardware or software problems.
IMPORTANT	Reminds you to do specific actions relevant to the accomplishment of procedures.

NOTE: This symbol where placed in the Service Guide designates a component that should be recycled according to the local regulations.

Downloaded from www.Manualslib.com manuals search engine

Preface

Before using this information and the product it supports, please read the following general information.

1. This Service Guide provides you with all technical information relating to the BASIC CONFIGURATION decided for Acer's "global" product offering. To better fit local market requirements and enhance product competitiveness, your regional office MAY have decided to extend the functionality of a machine (e.g. add-on card, modem, or extra memory capability). These LOCALIZED FEATURES will NOT be covered in this generic service guide. In such cases, please contact your regional offices or the responsible personnel/channel to provide you with further technical details.
2. Please note WHEN ORDERING FRU PARTS, that you should check the most up-to-date information available on your regional web or channel. If, for whatever reason, a part number change is made, it will not be noted in the printed Service Guide. For ACER-AUTHORIZED SERVICE PROVIDERS, your Acer office may have a DIFFERENT part number code to those given in the FRU list of this printed Service Guide. You MUST use the list provided by your regional Acer office to order FRU parts for repair and service of customer machines.

Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine

Table of Contents

System Specifications 1

Features 1
System Block Diagram 6
Notebook Tour 7
Top View 7
Closed Front View 8
Left View 9
Right View 9
Base View 10
Indicators 11
TouchPad Basics 12
Using the Keyboard 13
Lock Keys and embedded numeric keypad 13
Windows Keys 14
Hot Keys 15
Special Keys 16
Hardware Specifications and Configurations 17

System Utilities 31

BIOS Setup Utility 31
Navigating the BIOS Utility 31
Information 32
Main 33
Security 34
Boot 37
Exit 38
BIOS Flash Utility 39
DOS Flash Utility 39
WinFlash Utility 40
Removing BIOS Passwords: 42
Miscellaneous Utilities 43
Removing BIOS Passwords 45

Machine Disassembly and Replacement 47

Disassembly Requirements 47
Related Information 47
Replacement Requirements 47
Pre-disassembly Instructions 48
Disassembly Process 49
External Module Disassembly Process 50
External Modules Disassembly Flowchart 50
Removing the Battery Pack 51
Removing the Dummy Card 52
Removing the Base Door 53
Removing the Hard Disk Drive Module 54
Removing the DIMM Module 56
Removing the WLAN Module 57
Removing the 2nd HDD Module 59
Removing the ODD Module 62
Main Unit Disassembly Process 64
Main Unit Disassembly Flowchart 64
Removing the Keyboard 66
Removing the Upper Cover 68
Removing the LCD Module 70

Downloaded from www.Manualslib.com manuals search engine

Removing the Bluetooth Module 72
Removing the USB Board 74
Removing the Mainboard 76
Removing the LAN Board 78
Removing the RTC Battery 79
Removing the Thermal Module 80
Removing the CPU 82
Removing the PCH Heatsink 83
Removing the DC-IN Cable Assembly 84
Removing the Switch Board 85
Removing the Power Board 87
LCD Module Disassembly Process 89
LCD Module Disassembly Flowchart 89
Removing the LCD Bezel 90
Removing the Camera Board 92
Removing the LCD Panel 93
Removing the Antennas 97
LCD Reassembly Procedure 99
Replacing the Microphone 99
Replacing the Antennas 100
Replacing the LCD Panel 102
Replacing the Camera Board 106
Replacing the LCD Bezel 107
Main Unit Reassembly Process 109
Replacing the Power Assembly 109
Replacing the PCH Thermal Module 110
Replacing the CPU 110
Replacing the Thermal Module 112
Replacing the RTC Battery 113
Removing the LAN Board 114
Replacing the Mainboard 115
Replacing the USB board 116
Replacing the Bluetooth Module 118
Replacing the LCD Module 120
Replacing the Power Board 122
Replacing the Switch Board 123
Replacing the Upper Cover 124
Replacing the Keyboard 127
Replacing the Wireless LAN Module 128
Replacing the DIMM Module 129
Replacing the 2nd HDD Module 130
Replacing the Hard Disk Drive 132
Replacing the ODD Module 134
Replacing the Base Door 136
Replacing the Battery 137
Replace the Dummy Card 137

Troubleshooting 139

Common Problems 139
Power On Issue 140
No Display Issue 141
Random Loss of BIOS Settings 142
LCD Failure 143
Built-In Keyboard Failure 144
TouchPad Failure 145

Downloaded from www.Manualslib.com manuals search engine

Internal Speaker Failure 146
Internal Microphone Failure 147
HDD Not Operating Correctly 148
USB Failure (Right up/down side) 149
Other Failures 149
Intermittent Problems 150
Undetermined Problems 150
Post Code Reference Tables 151

Jumper and Connector Locations 157

Mainboard Top View 157
Mainboard Bottom View 158
Clearing Password Check and BIOS Recovery 159
Mainboard CMOS Discharge 159
BIOS Recovery by Crisis Disk 160

FRU (Field Replaceable Unit) List 161

Exploded Diagrams 162
Main Assembly 162
LCD Assembly 163
FRU List 164
Screw Table 170

Model Definition and Configuration 171

Acer Aspire 7745G Series 171
Acer Aspire 7745 Series 269

Test Compatible Components 273

Aspire 7745 Series 273

Online Support Information 279

Downloaded from www.Manualslib.com manuals search engine

Table of Contents

Downloaded from www.Manualslib.com manuals search engine

System Specifications

Features

Below is a brief summary of the computer's many features:

Operating System

- Genuine Windows® 7 Home Premium 64-bit
- Genuine Windows® 7 Home Basic 64-bit

Platform

- **Intel® Core™ i7-620M** processor (4 MB L3 cache, 2.66 GHz with Turbo Boost up to 3.33 GHz, DDR3 1066 MHz, 35 W) supporting Intel® 64 architecture, Intel® Smart Cache
- **Intel® Core™ i5-430M/ i5-520M/i5-540M** processor (3 MB L3 cache, 2.26/2.40/2.53 GHz with Turbo Boost up to 2.53/2.93/3.06 GHz, DDR3 1066 MHz, 35 W) supporting Intel® 64 architecture, Intel® Smart Cache
- **Intel® Core™ i3-330M/i3-350M** processor (3 MB L3 cache, 2.13/2.26 GHz, DDR3 1066 MHz, 35 W) supporting Intel® 64 architecture, Intel® Smart Cache

System Memory

- Dual-channel DDR3 SDRAM support:
  - Up to 4 GB of DDR3 1066 MHz memory, upgradable to 8 GB using two soDIMM modules

Display

- 17.3" HD+ 1600 x 900 pixel resolution, high-brightness (220-nit) Acer CineCrystal™ LED-backlit TFT LCD
- 16:9 aspect ratio
- 8 ms high-def response time
- 60% color gamut

Graphics

- Intel® HD Graphics with 128 MB of dedicated system memory, supporting Microsoft® DirectX® 10
- Dual independent display support
- 16.7 million colors
- External resolution / refresh rates:
  - VGA port up to 2560 x 1600: 60 Hz
  - HDMI™ port up to 1920 x 1200: 60 Hz
- MPEG-2/DVD decoding

Downloaded from www.Manualslib.com manuals search engine

- WMV9 (VC-1) and H.264 (AVC) decoding
- HDMI™ (High-Definition Multimedia Interface) with HDCP (High-bandwidth Digital Content Protection) support

Storage subsystem

- One or two 160/250/320/500 GB or larger hard disk drive
- Multi-in-1 card reader, supporting Secure Digital™ (SD), MultiMediaCard™ (MMC), Memory Stick™ (MS), Memory Stick PRO™ (MS PRO), xD-Picture Card™ (xD)

Audio subsystem

- Dolby®-optimized surround sound system with two built-in stereo speakers and one subwoofer supporting low-frequency effects
- Optimized 3rd Generation Dolby Home Theater® audio enhancement, featuring Dolby® Digital Live, Dolby® Pro Logic® IIx, Dolby® Headphone, Dolby® Natural Bass, Dolby® Sound Space Expander, Dolby® Audio Optimization, Dolby® High Frequency Enhancer technologies
- True5.1-channel surround sound output
- High-definition audio support
- Built-in microphone
- S/PDIF (Sony/Philips Digital Interface) support for digital speakers
- MS-Sound compatible

Optical Media Drive

- 4X Blu-ray Disc™ writer/DVD-Super Multi double-layer drive:
  - Read: 24X CD-ROM, 24X CD-R, 24X CD-RW, 8X DVD-ROM, 8X DVD-R, 8X DVD+R, 8X DVD-ROM DL, 6X DVD-R DL, 6X DVD+R DL, 8X DVD-RW, 8X DVD+RW, 5X DVD-RAM, 4X BD-ROM, 4X BD-R, 2X BD-RE, 4X BD-ROM DL, 4X BD-R DL, 2X BD-RE DL
  - Write: 24X CD-R, 16X CD-RW, 8X DVD-R, 8X DVD+R, 6X DVD-RW, 6X DVD+RW, 5X DVD-RAM, 4X DVD+R DL, 4X DVD-R DL, 4X BD-R, 2X BD-RE, 4X BD-R DL, 2X BD-RE DL
- 4X Blu-ray Disc™[1]/DVD SuperMulti double-layer drive:
  - Read: 24X CD-ROM, 24X CD-R, 24X CD-RW, 8X DVD-ROM, 8X DVD-R, 8X DVD+R, 8X DVD-ROM DL, 6X DVD-R DL, 6X DVD+R DL, 8X DVD-RW, 8X DVD+RW, 5X DVD-RAM, 4X BD-ROM, 4X BD-R, 2X BD-RE, 4X BD-ROM DL, 4X BD-R DL, 2X BD-RE DL
  - Write: 24X CD-R, 16X CD-RW, 8X DVD-R, 8X DVD+R, 6X DVD-RW, 6X DVD+RW, 5X DVD-RAM, 4X DVD+R DL, 4X DVD-R DL
- 8X DVD-Super Multi double-layer drive:
  - Read: 24X CD-ROM, 24X CD-R, 24X CD-RW, 8X DVD-ROM, 8X DVD-R, 8X DVD+R, 6X DVD-ROM DL, 6X DVD-R DL, 6X DVD+R DL, 8X DVD-RW, 8X DVD+RW, 5X DVD-RAM
  - Write: 24X CD-R, 24X CD-RW, 8X DVD-R, 8X DVD+R, 6X DVD-R DL, 6X DVD+R DL, 6X DVD-RW, 8X DVD+RW, 5X DVD-RAM

Downloaded from www.Manualslib.com manuals search engine

Communication

- Acer Video Conference, featuring:·
  - Acer Crystal Eye high-def webcam with 1280 x 1024 resolution
- WLAN:·
  - Intel® Centrino® Wireless-N 1000 b/g/n Wi-Fi CERTIFIED™ with Acer Nplify™ featuring MIMO technology
  - Acer InviLink™ Nplify™ 802.11 b/g/n Wi-Fi CERTIFIED™
  - Acer InviLink™ 802.11b/g Wi-Fi CERTIFIED™
  - Supporting Acer SignalUp™ wireless technology
- WPAN: Bluetooth® 2.1+EDR
- LAN: Gigabit Ethernet, Wake-on-LAN ready

Privacy control

- BIOS user, supervisor, HDD passwords,
- Kensington lock slot

Dimensions and Weight

- 410 (W) x 275 (D) x 30.8/34.2 (H) mm (16.14 x 10.83 x 1.21/1.35 inches)
- 3.25 kg (7.1 lbs.) with one HDD and 6-cell battery pack

Power Adapter and Battery

- ACPI 3.0 CPU power management standard: supports Standby and Hibernation power-saving modes
- 3-pin 65 W AC adapter:
  - 108 (W) x 46 (D) x 29.5 (H) mm (4.25 x 1.81 x 1.16 inches)
  - 225 g (0.49 lbs.) with 180 cm DC cable
- 48.8 W 4400 mAh 6-cell Li-ion battery pack
- Estimated battery life: Up to 2.5 hours
- ENERGY STAR®

Special Keys and Controls

- 103-/104-/107-key keyboard with inverted "T" cursor layout
- Multi-gesture touchpad pointing device supporting scroll, pinch, rotate, flip
- 10 function keys, four cursor keys, two Windows® keys, hotkey controls, independent standard numeric keypad, international language support
- Acer Programmable Key
- Media keys (printed on keyboard): play/pause, stop, previous, next

Downloaded from www.Manualslib.com manuals search engine

I/O Ports

- Multi-in-1 card reader (SD™, MMC, MS, MS PRO, xD)
- Four USB 2.0 ports
- External display (VGA) port
- HDMI™ port with HDCP support
- Headphone/speaker/line-out jack with S/PDIF support
- Microphone-in jack
- Ethernet (RJ-45) port
- Modem (RJ-11) port
- DC-in jack for AC adapter

Software

- Productivity
  - Acer Backup Manager
  - Acer ePower Management
  - Acer eRecovery Management
  - Acer PowerSmart Manager
  - Adobe® Flash® Player 10
  - Adobe® Reader® 9.1
  - eSobi™
  - Google™ Setup
  - Google Toolbar™
  - Microsoft® Office Personal 2007 (Service Pack 2) (Japan only, subject to customer request)
  - Microsoft® Office Trial (Service Pack 2)
  - Microsoft® Works SE 9 (Brazil, Canada, France, Germany, Poland, Russia, UK and US only)
  - Microsoft® Works 9
  - Microsoft® Works 8.5
  - Norton™ Online Backup
- Security
  - McAfee® Internet Security Suite 2009 Trial
  - McAfee® Virus Definitions
  - MyWinLocker® (except China, Hong Kong)
- Multimedia
  - Acer Arcade™ Deluxe
  - NTI Media Maker™
- Gaming
  - Oberon GameZone Acer Edition (except US, Canada, Hong Kong, Korea)
  - WildTangent® Acer Edition (US, Canada only)

Downloaded from www.Manualslib.com manuals search engine

- Communication and ISP
  - Microsoft® Silverlight™
  - Windows Live™ Essentials — Wave 3.2 (Mail, Photo Gallery, Live™ Messenger, Movie Maker, Writer)
- Utilities and tools
  - Acer Accessory Store (Belgium, France, Germany, Italy, Netherlands, Spain, Sweden, UK only)
  - Acer Assist
  - Acer Identity Card
  - Acer Registration
  - Acer Updater
  - eBay® shortcut 2009 (Canada, France, Germany, Italy, Mexico, Spain, UK, US only)
  - Netflix shortcut (US only)

Optional Items

- 1 GB / 2 GB DDR3 1066 MHz soDIMM module
- 6-cell Li-ion battery pack
- 3-pin 65 W AC adapter
- External USB floppy disk drive

Warranty

- One-year International Travelers Warranty (ITW)

Environment

- Temperature:
  - Operating: 5°C to 35°C
  - Non-operating: -20°C to 65°C
- Humidity (non-condensing):
  - Operating: 20% to 80%
  - Non-operating: 20% to 80%

Downloaded from www.Manualslib.com manuals search engine

System Block Diagram

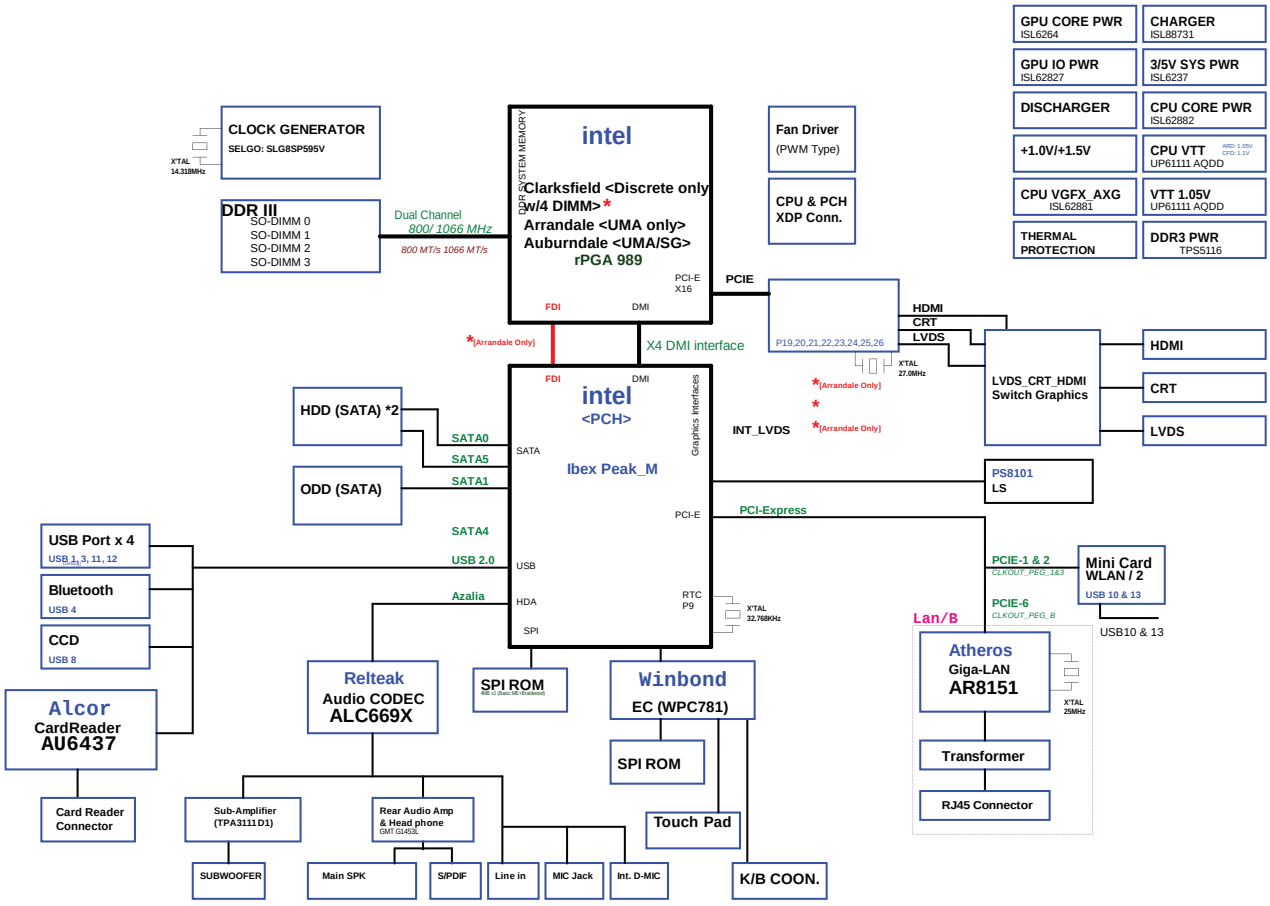

Downloaded from www.Manualslib.com manuals search engine

Notebook Tour

This section provides an overview of the features and functions of the notebook.

Top View

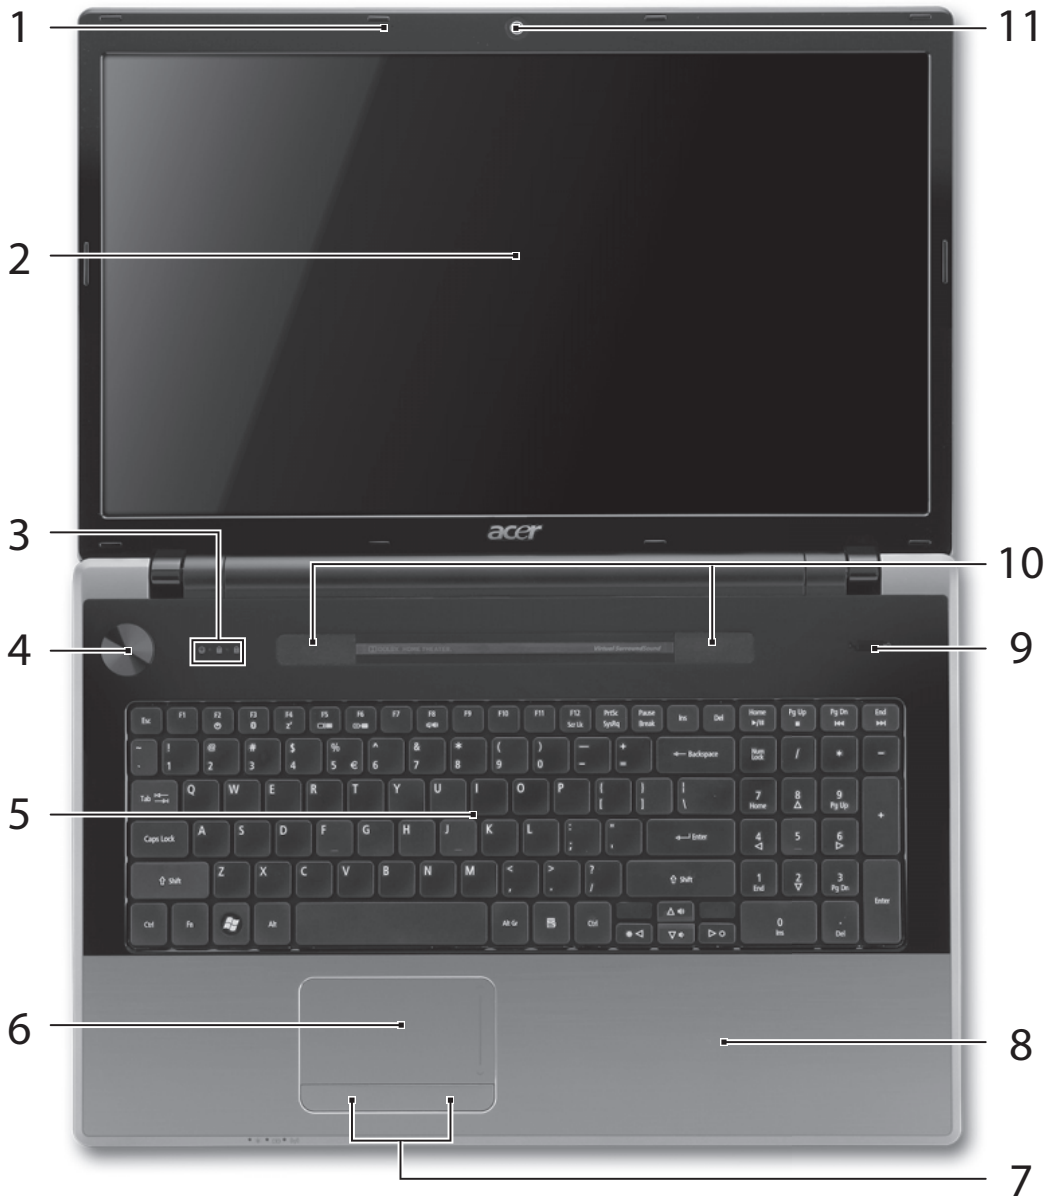

#	Icon	Item	Description
1		Microphone	Internal microphone for recording sound.
2		Display screen	Also called Liquid-Crystal Display (LCD), displays computer output (configuration may vary by model).

Downloaded from www.Manualslib.com manuals search engine

#	Icon	Item	Description
3		HDD indicator	Indicates when the hard disc drive is active.
		Num Lock indicator	Lights up when the Num Lock is activated.
		Caps Lock indicator	Lights up when the Caps Lock is activated.
4		Power button/ Indicator	Turns the computer on and off. Indicates the computer's power status.
5		Keyboard	For entering data into your computer
6		Touchpad	Touch-sensitive pointing device which functions like a computer mouse.
7		Click buttons (left and right)	The left and right buttons function like the left and right mouse buttons.
8		Palmrest	Comfortable support area for your hand when using the computer.
9	P	Acer PowerSmart key	Puts your computer into power-saving mode (configuration may vary by model).
		P key	Programmable key (configuration may vary by model).
10		Speaker	Deliver stereo audio output.
11		Integrated webcam	Web camera for video communication. (only for certain models)

Closed Front View

#	Icon	Item	Description
1		Multi-in-1 card reader	Accepts Secure Digital (SD), MultiMediaCard (MMC), Memory Stick (MS), Memory Stick PRO (MS PRO), xD-Picture Card (xD). Note: Push to remove/install the card. Only one card can operate at any given time.
2		Power	Indicates the computer's power status.
		Battery	Indicates the computer's battery status. 1. Charging: The light shows amber when the battery is charging. 2. Fully charged: The light shows blue when in AC mode.
		Communication indicator	Indicates the computer's wireless connectivity device status.

Downloaded from www.Manualslib.com manuals search engine

Left View

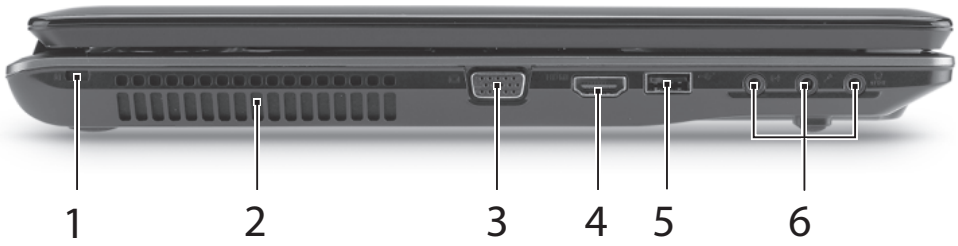

#	Icon	Item	Description
1		Kensington lock slot 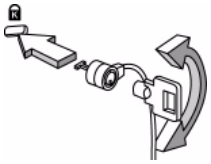	Connects to a Kensington-compatible computer security lock. Note: Wrap the computer security lock cable around an immovable object such as a table or handle of a locked drawer. Insert the lock into the notch and turn the key to secure the lock. Some keyless models are also available.
2		Ventilation slots	Enable the computer to stay cool, even after prolonged use.
3		External display (VGA) port	Connects to a display device (e.g., external monitor, LCD projector).
4		HDMI port	Supports high definition digital video connections.
5		USB 2.0 port	Connects to USB 2.0 devices (e.g., USB mouse, USB camera).
6		Line-in jack	Accepts audio line-in devices (e.g., audio CD player, stereo walkman, mp3 player)
		Microphone jack	Accepts inputs from external microphones.
	SPDIF	Headphones/ speaker/line-out jack with S/PDIF support.	Connects to audio line-out devices (e.g., speakers, headphones).

Right View

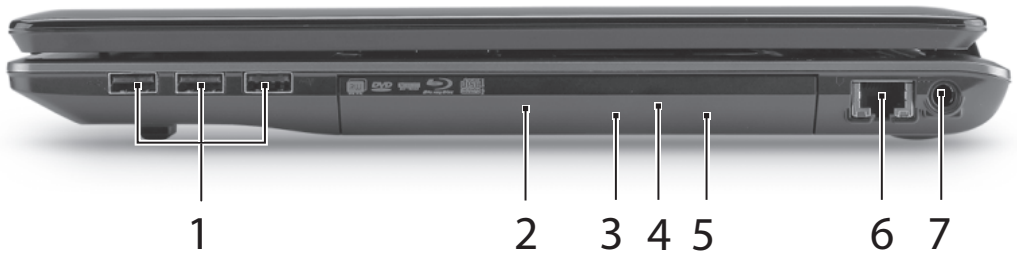

Downloaded from www.Manualslib.com manuals search engine

#	Icon	Item	Description
1		USB 2.0 port	Connects to USB 2.0 devices (e.g., USB mouse, USB camera).
2		Optical drive	Internal optical drive; accepts CDs or DVDs.
3		Optical disk access indicator	Lights up when the optical drive is active.
4		Optical drive eject button	Ejects the optical disc from the drive.
5		Emergency eject hole	Ejects the optical drive tray when the computer is turned off. Note: Insert a paper clip to the emergency eject hole to eject the optical drive tray when the computer is off.
6		Ethernet (RJ-45) port	Connects to an Ethernet 10/100/1000-based network.
7		DC-in jack	Connects to an AC adapter.

Base View

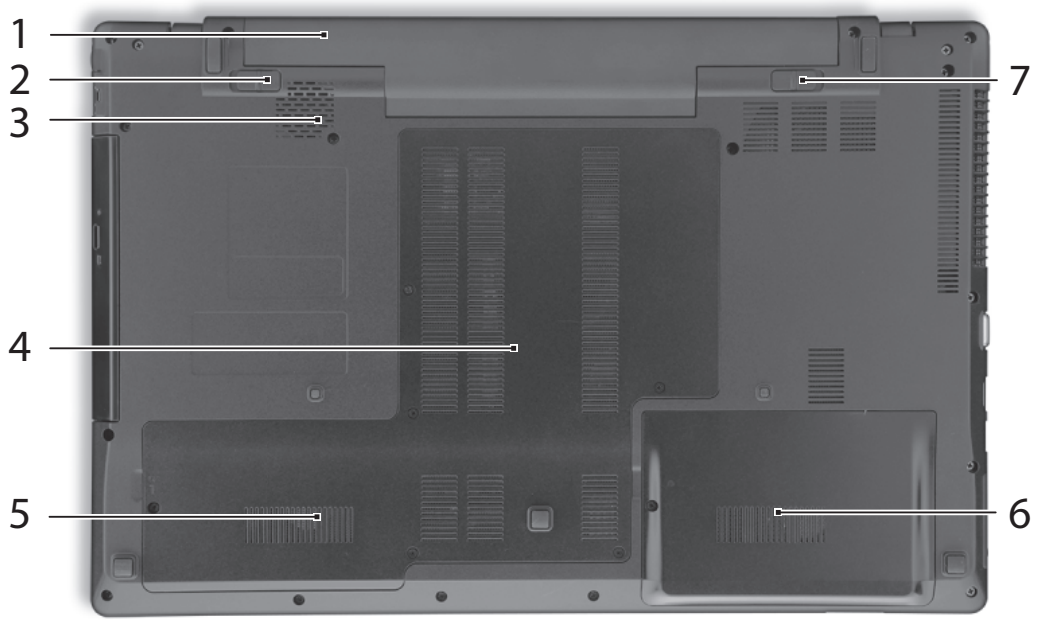

#	Icon	Item	Description
1		Battery bay	Houses the computer's battery pack..
2		Battery lock	Locks the battery in position
3		Sub Woofer	Emits low frequency sound output.
4		Memory compartment	Houses the computer's main memory.

Downloaded from www.Manualslib.com manuals search engine

#	Icon	Item	Description
5		Hard disk bay - Main	Houses the computer’s hard disk (secured with screws)
6		HDD bay - Secondary	Houses the computer's hard disk (secured with screws) (for certain models only).
7		Battery release latch	Releases the battery for removal.

Indicators

The computer has several easy-to-read status indicators. The power, battery and WiFi indicators are visible even when the computer cover is closed.

Icon	Function	Description
	Power	Indicates the computer is on or off.
	Battery	Indicates the computer's battery status.
	Wireless LAN	Indicates the status of Wireless LAN communication.
	HDD	Indicates when the hard disk drive is active.
	Num Lock	Lights up when Num Lock is activated.
	Caps Lock	Lights up when Caps Lock is activated.

NOTE: 1. **Charging:** The battery light shows amber when the battery is charging. 2. **Fully charged:** The light shows green when in AC mode.

Downloaded from www.Manualslib.com manuals search engine

TouchPad Basics

The following items show you how to use the TouchPad:

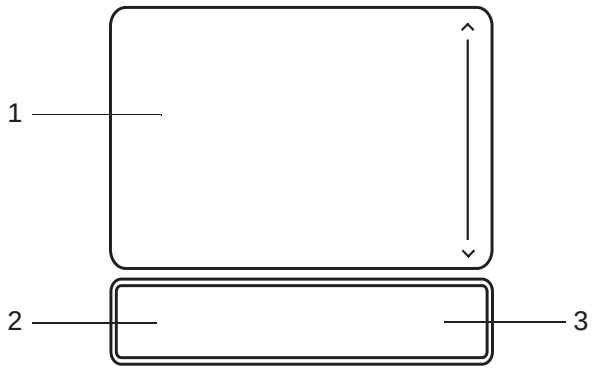

- Move your finger across the TouchPad (1) to move the cursor.
- Press the left (2) and right (3) buttons located beneath the TouchPad to perform selection and execution functions. These two buttons are the equivalent of the left and right buttons on a mouse. Tapping on the TouchPad is the same as clicking the left button.

Function	Left Button (2)	Right Button (3)	Main TouchPad (1)
Execute	Quickly click twice.		Tap twice (at the same speed as double-clicking a mouse button).
Select	Click once.		Tap once.
Drag	Click and hold, then use finger on the TouchPad to drag the cursor.		Tap twice (at the same speed as double-clicking a mouse button); rest your finger on the TouchPad on the second tap and drag the cursor.
Access context menu		Click once.	

NOTE: When using the TouchPad, keep it - and your fingers - dry and clean. The TouchPad is sensitive to finger movement; hence, the lighter the touch, the better the response. Tapping too hard will not increase the TouchPad's responsiveness.

Downloaded from www.Manualslib.com manuals search engine

Using the Keyboard

Your computer has a close-to-full-sized keyboard and an embedded numeric keypad, separate cursor, lock, function and special keys.

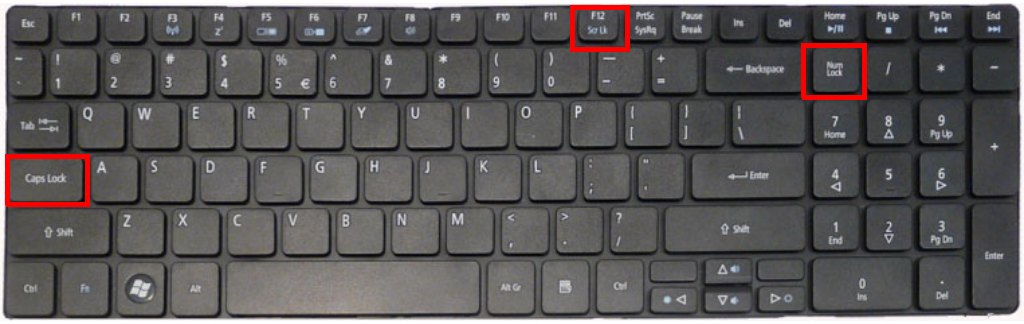

Lock Keys and embedded numeric keypad

The keyboard has three lock keys which you can toggle on and off.

Lock key	Description
Caps Lock	When Caps Lock is on, all alphabetic characters typed are in uppercase.
Num Lock	When Num Lock is on, the embedded keypad is in numeric mode. The keys function as a calculator (complete with the arithmetic operators +, -, *, and /). Use this mode when you need to do a lot of numeric data entry. A better solution would be to connect an external keypad.
Scroll Lock **<Fn> + <F12>**	When Scroll Lock is on, the screen moves one line up or down when you press the up or down arrow keys respectively. Scroll Lock does not work with some applications.

The embedded numeric keypad functions like a desktop numeric keypad. It is indicated by small characters located on the upper right corner of the keycaps. To simplify the keyboard legend, cursor-control key symbols are not printed on the keys.

Desired access	Num Lock on	Num Lock off
Number keys on embedded keypad	Type numbers in a normal manner.	
Cursor-control keys on embedded keypad	Hold <Shift> while using cursor-control keys.	Hold <Fn> while using cursor-control keys.
Main keyboard keys	Hold **<Fn>** while typing letters on embedded keypad.	Type the letters in a normal manner.

Downloaded from www.Manualslib.com manuals search engine

Windows Keys

The keyboard has two keys that perform Windows-specific functions.

Key	Description
Windows key	Pressed alone, this key has the same effect as clicking on the Windows Start button; it launches the Start menu. It can also be used with other keys to provide a variety of functions: **<⊞>:** Open or close the Start menu **<⊞> + <D>:** Display the desktop **<⊞> + <E>:** Open Windows Explore **<⊞> + <F>:** Search for a file or folder **<⊞> + <L>:** Lock your computer (if you are connected to a network domain), or switch users (if you're not connected to a network domain) **<⊞> + <M>:** Minimizes all windows **<⊞> + <R>:** Open the Run dialog box **<⊞> + <U>:** Open Ease of Access Center **<⊞> + <BREAK>:** Display the System Properties dialog box **<⊞> + <TAB>:** Cycle through programs on the taskbar **<CTRL> + <⊞> + <F>:** Search for computers (if you are on a network) **Note:** Depending on your edition of Windows 7, some shortcuts may not function as described.
Application key	This key has the same effect as clicking the right mouse button; it opens the application's context menu.

Downloaded from www.Manualslib.com manuals search engine

Hot Keys

The computer employs hotkeys or key combinations to access most of the computer's controls like screen brightness and volume output.

To activate hotkeys, press and hold the **<Fn>** key before pressing the other key in the hotkey combination.

Hotkey	Icon	Function	Description
<Fn> + <F3>		Wireless communication switch	Enables/disables the Wireless function.
<Fn> + <F4>		Sleep	Puts the computer in Sleep mode.
<Fn> + <F5>		Display toggle	Switches display output between the display screen, external monitor (if connected) and both.
<Fn> + <F6>		Screen blank	Turns the display screen backlight off to save power. Press any key to return.
<Fn> + <F7>		Touchpad toggle	Turns the touchpad on and off.
<Fn> + <F8>		Speaker toggle	Turns the speakers on and off.
<Fn> + <▷>		Brightness up	Increases the screen brightness.
<Fn> + <◁>		Brightness down	Decreases the screen brightness.
<Fn> + <△>		Volume up	Increases the sound volume.
<Fn> + <▽>		Volume down	Decreases the sound volume.
<Fn> + <Home>		Play/Pause	Plays or pauses media files
<Fn> + <Pg Up>		Stop	Stops media file
<Fn> + <Pg Dn>		Previous	Plays the previous media file in the play sequence
<Fn> + <End>		Next	Plays the next media file in the play sequence

Downloaded from www.Manualslib.com manuals search engine

Special Keys

On models that support the Euro symbol and the US dollar sign, the symbols can be located at the upper-center and/or bottom-right of your keyboard.

The Euro symbol

1. Open a text editor or word processor.
2. Hold <Alt Gr> and then press the <5> key at the upper-center of the keyboard.

NOTE: Some fonts and software do not support the Euro symbol. See **www.microsoft.com/typography/faq/faq12.htm** for more information.

The US dollar sign

1. Open a text editor or word processor.
2. Hold **<Shift>** and then press the **<4>** key at the upper-center of the keyboard.

NOTE: This function varies according to the language settings.

Downloaded from www.Manualslib.com manuals search engine

Hardware Specifications and Configurations

Processor

Item	Specification
CPU	• Intel Calpella (Discrete/UMA: Arrandale with Gfx) • Intel PCH: HM55 (4MB SPI ROM)
Type	• MCP (Multi-Chip Package) CPU
CPU Package	989 pins-rPGA socket
Power	65 Watts
On-die Cache	• 32-KB instruction and 32 -KB data first-level cache (L1) for each core • 256-KB shared instruction/data second -level cache (L2) for each core • Up to 8-MB shared instruction/data last -level cache (L3), shared among all cores
Front Side Bus	800/1066M/1333Hz

Processor Specifications

Item	CPU Speed	Cores	Bus Speed	Cache Size	Package	Core Voltage	Acer P/N
Ci3330M	2.13	2	330 M	3 MB	PGA988	35W	KC.33001.DMP
Ci3350M	2.26	2	350 M	3 MB	PGA988	35W	KC.35001.DMP
Ci3350M	2.26	2	350 M	3 MB	PGA988	35W	KC.35K01.DMP
Ci3370M	2.4	2	370 M	3 MB	PGA988	35W	KC.37K01.DMP
Ci5430M	2.26	2	430 M	3 MB	PGA988	35W	KC.43001.DMP
Ci5450M	2.4	2	450 M	3 MB	PGA988	35 W	KC.45K01.DMP
Ci5520M	2.24	2	520 M	3 MB	PGA988P	35W	KC.52001.DMP
Ci5540M	2.53	2	540 M	3 MB	PGA988	35W	KC.54001.DMP
Ci7620M	2.66	2	620 M	4 MB	PGA988	35W	KC.62001.QMP
Ci7720QM	1.6	4	720 M	6 MB	PGA988	45W	KC.72001.QMP
Ci7820QM	1.73	4	820 M	8 MB	PGA988	45W	KC.82001.QMP
PMDP6000	1.86	2		3 MB	PGA988	35W	KC.60001.DPP

CPU Fan True Value Table (TJ100-CPU)

CPU Temperature (Celsius)	Fan Speed (RPM)	SPL Spec (dBA)
45	2700	31
53	3000	34
65	3350	37
85	3650	40
91	3750	41

Throttling 50%: On= 95°C; OFF=93°C

OS shut down at 105°C; H/W shut down at 110°C

Downloaded from www.Manualslib.com manuals search engine

CPU Fan True Value Table (TJ90-CPU)

CPU Temperature (Celsius)	Fan Speed (RPM)	SPL Spec (dBA)
45	2700	31
53	3000	34
65	3350	38
80	3650	40
86		

Throttling 50%: On= 87°C; OFF=84°C

OS shut down at 105°C; H/W shut down at 110°C

Power and Keyboard Controller

Item	Specification
Keyboard Controller	ACER AC7T_A10B AC7T Internal 17
Total number of keypads	103/104/107
Windows logo key	Yes
Hotkeys	Supports application keys for Windows 7 version

Media Card Reader

Item	Specification
Chipset	AU6437-GBL -GR
Package	LQFP
Features	• Fully compatible with USB2.0 High Speed and backward compatible with USB1.1 specifications • Supports multiple flash card interfaces, including SD/ MMC/xD/MS. • Supports single LUN • Supports both Windows and Mac OS

Camera 1.3M

Item	Specifications		
Vendor and model	SUYIN HF1315-S32B-OV0	Chicony CNF9157	Liteon 09P2BF127 / Liteon 09P2SF119
Type	CMOS image sensor with SXGA		
Interface	USB Port 2.0		
Focusing distance	70cm	70 cm	60 cm
Dimensions (L x W x H mm)	65 x 8.0 x 3.74 mm	65.0±0.3 X 8.0±0.1 X 3.69+0.11/-0.2 mm	65.0 x 8.0 x 3.53 ± 0.2mm
Sensor type	OV9665		
Pixel resolution	1280x1024		
Pixel size	2 µm x 2 µm		
Image size	3.89mm(H) X 2.43mm(V)		

Downloaded from www.Manualslib.com manuals search engine

Core Logic Specifications

Item	Specification
Chipset	Intel Ibex-Peak (HM55)
Package	1071-pins FCBGA 27mm x 25mm

Features	• PCI Express* Base Specification, Revision 2.0 support for up to eight ports.
	• PCI Local Bus Specification, Revision 2.3 support for 33 MHz PCI operations (supports up to four Req/Gnt pairs).
	• ACPI Power Management Logic Support, Revision 3.0b
	• Enhanced DMA controller, interrupt controller, and timer functions
	• Integrated Serial ATA host controllers with independent DMA operation on up to six ports.
	• FIS-based Port Multiplier support on SATA Ports 4 and 5 in AHCI/RAID mode.
	• USB host interface with support for up to twelve USB ports; two EHCI high -speed USB 2.0 Host controllers, 2 rate matching hubs, six UHCI host controllers;
	• System Management Bus (SMBus) Specification, Version 2.0 with additional support for I2C devices
	• Supports Intel® High Definition Audio
	• Supports Intel® Matrix Storage Technology
	• Supports Intel® Active Management Technology
	• Supports Intel® Virtualization Technology for Directed I/O
	• Supports Intel® Trusted Execution Technology
	• Supports buffered through mode generating extra clocks from a clock chip.
	• Analog and Digital Display ports
	  • Analog CRT
	  • HDMI
	  • DisplayPort 1.1 (dGPU only)
	  • LVDS
	• Low Pin Count (LPC) interface
	• Serial Peripheral Interface (SPI) support
	• Intel® Anti-Theft Technology
	• JTAG Boundary Scan support

System Memory

Item	Specification
Memory size	0MB (No on-board Memory)
DIMM socket number	2 sockets
Supports memory size per socket	4GB
Supports maximum memory size	8GB
Supports DIMM type	DDR3 64 bit
Supports DIMM Speed	1066/1333 MHz

Downloaded from www.Manualslib.com manuals search engine

Video Specifications

Item	Specification	
Chipset	VGA chip Build-in Intel Graphics Media Accelerator HD (UMA)	AMD Madison-Pro*
Type	Arrandale HM55 PCH	
Package	1071P FCBGA 27mm x 27mm	• 962-pins FCBGA 29mm x 29mm

Features	• The integrated graphics controller contains a refresh of the 5th generation graphics core.
	• Intel® Dynamic Video Memory Technology support
	• Intel® Smart 2D Display Technology (Intel® S2DDT)
	• Intel® Clear Video Technology
	  • MPEG2 Hardware Acceleration
	  • WMV9/VC1 Hardware Acceleration
	  • AVC Hardware Acceleration
	  • ProcAmp
	  • Advanced Pixel Adaptive De-interlacing
	  • Sharpness Enhancement
	  • De-noise Filter
	  • High Quality Scaling
	  • Film Mode Detection (3:2 pull -down) and Correction
	  • Intel® TV Wizard
	• Microsoft DirectX*11 support
	• Analog CRT DAC Interface Support (300MHz DAC/up to QXGA/Hot -Plug)
	• Dual-Channel LVDS interface support 2x24 bpp panels
		• Fully compliant with PCI Express Base Specification Rev. 2.1
		• Support CRT/LVDS/HDMI/DP interface (concurrent)
		• Dual-channel LVDS interface support: single channel 24 bpp dual link
		• HDCP compliance embed-in
		• Full POWERPLAYTM 8.0 support
		• LVDS / Engine and Memory / DP Spread Spectrum Support
		• H.264 implementation is based on the ISO/IEC 14496-10 specification.
		• VC-1 implementation is based on the SMPTE 421M specification.
		• MPEG2 implementation is based on the ISO 13818 -2
		• Supports top quality DVD and Blu - Ray disc with the lowest CPU usage.
		• VDDC (GPU core power supply)
		• VDDCI (GPU I/O power supply)
		• 1V (DP PLL power supply)
		• 1.5V (VRAM and memory control power supply)
		• 1.8V (CRT DAC and LVDS power supply)
		• 3V (Peripheral power supply)

VRAM

Item	Specification
Chipset	Arrandale HM55 PCH
Memory size	• 512 MB • 1 GB
Interface	DDR3

Downloaded from www.Manualslib.com manuals search engine

Hard Disk Drive Interface

Item	Specification			
Vendor & Model Name	Seagate	HGST	Toshiba	Western Digital
Capacity (GB)	160, 250, 320, 500	160, 250, 320, 500	160, 250, 320, 500	160, 250, 320, 500, 640
Bytes per sector	512			
Data heads	4,3,2,2	2,2,3,3	1,3,2,3	1,2,2,4,4
Drive Format				
Disks	1,1,1,2,2	1,1,2,2	1,2,1,2	1,1,1,2,2
Spindle speed (RPM)	5400			
Performance Specifications				
Buffer size	8 MB			
Interface	SATA			
DC Power Requirements				
Voltage tolerance	5V ±5%			

BIOS

Item	Specification
BIOS vendor	Phoenix
BIOS version	Release 4.0
BIOS ROM type	Flash
Features	• Flash ROM 4MB • Support ISIPP • Support Acer UI • Support multi-boot • Suspend to RAM (S3)/Disk (S4) • Various hot-keys for system control • Support SMBIOS 2.3, PCI2.2. • Refer to Acer BIOS specification. • DMI utility for BIOS serial number configurable/asset tag • Support PXE • Support Y2K solution • Support WinFlash • Wake on LAN from S3 • Wake on LAN form S4 in AC mode • System information

Downloaded from www.Manualslib.com manuals search engine

LCD 17.3”

Item	Specification			
Vendor/model name	AUO/	ChiMei	LG	Samsung
Screen Diagonal (mm)	17.3 inches			
Display resolution (pixels)	1600x3(RGB) x 900			
Pixel Pitch	0.2388X0.2388			
Display Mode	Normally White			
Typical White Luminance (cd/m^2) (also called Brightness)	220 typical			
Contrast Ratio	500 typical	500	600	600
Response Time (Optical Rise Time/Fall Time) msec	8/16	2/8	8/16	8
Luminance Uniformity	1.25 max			
Electrical Interface	LVDS			
Support Color	262K			
Viewing Angle (up/down/right/ left)	15/35/45/45	20/45/45/45	10/30/40/40	15/30/40/40
Temperature Range (°C) Operating Storage (shipping)	 0 to +50 -20 to +60			

Bluetooth Interface

Item	Specification	
Bluetooth Controller	Foxconn BCM2046 BT2.1+EDR Module (T60H928.33)	Foxconn AR3011 BT Module (T77H056.00)
Features	• Fully Qualified Bluetooth v2.1 with Class 2 specification RF output power. • Enhanced Data Rate (EDR) compliant. • Full Piconet and Scatternet operation. • Integrated PIFA Antenna with better RF performance. • USB 2.0 compliant interface. • F/W upgradable via Flash downloads. • Very low power consumption. • Support Coexistence with Intel WCS (Wireless Coexistence System) & AFH (Adaptive Frequency Hopping).	• Single-chip Bluetooth v2.1 + EDR solution • USB 2.0 full-speed device interface with support for Device Firmware Upgrade(DFU) • SPI interface supports external serial flash devices • Two on-chip 1.2V linear voltage regulators • Integrated 32-bit CPU with 32KB data RAM and 256KB program RAM • On-board PLL • On-chip low power oscillator(LPO) • WLAN coexistence interface • Standard USB HCI interface

Downloaded from www.Manualslib.com manuals search engine

Audio Subsystem

Item	Specification
Audio Codec	
Chipset	Realtek ALC669X-GR
Package	Intel Ibex Peak_M mBGA 676
Speaker Amplifier	G1453L
Audio port	
Internal	Azalia
Compatibility	• EAX™ 1.0 & 2.0 compatible • Direct Sound 3D™ compatible • I3DL2 compatible
Sampling rate	• Primary 16/20/24-bit SPDIF-OUT supports 32k/44.1k/48k/ 88.2k/96k/192kHz sample rate • Secondary 16/20/24-bit SPDIF-OUT supports 32k/44.1k/48k/ 88.2k/96k/192kHz sample rate
External	• Mic jack • Headphone jack • Line-in jack

Wireless Module 802.11b/g/Draft-N

Item	Specification
Manufacturer	• Foxconn • Intel
Model	• Atheros HB93 • Atheros HB97 • Broadcomm 43225 • Intel WLAN 112BN.HMWG
Supported Standards	b/g/n

Battery

Item	Specification		
	6 Cell		
Vendor & model name	Simplo	Panasonic	Sanyo
Part name	AS10D73E	As10D5E	AS10D3E
Battery Type	Li-ion		
Pack capacity	4900 mAh	6140 mAh	4300 mAh
Normal voltage	11.1V	10.8V	10.8V
Charge voltage	10.05V	16.8V	9.0V
Fast charge current	1770 mA	1770 mA	3520 mA
Package configuration	3S2P		

Downloaded from www.Manualslib.com manuals search engine

LAN Interface

Item	Specification
LAN Chipset	Atheros AR8151L
Package	48-pin QFN
Features	• IEEE 802.3x compliant flow control support • IPv4 and IPv6 support • 802.3u support • IEEE 802.1Q VLAN feature • Supports remote wake-up (including AMD Magic packet and MS Wake-up frame) in both ACPI and APM Device and Technology Features • Embedded switching regulator • Supports 25 MHz external shared-clock source • 256 byte memory (using eFuse) embedded on-chip • Small footprint 40-pin QFN (5 x 5 mm) package with dramatically improved thermal and electrical characteristics over LQFP packaging • Co-layout with other Atheros 40-pin QFN 10/100 LOM Ethernet solution. • Integrated PHY for 10/100/1000 Mbps • IEEE 802.3 Auto-Negotiation support • IEEE 802.3ab PHY compliance and compatibility • Supports automatic MDI/MDIX functions • Supports +/- 100 ppm clock offset • IEEE 802.3az support Host Offloading Features • IP, TCP, and UDP checksum offload capabilities • Transmit TCP segmentation • IPv6 offload • IEEE 802.1Q VLAN support • Wake on LAN support • Green Ethernet feature support • Supports Energy Star 5.0 • PCI Express base 1.1 compliant • Supports single, one-lane PCIE connection

Downloaded from www.Manualslib.com manuals search engine

Memory Combinations

Slot 1	Slot 2	Total Memory
0MB	512MB	512MB
0MB	1024MB	1024MB
0MB	2048MB	2048MB
512MB	512MB	1024MB
512MB	1024MB	1536MB
512MB	2048MB	2560MB
1024MB	0MB	1024MB
1024MB	512MB	1536MB
1024MB	1024MB	2048MB
1024MB	2048MB	3072MB
2048MB	0MB	2048MB
2048MB	512MB	2560MB
2048MB	1024MB	3072MB
2048MB	2048MB	4096MB

NOTE: Above table lists some system memory configurations. You may combine DIMMs with various capacities to form other combinations. On above table, the configuration of slot 1 and slot 2 could be reversed.

3G Module

Item	Specification
Manufacturer	Ericsson
Model	F3307
Card Type	PCI Express Full-Mini Card type F2
Supported Services	GSM: Packet-Switched data GPRS/EDGE, SMS, UMTS: Packet-Switched data, HSPA, SMS

USB Port

Item	Specification
Chipset	HM55
USB compliance level	2.0
OHCI	USB 1.1 and USB 2.0 host controller
Number of USB port(s)	4
Location	One on the left side, three on the right side

HDMI Port

Item	Specification
Compliance level	1.3
Thoroughput	2.5Gbps
Number of HDMI port(s)	1
Location	One on the left side

Downloaded from www.Manualslib.com manuals search engine

Super-Multi Drive Module

Item	Specification				
Vendor & model name	HLDS GT30N		PANASONIC UJ240A		
Performance Specification	With CD Diskette	With DVD Diskette	With CD Diskette	With DVD Diskette	With BD Diskette
Transfer rate (MB/sec)	Sustained: 3,600 KB/s (24x) max.	Sustained: 11.08 Mbytes/s (8x) max.	Sustained: 3,600 kB/s (24x) max.	Sustained: 11.08 Mbytes/s (8x) max.	Sustained: 215.79 Mbits/s (6x) max.
Buffer Memory	1 MB		2 MB		
Interface	SATA				
Applicable disc formats	DVD-ROM, DVD-R (Ver.1.0, Ver. 2.0 for Authoring) DVD-R (Ver. 2.1 for General), DVD-R DL (Dual Layer), DVD-RW, DVD-RAM (Ver.2.2), DVD+R, DVD+R DL (Double Layer), and +RW CD-ROM, CD-ROM XA, CD-I, Video CD, CD-Extra and CD-Text Photo CD (Single and Multi session) CD-DA Super Audio CD (Compatible layer in Hybrid type) CD-R discs conforming to “Orange Book Part 2” CD-RW discs conforming to “Orange Book Part 3” CPRM (DVD-R/RW/RAM) supported		DVD-ROM, BD-ROM (SL/DL), BD-R (SL/DL) and BD-RE (SL/DL) DVD-R (SL/DL), DVD-RW (SL), DVD-RAM, DVD+R (SL/DL) and +RW CD-ROM, CD-ROM XA, CD-I, Video CD, CD-Extra and CD-Text Photo CD (Single and Multi session) CD-DA CD-R discs conforming to “Orange Book Part 2” CD-RW discs conforming to “Orange Book Part 3” DVD-R(SL/DL) / -RW / RAM with CPRM “CD layer” of Super Audio CD Hybrid type		
Loading mechanism	Drawer (Solenoid Open) Tact SW (Open) Emergency Release (draw open hole)				
Power Requirement					
Input Voltage	DC 5 V +/- 5%				

PCMCIA Port (Not available with this model)

Item	Specification
PCMCIA controller	
Supports card type	
Number of slots	
Access location	
Supports ZV (Zoomed Video) port	
Supports 32-bit CardBus	

Downloaded from www.Manualslib.com manuals search engine

System Board Major Chips

Item	Specification
Core logic	• Intel Calpella (Discrete/UMA: Arrandale with Gfx) • Intel PCH: HM55 (4MB SPI ROM)
VGA	Arrandale HM55 PCH
LAN	Atheros AR8151L
USB (version)	Intel Ibex Peak M (2.0)
Super I/O controller	NPCE781
Bluetooth	• Foxconn BCM2046 • Foxconn AR3011
Wireless (type=802.11 b+g)	• Atheros HB93 • Atheros HB97 • Broadcomm 43225 • Intel WLAN 112BN.HMWG
PCMCIA	N/A
Audio codec	Realtek ALC669X
Card reader	AU6437-GBL -GR

I/O Ports

Item	Specification
I/O support	• Multi-in-1 card reader (SD™, MMC, MS, MS PRO, xD) • Four USB 2.0 ports • External display (VGA) port • HDMI™ port with HDCP support • Headphone/speaker/line-out jack with S/PDIF support • Microphone-in jack • Ethernet (RJ-45) port • Modem (RJ-11) port • DC-in jack for AC adapter

LCD Inverter (Not available with this model)

Item	Specification
Vendor & model name	
Brightness conditions	
Input voltage (v)	
Input current (mA)	
Output voltage (V, RMS)	
Output current (mA, RMS)	
Output voltage frequency (KHz)	

Downloaded from www.Manualslib.com manuals search engine

LCD Display Supported Resolution

Resolution	24 bits	30 bits	36 bits	48 bits
640x480p/60Hz 4:3	v	v	v	v
720x480p/60Hz 4:3	v	v	v	v
720x480p/60Hz 16:9	v	v	v	v
1280x720p/60Hz 16:9	v	v	v	v
1920x1080i/60Hz 16:9	x	x	x	x
1440x480i/60Hz 4:3	v	v	v	v
1440x480i/60Hz 16:9	v	v	v	v
1920x1080p/60Hz 16:9	x	x	x	x
720x576p/50Hz 4:3	v	v	v	v
720x576p/50Hz 16:9	v	v	v	v
1280x720p/50Hz 16:9	v	v	v	v
1920x1080i/50Hz 16:9	x	x	x	x
1440x576i/50Hz 4:3	v	v	v	v
1440x576i/50Hz 16:9	v	v	v	v
1920x1080p/50Hz 16:9	x	x	x	x

AC Adapter

Item	Specification
Input rating	40W
Maximum input AC current	1.2A at 100V
Inrush current	12t at 264V
Efficiency	Refer to EPA 2.0

System LED Indicator

Item	Specification
Power	Power on = Blue Suspend = Orange
Battery Charging	In charge = Orange Charge finish = Blue
Wireless	On = Blue
Backup	On = Blue
Power save	On = Blue

Downloaded from www.Manualslib.com manuals search engine

Power Specification

Item	Specification					
	Initial	On	Stand by	Suspend	Hibernate	Soft Off
Initial		1				
ON (S0)			2	3	4	5
Standby (S1)		6				
Suspend (S3)		7				
Hibernate (S4)		8				
Soft Off (S5)		9				

*Mechanical off is a condition where all power except the RTC battery has been removed from the system.

1. Initial to On state: When the AC adapter or Battery pack has been plugged into the system, the I WPC781 will be reset and initial all output pins then the system goes into Initial state and waiting for power on event. If the power button is pressed then the system will go into the ON state.

2. ON to Standby state: The system will go into the Standby state when HM55 receives the POS command.

3. ON to Suspend state: The system will go into Suspend state when HM55 receives the S2R command.

4. ON to Hibernate state: The system will go into Hibernate state when HM55 receives the S2D command.

5. ON to Soft Off state: The system will go into Soft Off state when HM55 receives the Soft off command.

6. Standby to ON state: The system will go into ON state when the system receives any wake up events, for example, keyboard, mouse.

7. Suspend to ON state: The system will go into ON state when the power button is pressed.

8. Hibernate to ON state: The system will go into ON state when the power button is pressed.

9. Soft Off to ON state: The system will go into ON state when the power button is pressed.

Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine

System Utilities

BIOS Setup Utility

The BIOS Setup Utility is a hardware configuration program built into your computer's BIOS (Basic Input/ Output System).

Your computer is already properly configured and optimized, and you do not need to run this utility. However, if you encounter configuration problems, you may need to run Setup. Please also refer to Chapter 4 Troubleshooting when problem arises.

To activate the BIOS Utility, press **F2** during POST (when **Press <F2> to enter Setup** message is prompted on the bottom of screen).

Press **F2** to enter setup. The default parameter of F12 Boot Menu is set to "disabled". If you want to change boot device without entering BIOS Setup Utility, please set the parameter to "enabled".

Press **<F12>** during POST to enter multi-boot menu. In this menu, user can change boot device without entering BIOS SETUP Utility.

Navigating the BIOS Utility

There are five menu options: Information, Main, Security, Boot, and Exit.

Follow these instructions:

- To choose a menu, use the left and right arrow keys.
- To choose an item, use the up and down arrow keys.
- To change the value of a parameter, press **F5** or **F6**.
- Press **Esc** while you are in any of the menu options to go to the Exit menu.
- In any menu, you can load default settings by pressing **F9**. You can also press **F10** to save any changes made and exit the BIOS Setup Utility.

NOTE: You can change the value of a parameter if it is enclosed in square brackets. Navigation keys for a particular menu are shown on the bottom of the screen. Help for parameters are found in the Item Specific Help part of the screen. Read this carefully when making changes to parameter values. **Please note that system information is subject to different models**.

Downloaded from www.Manualslib.com manuals search engine

Information

The Information screen displays a summary of your computer hardware information.

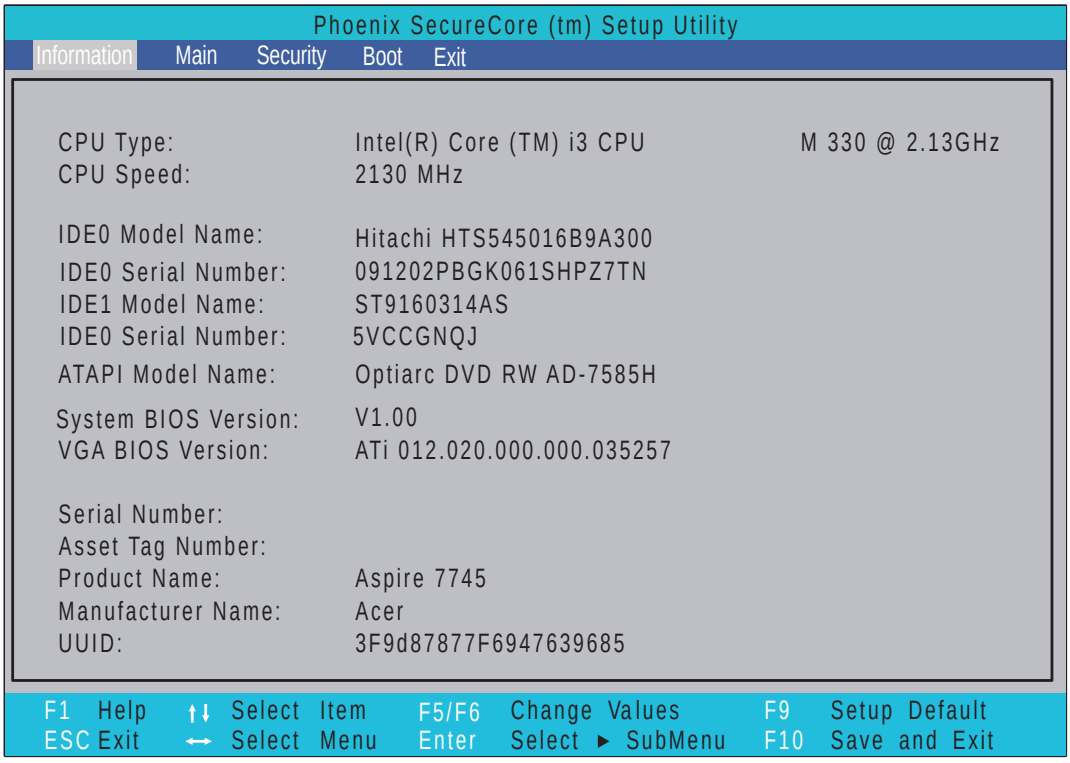

NOTE: The system information is subject to different models.

Parameter	Description
CPU Type	This field shows the CPU type and speed of the system.
CPU Speed	This field shows the speed of the CPU.
IDE0 Model Name	This field shows the model name of HDD installed on primary IDE master.
IDE0 Serial Number	This field displays the serial number of HDD installed on primary IDE master.
IDE1 Serial Number	This field shows the model name of the device installed on secondary IDE master.
IDE1 Serial Number	This field displays the serial number of the device installed on secondary IDE master.
ATAPI Model Name	This field displays the model name of the installed ODD drive.
System BIOS Version	Displays system BIOS version.
VGA BIOS Version	This field displays the VGA firmware version of the system.
Serial Number	This field displays the serial number of this unit.
Asset Tag Number	This field displays the asset tag number of the system.
Product Name	This field shows product name of the system.
Manufacturer Name	This field displays the manufacturer of this system.
UUID Number	Universally Unique Identifier (UUID) is an identifier standard used in software construction, standardized by the Open Software Foundation (OSF) as part of the Distributed Computing Environment (DCE).

Downloaded from www.Manualslib.com manuals search engine

Main

The Main screen allows the user to set the system time and date as well as enable and disable boot option and recovery.

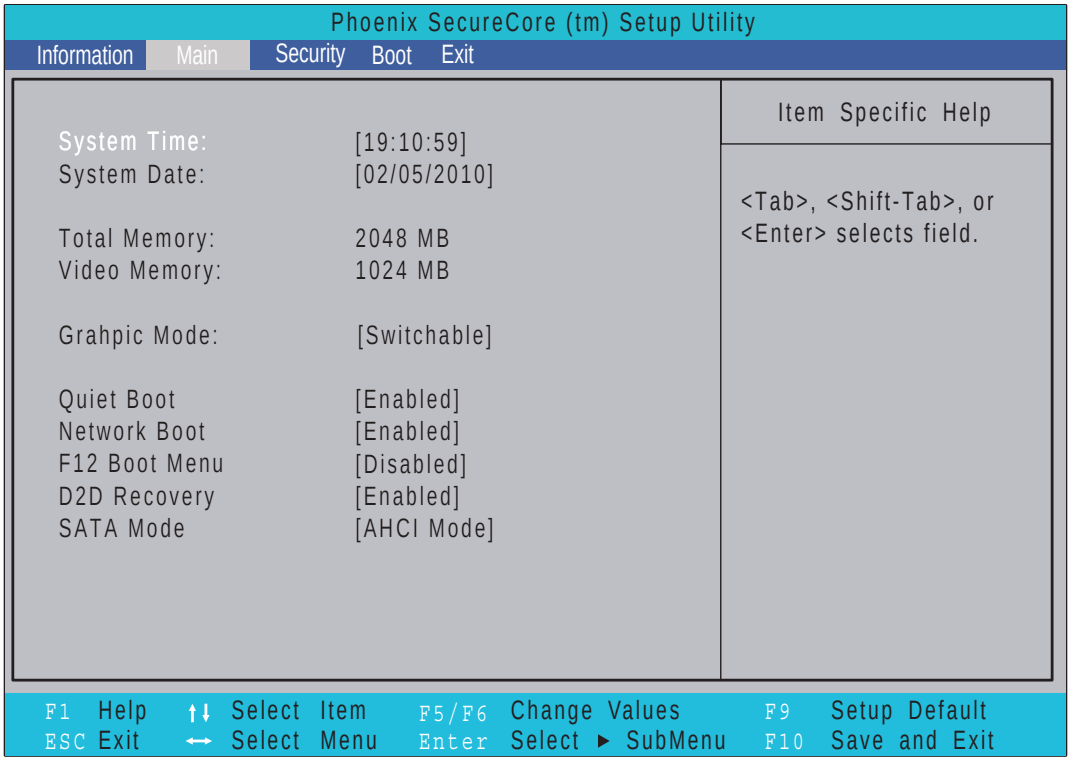

NOTE: The screen above is for your reference only. Actual values may differ.

The table below describes the parameters in this screen. Settings in **boldface** are the default and suggested parameter settings.

Parameter	Description	Format/Option
System Time	Sets the system time. The hours are displayed with 24-hour format.	Format: HH:MM:SS (hour:minute:second)
System Date	Sets the system date.	Format MM/DD/YYYY (month/day/year)
Total Memory	This field reports the memory size of the system.	N/A
Video Memory	Shows the video memory size. VGA Memory size=32 MB	N/A
Graphic Mode	Sets discrete VGA only for systems with XP or Linux OS.	Option: **Switchable** or Discrete
Quiet Boot	This will hide POST messages while booting.	Option: **Enabled** or Disabled
Network Boot	Enables, disables the system boot from LAN (remote server).	Option: **Enabled** or Disabled
F12 Boot Menu	Enables, disables Boot Menu during POST.	Option: **Disabled** or Enabled
D2D Recovery	Enables, disables D2D Recovery function. The function allows the user to create a hidden partition on hard disc drive to store the operation system and restore the system to factory defaults.	Option: **Enabled** or Disabled
SATA Mode	Control the mode in which the SATA controller should operate.	Option: **AHCI mode** or IDE mode

Downloaded from www.Manualslib.com manuals search engine

Security

The Security screen contains parameters that help safeguard and protect your computer from unauthorized use.

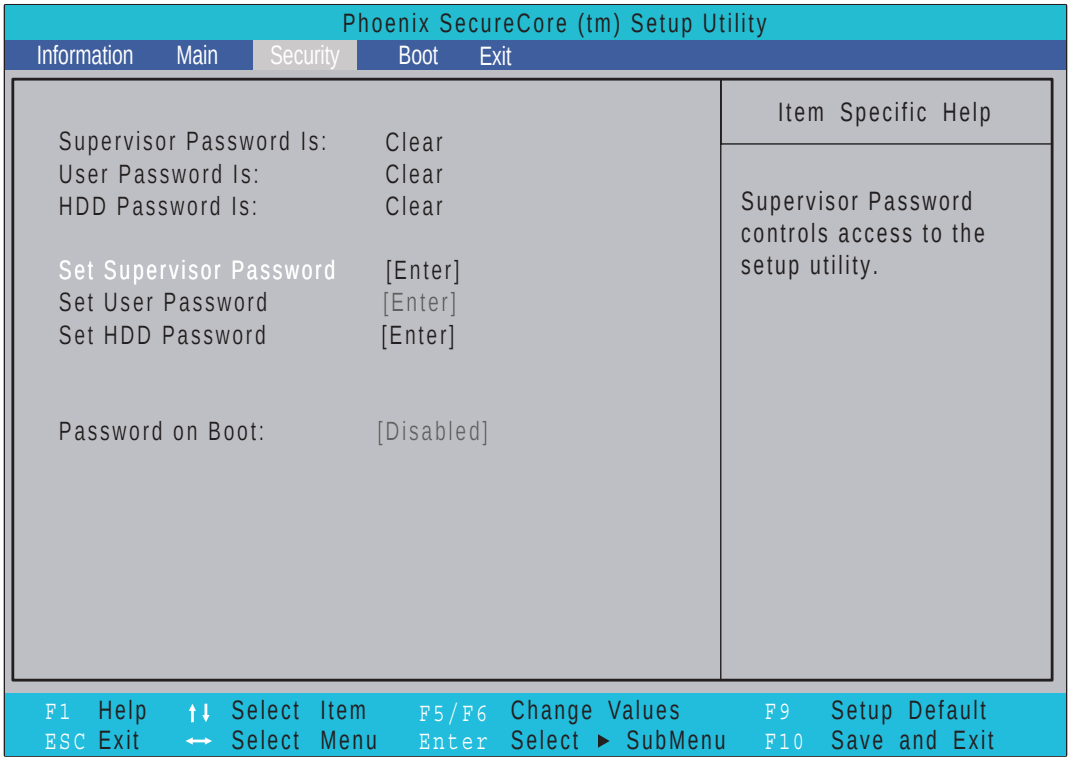

The table below describes the parameters in this screen. Settings in **boldface** are the default and suggested parameter settings.

Parameter	Description	Option
Supervisor Password Is	Shows the setting of the Supervisor password	**Clear** or Set
User Password Is	Shows the setting of the user password.	**Clear** or Set
HDD Password Is	Shows the setting of the HDD password	**Clear** or Set
Set Supervisor Password	Press Enter to set the supervisor password. When set, this password protects the BIOS Setup Utility from unauthorized access. The user can not either enter the Setup menu nor change the value of parameters.	
Set User Password	Press Enter to set the user password. When user password is set, this password protects the BIOS Setup Utility from unauthorized access. The user can enter Setup menu only and does not have right to change the value of parameters.	
Set HDD Password	Press Enter to set the HDD password. When set this protects the HDD from unauthorized access.	
Password on Boot	Defines whether a password is required or not while the events defined in this group happened. The sub-options all require the Supervisor password for changes and should be grayed out if the user password was used to enter setup.	**Disabled** or Enabled

NOTE: When you are prompted to enter a password, you have three tries before the system halts. Don't forget the password. If you forget the password, you may have to reset the computer.

Downloaded from www.Manualslib.com manuals search engine

Setting a Password

Follow these steps as you set the user or the supervisor password:

1. Use the ↑ and ↓ keys to highlight the Set Supervisor Password parameter and press the **Enter** key. The Set Supervisor Password box appears:

2. Type a password in the “Enter New Password” field. The password length can not exceeds 8 alphanumeric characters (A-Z, a-z, 0-9, not case sensitive). Retype the password in the “Confirm New Password” field.

IMPORTANT: Be very careful when typing your password because the characters do not appear on the screen.

3. Press **Enter**. After setting the password, the computer sets the User Password parameter to “Set”.
4. If desired, you can opt to enable the Password on boot parameter.
5. When you are done, press F10 to save the changes and exit the BIOS Setup Utility.

Removing a Password

Follow these steps:

1. Use the ↑ and ↓ keys to highlight the Set Supervisor Password parameter and press the **Enter** key. The Set Password box appears:

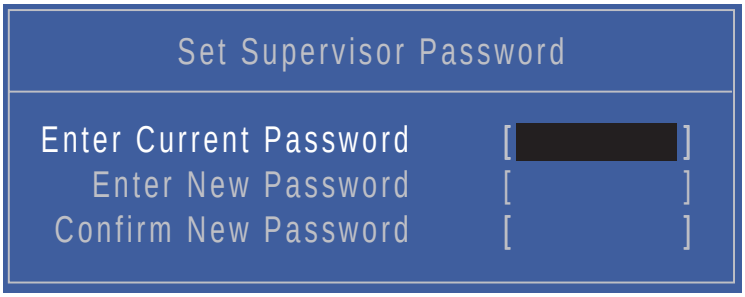

2. Type the current password in the Enter Current Password field and press **Enter**.
3. Press **Enter** twice **without** typing anything in the Enter New Password and Confirm New Password fields. The computer then sets the Supervisor Password parameter to “Clear”.
4. When you have changed the settings, press **F10** to save the changes and exit the BIOS Setup Utility.

Downloaded from www.Manualslib.com manuals search engine

Changing a Password

1. Use the ↑ and ↓ keys to highlight the Set Supervisor Password parameter and press the **Enter** key. The Set Password box appears.

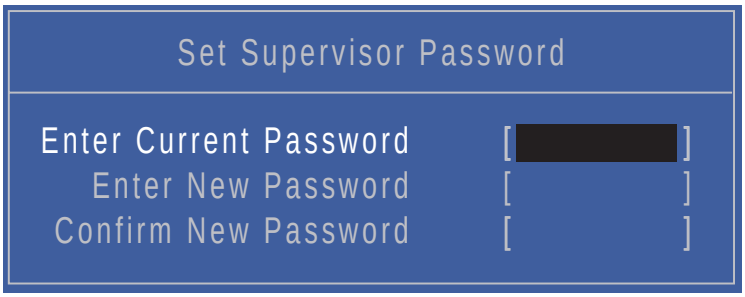

2. Type the current password in the Enter Current Password field and press **Enter**.
3. Type a password in the Enter New Password field. Retype the password in the Confirm New Password field.
4. Press **Enter**. After setting the password, the computer sets the User Password parameter to “Set”.
5. If desired, you can enable the Password on boot parameter.
6. When you are done, press **F10** to save the changes and exit the BIOS Setup Utility.

If the verification is OK, the screen will display as following.

The password setting is complete after the user presses **Enter**.

If the current password entered does not match the actual current password, the screen will show you the Setup Warning.

If the new password and confirm new password strings do not match, the screen displays the following message.

Downloaded from www.Manualslib.com manuals search engine

Boot

This menu allows the user to decide the order of boot devices to load the operating system. Bootable devices includes the USB diskette drives, the onboard hard disk drive and the DVD drive in the module bay.

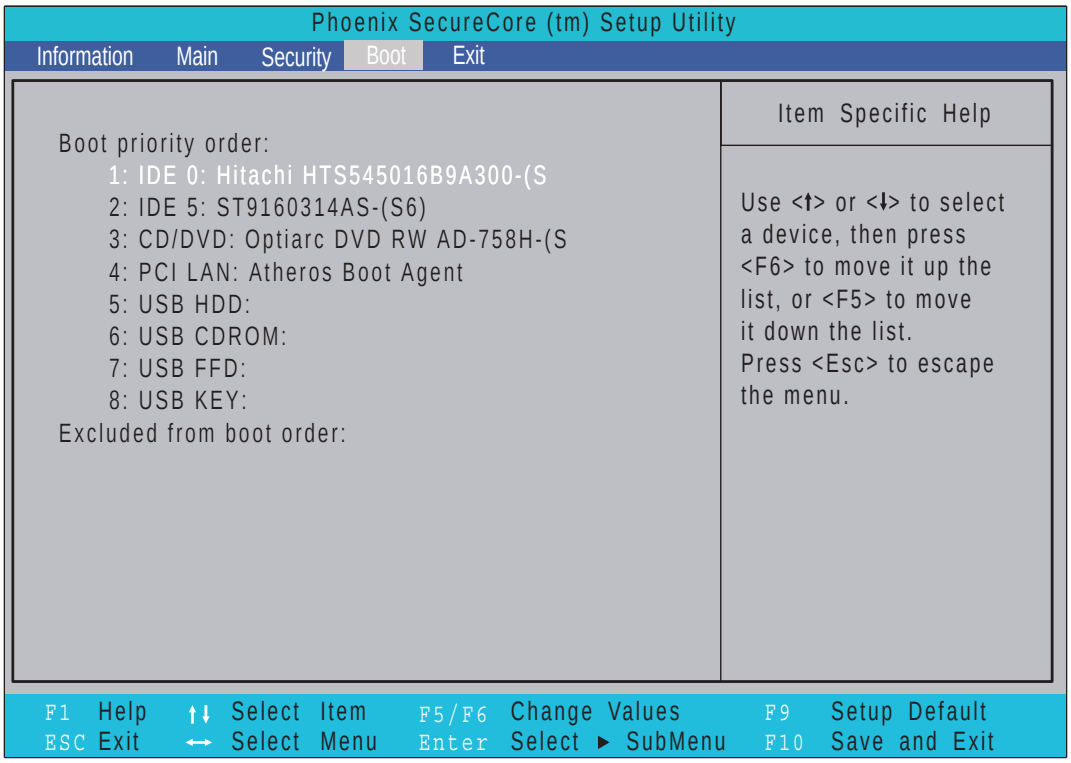
Phoenix SecureCore (tm) Setup Utility
Information
Main
Security
Boot
Exit
Boot priority order:
1: IDE 0: Hitachi HTS545016B9A300-(S
2: IDE 5: ST9160314AS-(S6)
3: CD/DVD: Optiarc DVD RW AD-758H-(S
4: PCI LAN: Atheros Boot Agent
5: USB HDD:
6: USB CDROM:
7: USB FFD:
8: USB KEY:
Excluded from boot order:
Item Specific Help
Use <↑> or <↓> to select a device, then press <F6> to move it up the list, or <F5> to move it down the list.
Press <Esc> to escape the menu.
F1 Help ↑↓ Select Item F5/F6 Change Values F9 Setup Default
ESC Exit ↔ Select Menu Enter Select ▶ SubMenu F10 Save and Exit

Downloaded from www.Manualslib.com manuals search engine

Exit

The Exit screen allows you to save or discard any changes you made and quit the BIOS Utility.

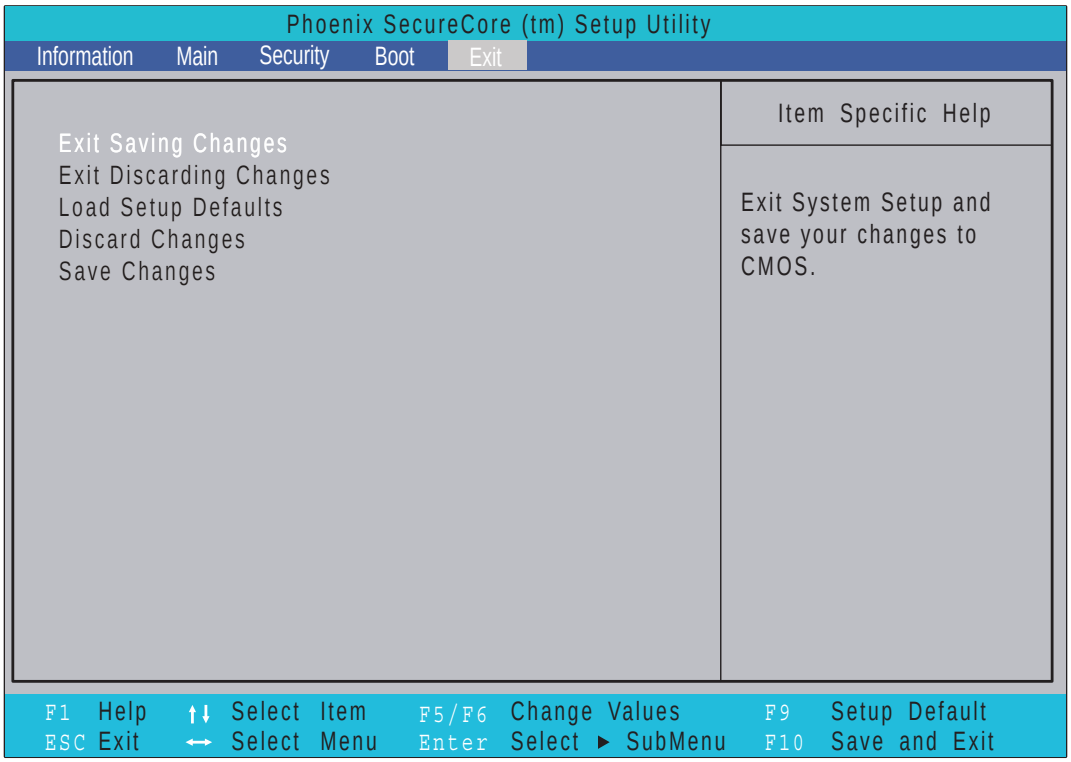

The table below describes the parameters in this screen.

Parameter	Description
Exit Saving Changes	Exit System Setup and save your changes to CMOS.
Exit Discarding Changes	Exit utility without saving setup data to CMOS.
Load Setup Default	Load default values for all SETUP item.
Discard Changes	Load previous values from CMOS for all SETUP items.
Save Changes	Save Setup Data to CMOS.

Downloaded from www.Manualslib.com manuals search engine

BIOS Flash Utility

The BIOS flash memory update is required for the following conditions:

- New versions of system programs
- New features or options
- Restore a BIOS when it becomes corrupted.

DOS Flash Utility

Perform the following steps to use the DOS Flash Utility:

1. Press F2 during boot to enter the Setup Menu.
2. Select **Boot Menu** to modify the boot priority order, for example, if using USB HDD to Update BIOS, move USB HDD to position 1.

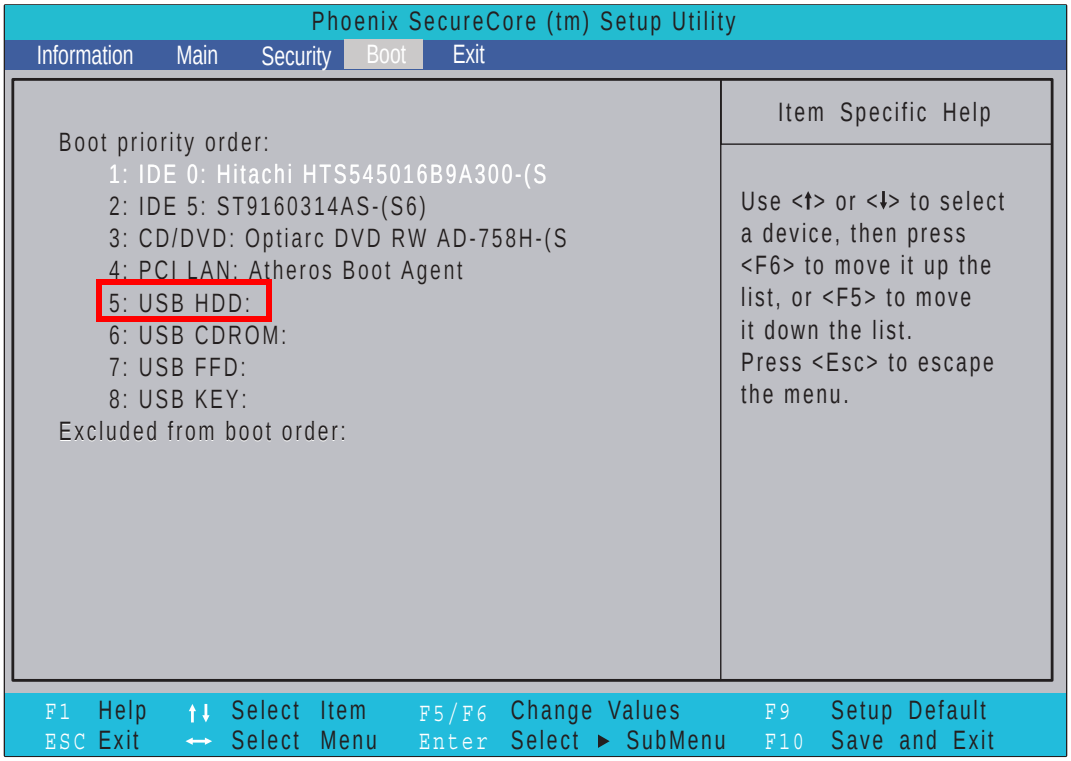
Phoenix SecureCore (tm) Setup Utility
Information
Main
Security
Boot
Exit
Item Specific Help
Boot priority order:
1: IDE 0: Hitachi HTS545016B9A300-(S
2: IDE 5: ST9160314AS-(S6)
3: CD/DVD: Optiarc DVD RW AD-758H-(S
4: PCI LAN: Atheros Boot Agent
5: USB HDD:
6: USB CDROM:
7: USB FFD:
8: USB KEY:
Excluded from boot order:
Use <↑> or <↓> to select a device, then press <F6> to move it up the list, or <F5> to move it down the list.
Press <Esc> to escape the menu.
F1 Help ↑↓ Select Item F5/F6 Change Values F9 Setup Default
ESC Exit ↔ Select Menu Enter Select ▶ SubMenu F10 Save and Exit

3. Execute the **FLASH.BAT** batch file to update BIOS. Or enter C:\ **Flash it bios ver.fd/dc**

The flash process begins as shown.

Insyde Flash Utility for InsydeH20
Version 1.2n
Initializing
File loading 100 %
Current BIOS Model name : JAT10
New BIOS Model name : JAT10
Current BIOS version: V0.21
New BIOS version: V0.23
Updating Block at FFFF9000

Downloaded from www.Manualslib.com manuals search engine

4. In flash BIOS, the message **Please do not remove AC Power Source** displays.

NOTE: If the AC power is not connected, the following message displays.

Plug in the AC power to continue.

5. Flash is complete when the message Flash programming complete displays.

WinFlash Utility

Perform the following steps to use the WinFlash Utility:

1. Double click the WinFlash executable.
2. Click **OK** to begin the update. A progress screen displays.
3. When the process is complete, close all programs and applications and reboot the system.

ction provide you with removing HDD/BIOS method:

Remove HDD Password:

When the user keys in the wrong password three times, the system reports the following error code to user.

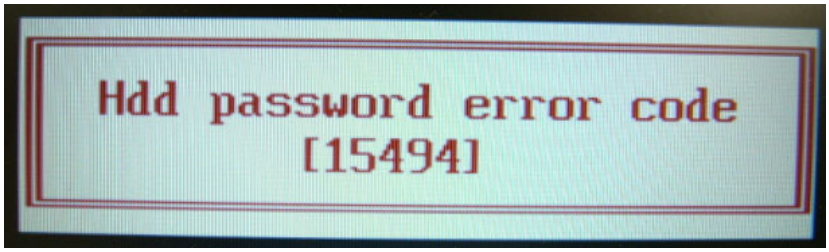

To unlock the HDD password, perform the following steps:

1. Run HDD_PW.EXE.
2. Select 2.
3. Choose one of the following strings :

0KJFN42

UVEIQ96

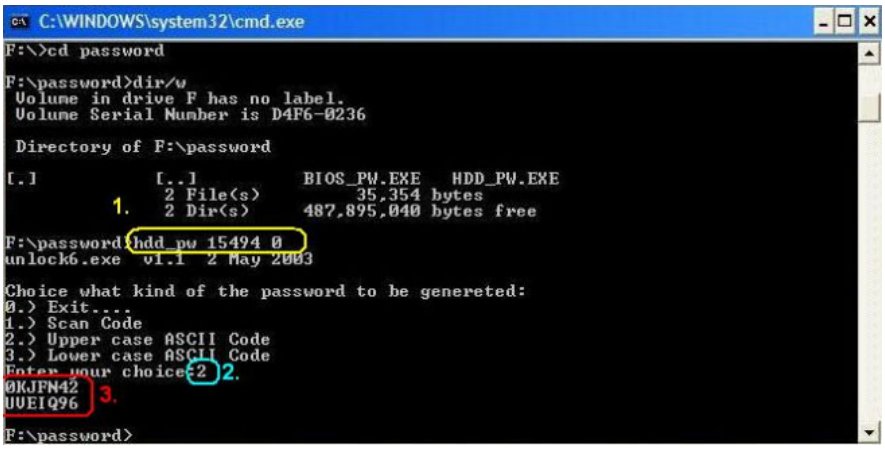

Downloaded from www.Manualslib.com manuals search engine

4. Reboot the system.
5. When prompted for the HDD User Password, enter the password generated in Step 3.

6. Save and exit the BIOS to complete the process.

Downloaded from www.Manualslib.com manuals search engine

Removing BIOS Passwords:

If you key in the wrong Supervisor Password three times, System Disabled displays on the screen. See the image below.

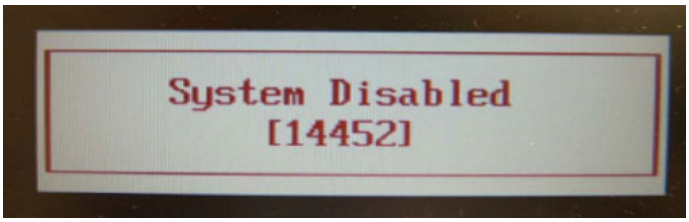

To reset the BIOS password, run **bios_pw.exe** as follows:

1. Enter “bios_pw 14452 0”
2. Choose one of the following strings:

   qjjg9vy

   07yqmjd

   cjl14tm

   6mbzjaj

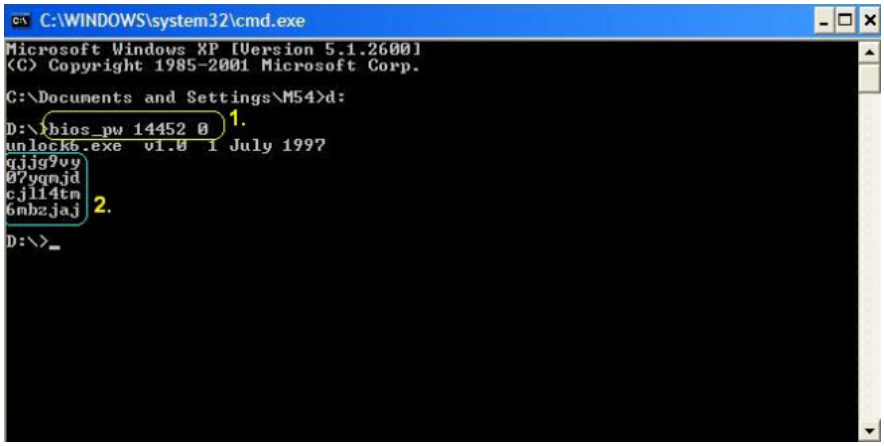

3. Reboot the system.
4. When prompted for the BIOS user password, enter the password generated in Step 2.

5. Save and exit the BIOS to complete the process.

Downloaded from www.Manualslib.com manuals search engine

Miscellaneous Utilities

Using Boot Sequence Selector

Boot Sequence Selector allows the boot order to be changes without accessing the BIOS. To use Boot Sequence Selector, perform the following steps:

1. Enter into DOS.
2. Execute BS.exe to display the usage screen.

d:\BOOTSEQ>bs
*** Boot Sequence Selecter Version 0.03 ***
Create by Rockwell Chuang 10/01/2005.
Usage:
BS [1 | 2 | 3 | 4]
BS 1 : [Floppy] => [HardDisk] => [CD-ROM] => [LAN]
BS 2 : [HardDisk] => [CD-ROM] => [LAN] => [Floppy]
BS 3 : [CD-ROM] => [HardDisk] => [LAN] => [Floppy]
BS 4 : [LAN] => [Floppy] => [HardDisk] => [CD-ROM]
d:\BOOTSEQ>

3. Select the desired boot sequence by entering the corresponding sequence, for example, enter BS2 to change the boot sequence to HDD|CD ROM|LAN|Floppy.

Using DMITools

The DMI (Desktop Management Interface) Tool copies BIOS information to eeprom to be used in the DMI pool for hardware management.

When the BIOS displays **Verifying DMI pool data** it is checking the table correlates with the hardware before sending to the operating system (Windows, etc.).

To update the DMI Pool, perform the following steps:

1. Enter into DOS.
2. Execute **qdmi30a.exe**. The following messages show dmitools usage:

!!! WARNING !!!
This utility can be used by service people only!
The incorrect value may cause service problem!
Copyright 2004 Quanta Computer Inc..
Version: 3.00a
If you want to use SPACE character in your string,
please use '^' to replace it.
Please select function:
1: AssetTag
2: Product Name
3: Serial Number
4: 1394 GUID Number
0: Exit
===>

Downloaded from www.Manualslib.com manuals search engine

3. Enter the required key number of the feature required to be modified. See the following table.

Key No.	Function Description
1	Enter **1** to modify the Asset Tag
2	Enter **2** to modify the Product Name
3	Enter **3** to modify the Serial Number
4	Enter **4** to modify the 1394 GUID Number
0	Enter **0** to exit the program

Using the LAN MAC Utility

Perform the following steps to write MAC information to eeprom:

1. Use a text editor, for example Notepad, to edit the MAC.CFG file as shown:

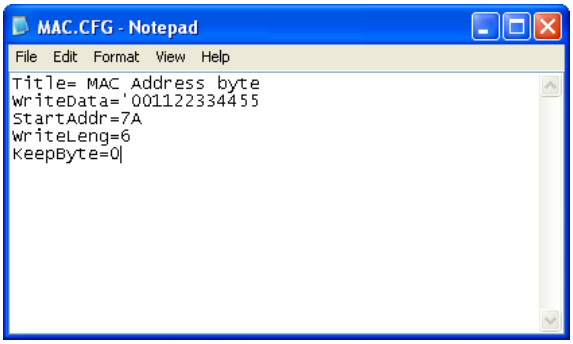

- WriteData= '001122334455' <------- MAC value
- StartAddr=7A <------- MAC address
- WriteLeng=6 <------- MAC value length
- KeepByte=0 <------- can be any value

2. Boot into DOS.
3. Execute **MAC.BAT** to write MAC information to eeprom.

Downloaded from www.Manualslib.com manuals search engine

Removing BIOS Passwords

To clear the User or Supervisor passwords, open the DIMM door and use a metal instrument to short the **J1 point**.

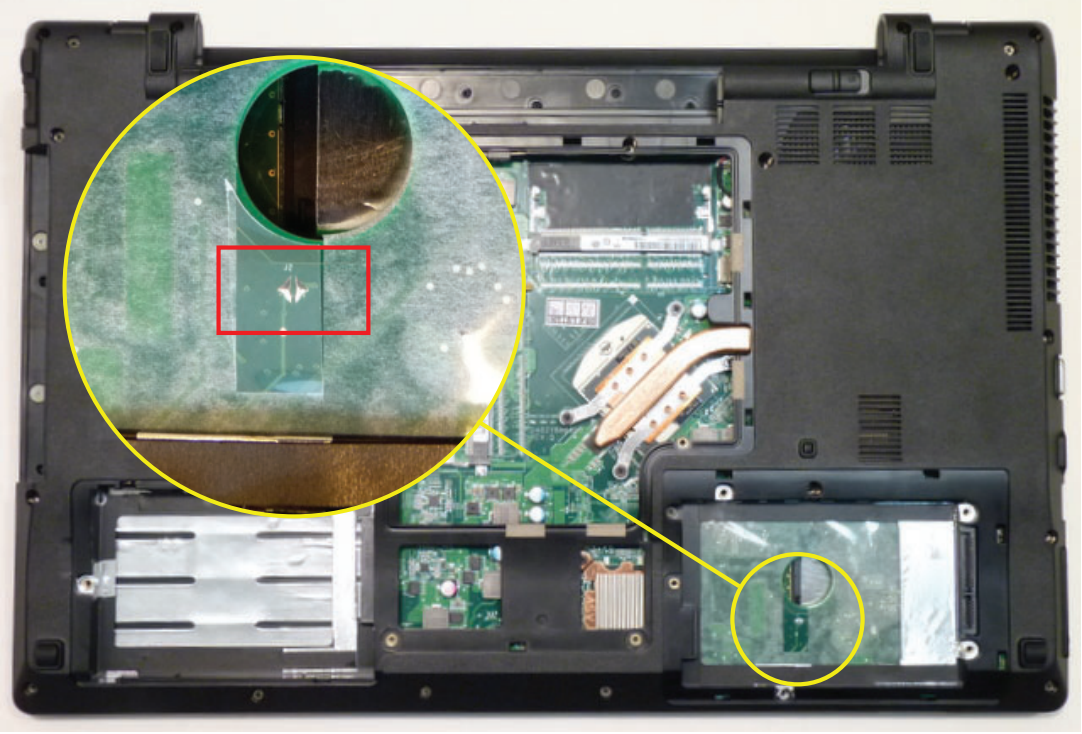

\

CMOS Jumper Location

Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine

Machine Disassembly and Replacement

This chapter contains step-by-step procedures on how to disassemble the notebook computer for maintenance and troubleshooting.

Disassembly Requirements

To disassemble the computer, you need the following tools:

- Wrist grounding strap and conductive mat for preventing electrostatic discharge
- Flat screwdriver
- Philips screwdriver
- Plastic flat screwdriver
- Plastic tweezers

NOTE: The screws for the different components vary in size. During the disassembly process, group the screws with the corresponding components to avoid mismatch when putting back the components.

Related Information

The product previews seen in the disassembly procedures may not represent the final product color or configuration.

IMPORTANT: Cable paths and positioning may not represent the actual model. During the removal and replacement of components, ensure all available cable channels and clips are used and that the cables are replaced in the same position.

Replacement Requirements

NOTE: Cabling and components require adhesive to be applied during the replacement and reassembly process.

NOTE: During manufacture a cyanoacrylate glue is used provided by Holdtite Adhesives LTD. This is not a specified requirement. The reassembler is free to select an alternative appropriate adhesive.

Downloaded from www.Manualslib.com manuals search engine

Pre-disassembly Instructions

Before proceeding with the disassembly procedure, make sure that you do the following:

1. Turn off the power to the system and all peripherals.
2. Unplug the AC adapter and all power and signal cables from the system.

3. Place the system on a flat, stable surface.

Downloaded from www.Manualslib.com manuals search engine

Disassembly Process

The disassembly process is divided into the following sections:

- External components disassembly
- Main unit disassembly
- LCD module disassembly

The flowcharts provided in the succeeding disassembly sections illustrate the entire disassembly sequence. Observe the order of the sequence to avoid damage to any of the hardware components. For example, if you want to remove the Mainboard, you must first remove the Keyboard, and LCD Module then disassemble the inside assembly frame in that order.

Main Screw List

Screw	Quantity	Acer Part Number
M2.0*3L(BK)	14	86.ARE07.002
M2.5*5L(NI)	8	
M2.5*4L(BNI)	12	86.T23V7.009
M3.0*3.5L(NI)	6	86.TDY07.003
M2.5*5L(BNI)	7	TBD
M2.0*5L	4	86.T23V7.010
M2.5*6L(BNI)	38	86.A08V7.004
M2.5*2L(NI)	4	86.EDM07.002

Downloaded from www.Manualslib.com manuals search engine

External Module Disassembly Process

NOTE: The product previews seen in the disassembly procedures may not represent the final product color or configuration.

Screw List

Step	Screw	Quantity	Part No.
Base Cover Disassembly	M2.5*5L(BNI)	6	
2nd HDD Cover Disassembly	M2.5*5L(BNI)	1	
WLAN Module Disassembly	M2.0*3L(BK)	1	86.ARE07.002
HDD Disassembly	M3.0*3.5L(NI)	2	86.TDY07.003
2nd HDD Disassembly	M3.0*3.5L(NI)	4	86.TDY07.003
ODD Module Disassembly	M2.0*3L(BK)	1	86.ARE07.002

External Modules Disassembly Flowchart

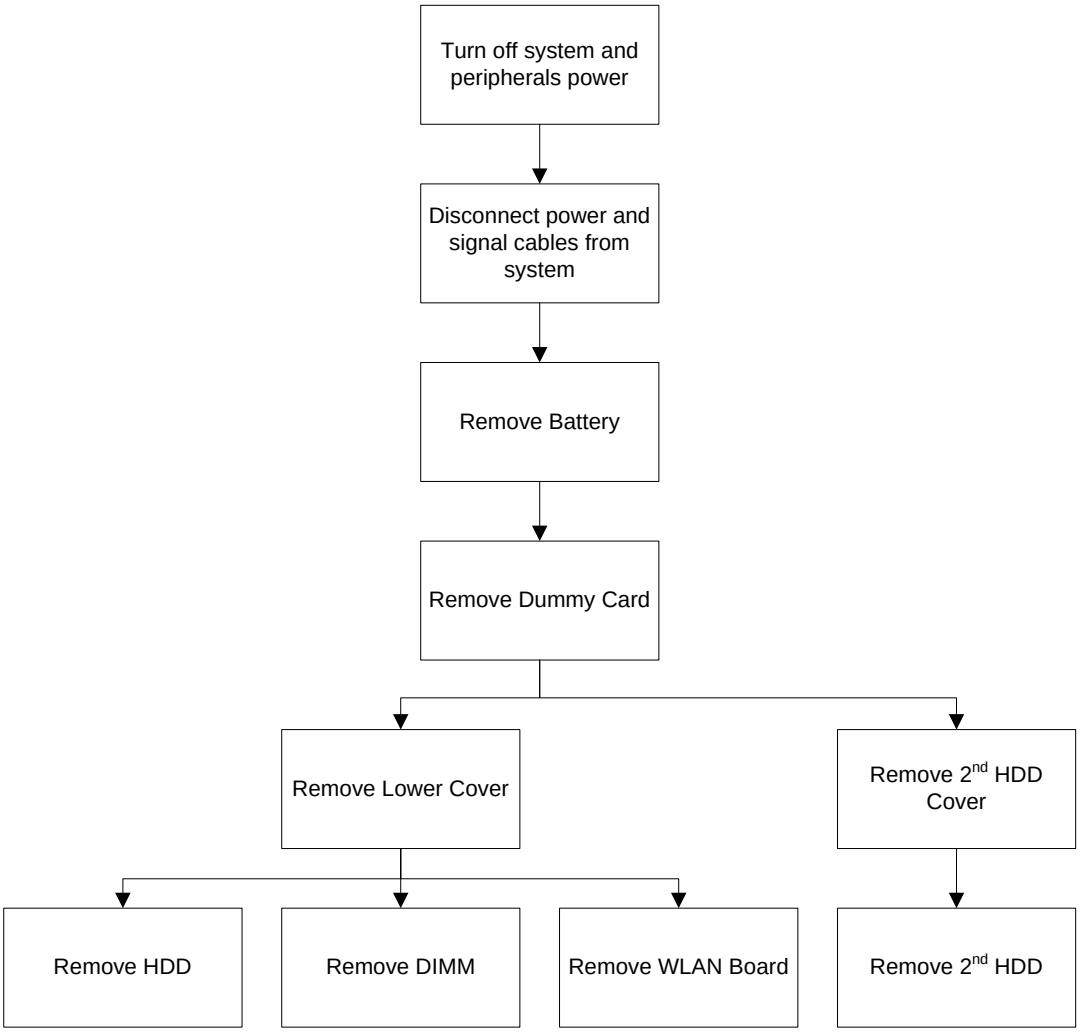

Downloaded from www.Manualslib.com manuals search engine

Removing the Battery Pack

1. Turn the computer over.
2. Slide the battery lock/unlock latch to the unlock position.

3. Slide and hold the battery release latch to the release position (1), then slide out the battery pack from the main unit (2).

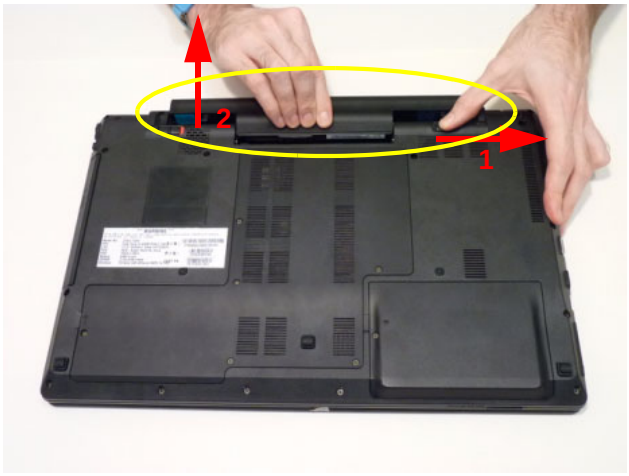

NOTE: The battery has been highlighted with a yellow oval as shown in the above image. Please detach the battery and follow local regulations for disposal.

Downloaded from www.Manualslib.com manuals search engine

Removing the Dummy Card

1. Press the dummy card in to allow it to spring out.

2. Pull the dummy card out.

Downloaded from www.Manualslib.com manuals search engine

Removing the Base Door

1. See “Removing the Battery Pack” on page 51.
2. Remove the six (6) screws.

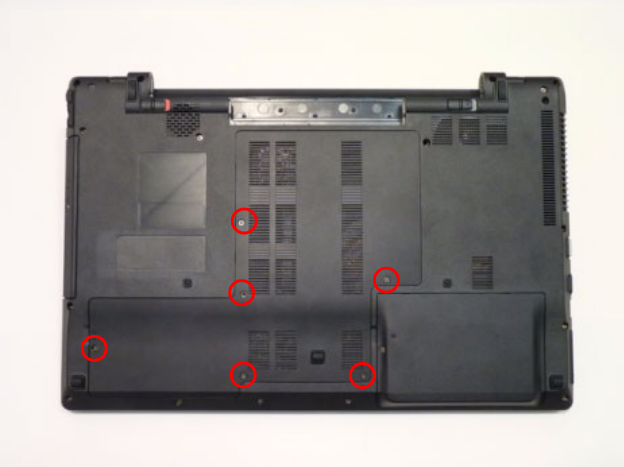

Step	Screw	Quantity	Screw Type
Base Door Disassembly	M2.5*5L(BNI)	6	

3. Lift the base door up at the finger indentation location provided in the bottom cover.

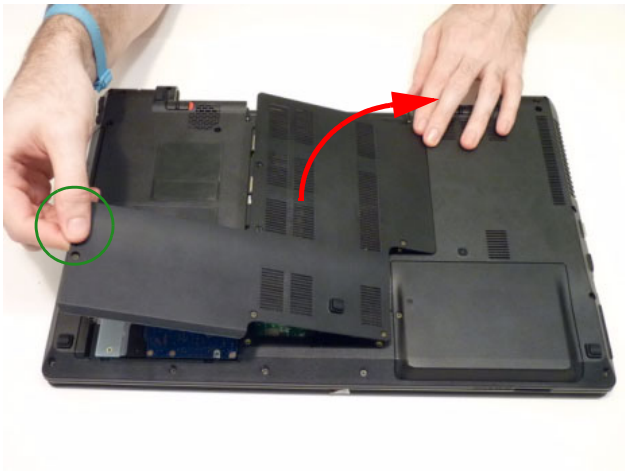

Downloaded from www.Manualslib.com manuals search engine

Removing the Hard Disk Drive Module

1. See “Removing the Battery Pack” on page 51.
2. See “Removing the Base Door” on page 53.
3. Grasp the pull tab on the top of the HDD.

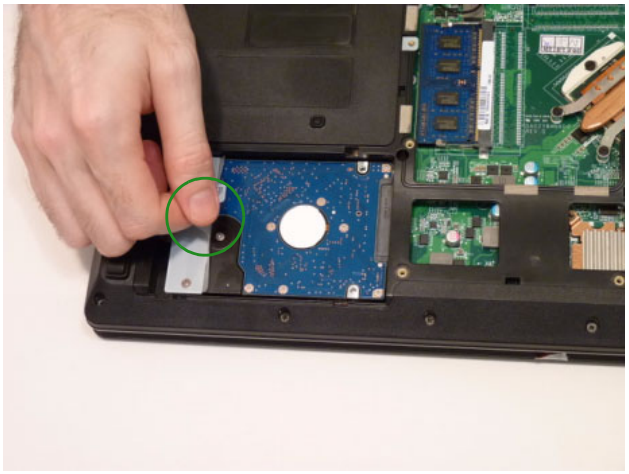

4. Pull the tab horizontally to slide the HDD out of the connector dock.

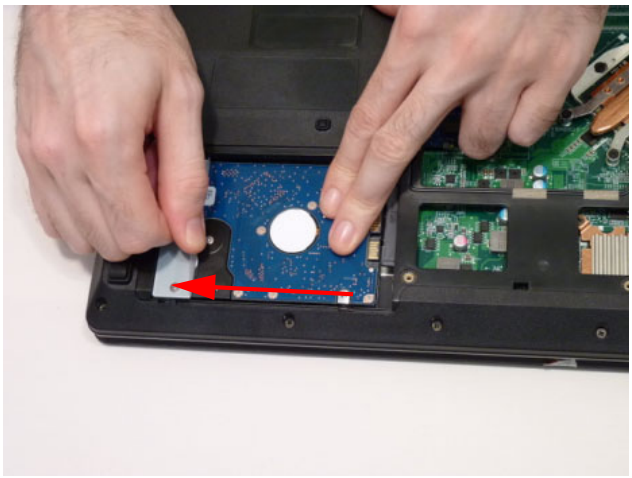

5. Lift the HDD out of the lower cover.

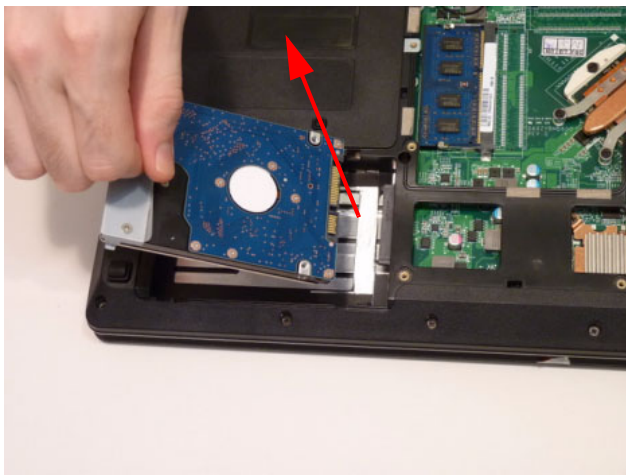

Downloaded from www.Manualslib.com manuals search engine

6. Remove the two (2) screws of the HDD bracket.

Step	Screw	Quantity	Screw Type
HDD Bracket Disassembly	M3.0*3.5L(NI)	2	

7. Lift the bracket away from the HDD.

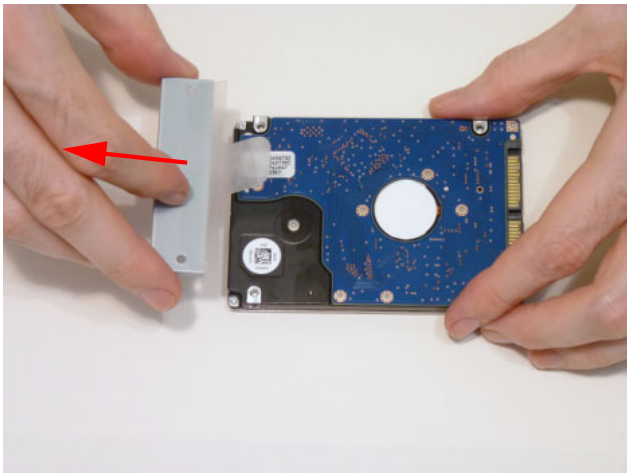

Downloaded from www.Manualslib.com manuals search engine

Removing the DIMM Module

1. See “Removing the Battery Pack” on page 51.
2. See “Removing the Base Door” on page 53.
3. Push the memory module clips outwards.

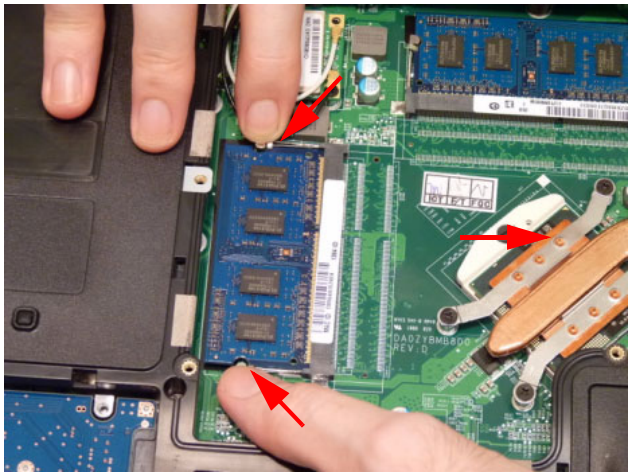

4. Pull the memory module out.

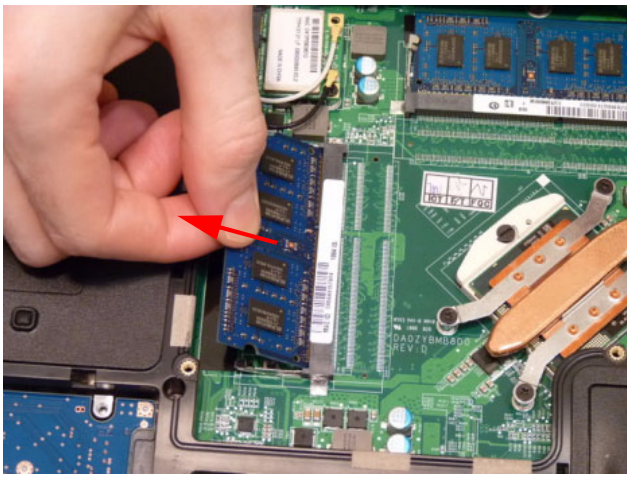

Downloaded from www.Manualslib.com manuals search engine

Removing the WLAN Module

1. See “Removing the Battery Pack” on page 51.
2. See “Removing the Base Door” on page 53.
3. Detach the two (2) cables from the Wireless LAN module.

IMPORTANT: Take note of the position of the Main (black) and Auxiliary (white) connectors.

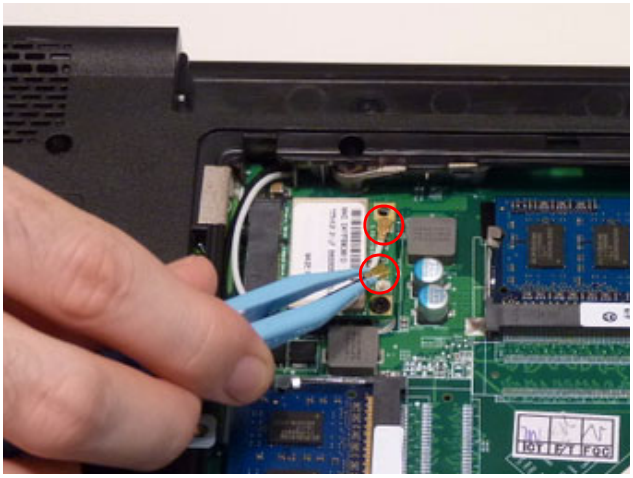

4. Remove the one (1) screw. Ensure the cables are well clear of the module.

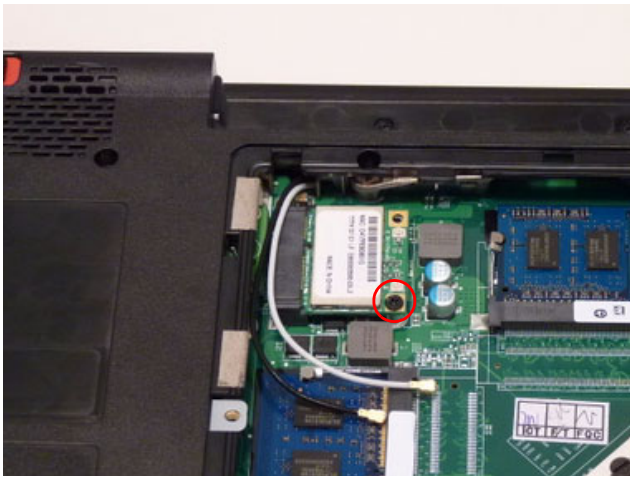

Step	Screw	Quantity	Screw Type
WLAN Module Disassembly	M2.0*3L(BK)	1	

Downloaded from www.Manualslib.com manuals search engine

5. Pull the WLAN module out and away.

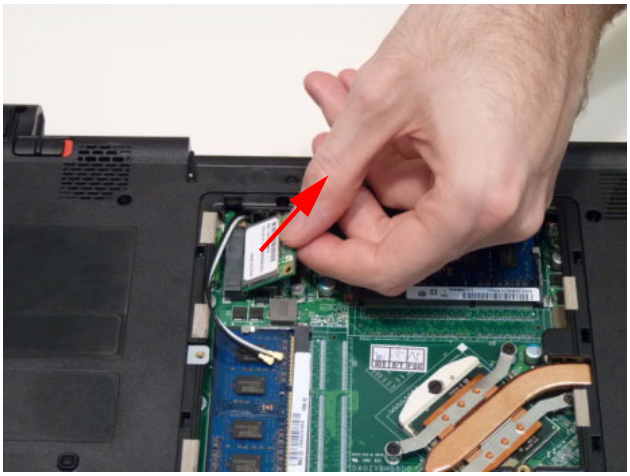

Downloaded from www.Manualslib.com manuals search engine

Removing the 2nd HDD Module

1. See “Removing the Battery Pack” on page 51.
2. Remove the one (1) screw from the 2nd HDD module door.

Step	Screw	Quantity	Screw Type
2nd HDD Module Disassembly	M2.5*5L(BNI)	1	

3. Remove the HDD module door from the lower cover.

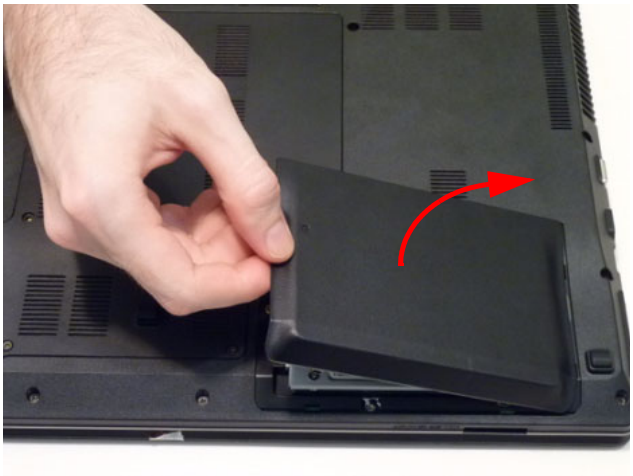

Downloaded from www.Manualslib.com manuals search engine

4. Remove the three (3) screws to release the 2nd HDD module from the chassis.

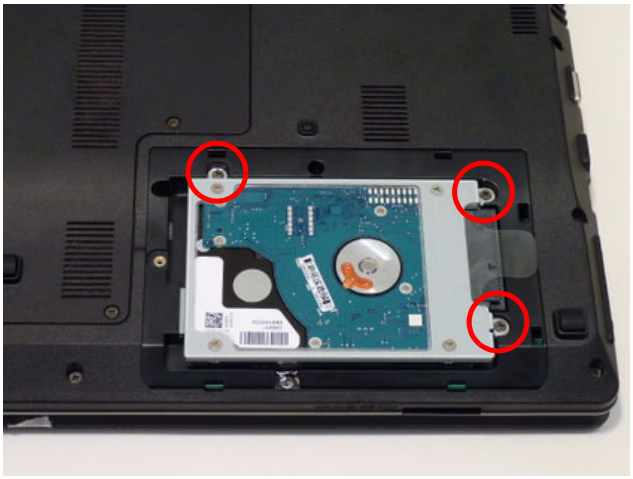

Step	Screw	Quantity	Screw Type
2nd HDD Module Disassembly	M2.5*5L(BNI)	1	

5. Grasp the pull tab on the top of the HDD.

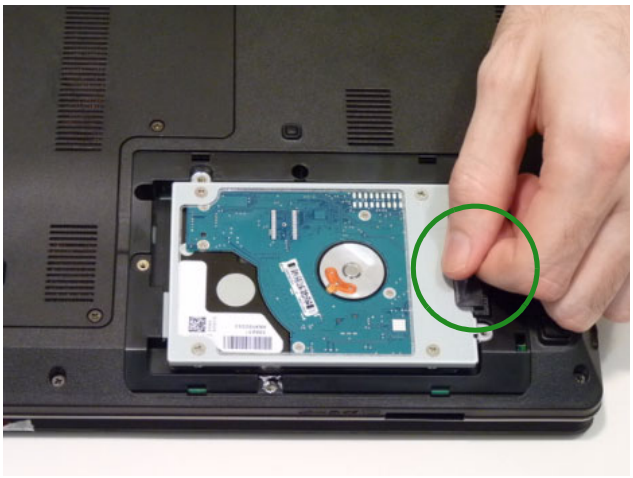

6. Lift the HDD out of the lower cover.

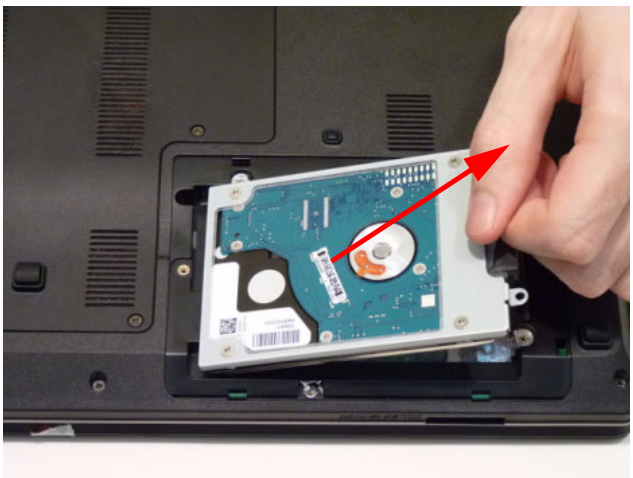

Downloaded from www.Manualslib.com manuals search engine

7. Remove the four (4) screws from the HDD bracket.

Step	Screw	Quantity	Screw Type
HDD Bracket Disassembly	M3.0*3.5L(NI)	4	

8. Lift the bracket away from the HDD.

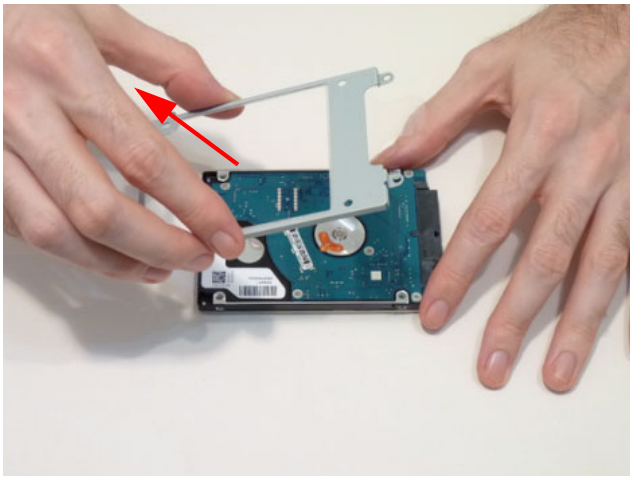

Downloaded from www.Manualslib.com manuals search engine

Removing the ODD Module

1. See “Removing the Battery Pack” on page 51.
2. See “Removing the Base Door” on page 53.
3. Pry the ODD from the chassis and pull the ODD completely out of the bay.

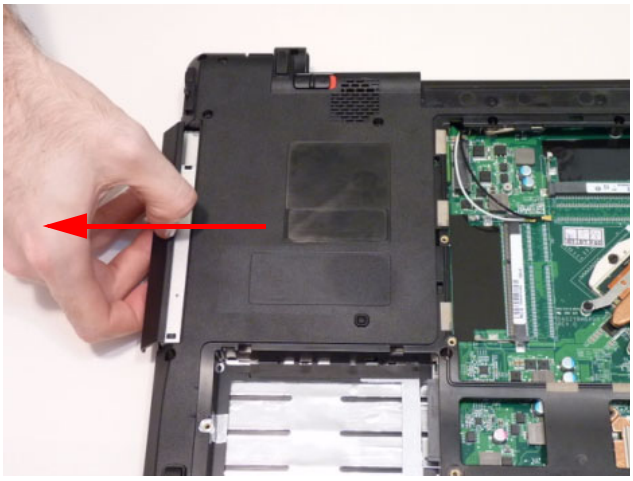

4. Remove the two (2) screws from the ODD bracket.

Step	Screw	Quantity	Screw Type
ODD Module Disassembly	M2.0*3L(BK)	2	

Downloaded from www.Manualslib.com manuals search engine

5. Remove the ODD bracket.

6. Pry the ODD bezel off of the ODD module.

Downloaded from www.Manualslib.com manuals search engine

Main Unit Disassembly Process

IMPORTANT: Cable paths and positioning may not represent the actual model. During the removal and replacement of components, ensure all available cable channels and clips are used and that the cables are replaced in the same position.

NOTE: The product previews seen in the disassembly procedures may not represent the final product color or configuration.

Main Unit Disassembly Flowchart

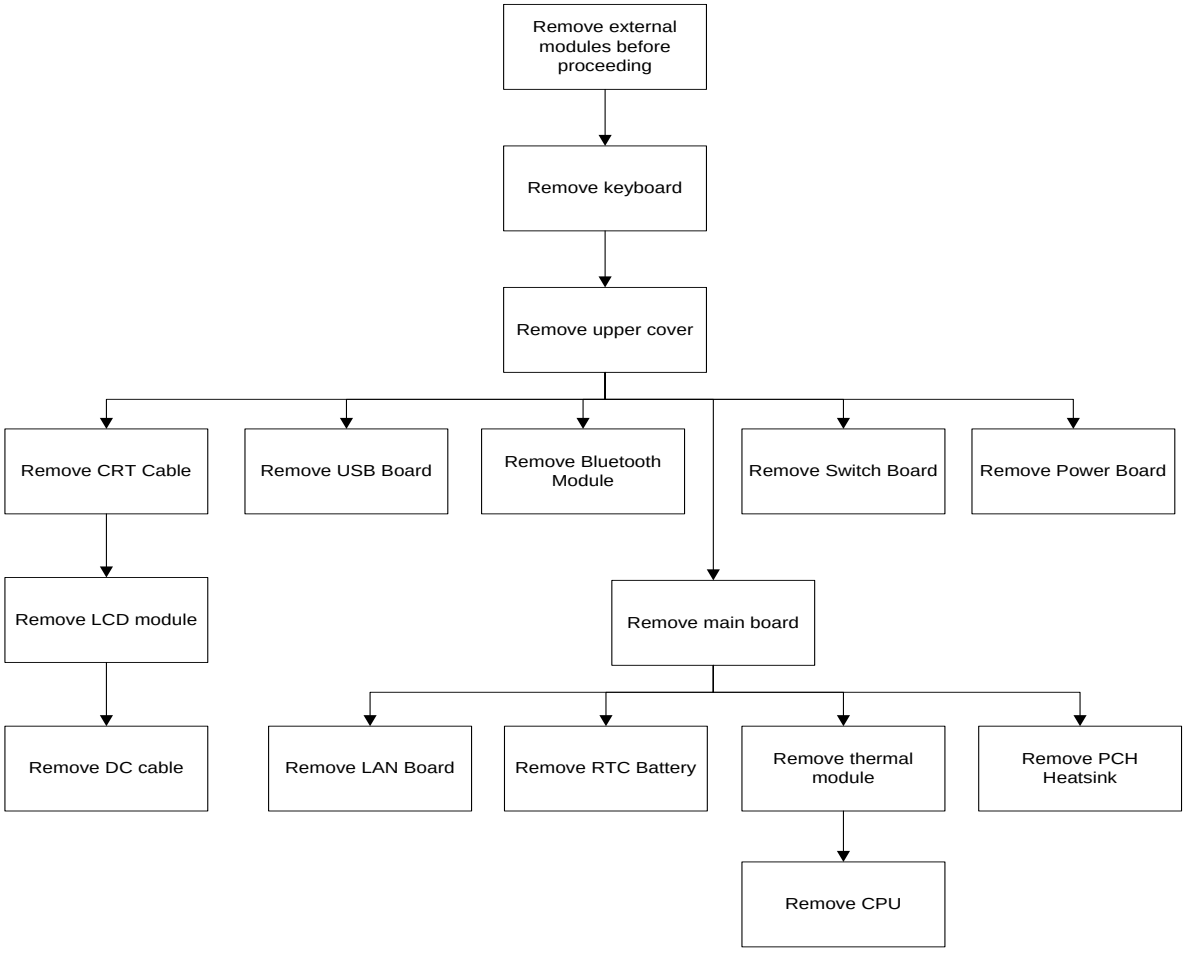

Screw List

Step	Screw	Quantity	Part No.
Upper Cover Disassembly	M2.5*4L(BNI)	6	86.T23V7.009
	M2.0*3L(BK)	1	86.ARE07.002
Lower Cover Disassembly	M2.5*6L(BNI)	22	86.A08V7.004
	M2.5*2L(NI)	2	86.EDM07.002
Switch Board Disassembly	M2.5*2L(NI)	2	86.EDM07.002
Power Module Disassembly	M2.0*3L(BK)	3	86.ARE07.002
USB board Disassembly	M2.5*6L(BNI)	1	86.A08V7.004

Downloaded from www.Manualslib.com manuals search engine

Step	Screw	Quantity	Part No.
Bluetooth Module Disassembly	M2.0*3L(BK)	1	86.ARE07.002
LAN Board Disassembly	M2.5*6L(BNI)	3	86.A08V7.004
PCH Heatsink Disassembly	M2.5*6L(BNI)	2	86.A08V7.004
LCD Module Disassembly	M2.5*6L(BNI)	4	86.A08V7.004

Downloaded from www.Manualslib.com manuals search engine

Removing the Keyboard

IMPORTANT: The keyboard is easily warped or damaged during the removal process. Take care not to use excessive force when removing to prevent damage.

1. Remove the twenty two (22) screws in the lower cover.

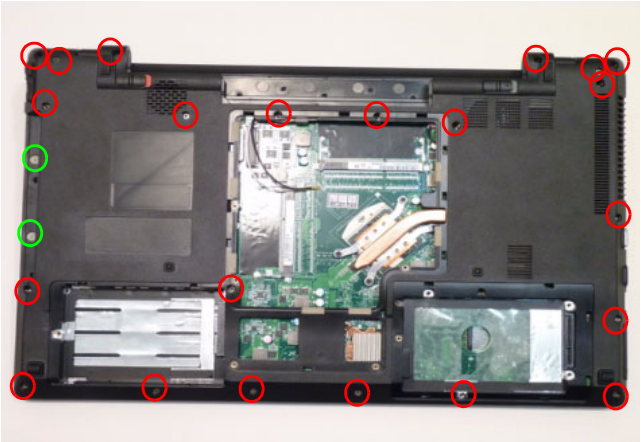

Step	Screw	Quantity	Screw Type
Lower Cover Disassembly	M2.5*6.0 (red callouts)	22	
	M2.5*2L(NI) (green callouts)	2	

2. Using plastic tweezers, release the six (6) clips holding the keyboard in place.

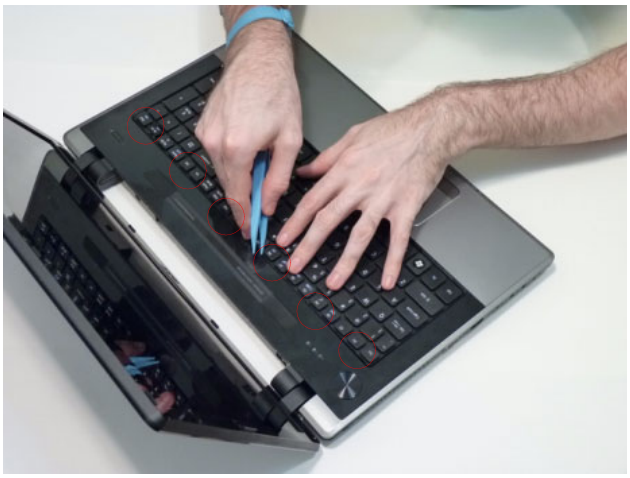

Downloaded from www.Manualslib.com manuals search engine

3. Gently pry up the keyboard.

4. Carefully flip the keyboard over.

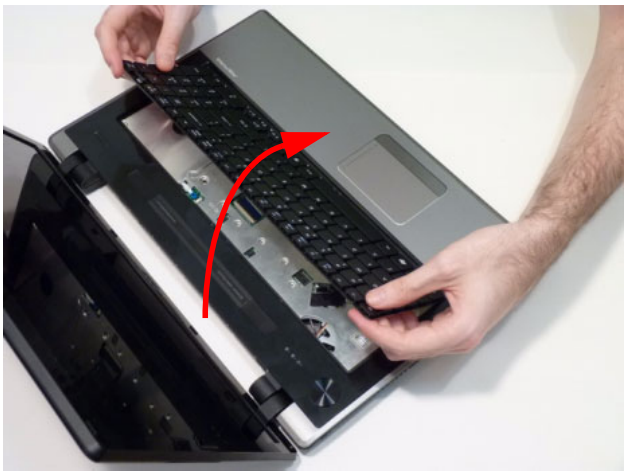

5. Detach the keyboard FCC and remove the keyboard.

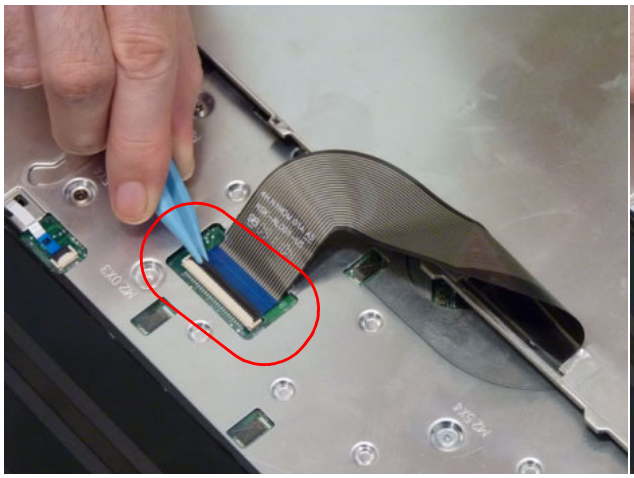

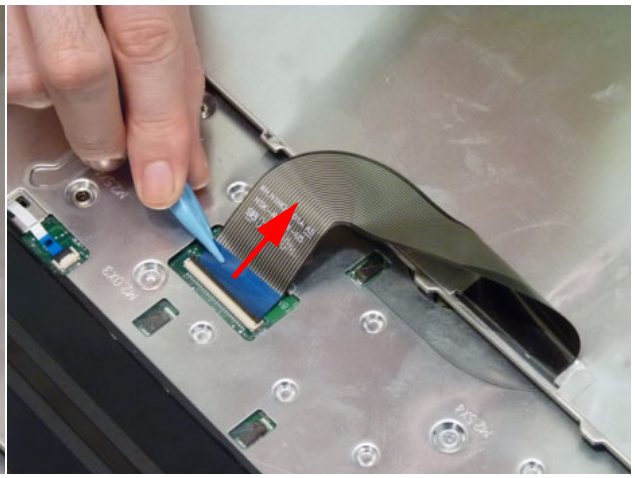

Downloaded from www.Manualslib.com manuals search engine

Removing the Upper Cover

1. See “Removing the Keyboard” on page 66.
2. Disconnect the power board FFC.

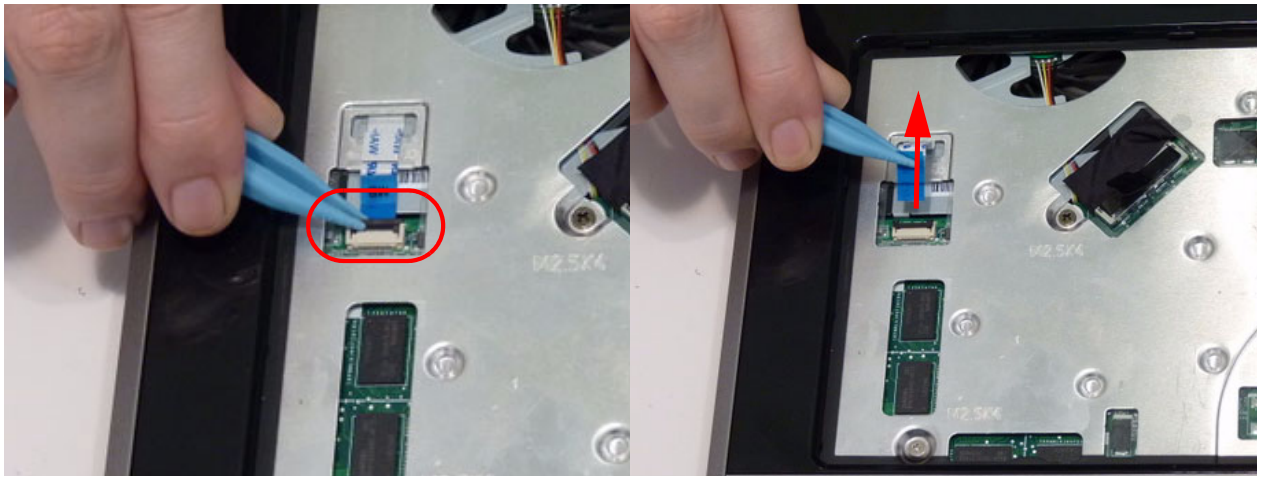

3. Unlock and disconnect the touchpad board FFC.

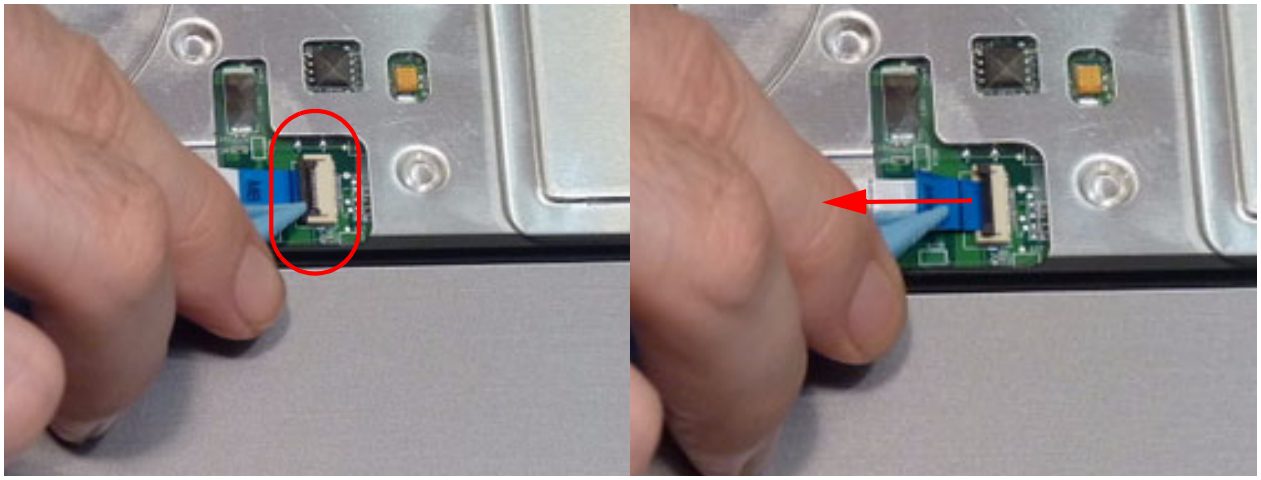

4. Unlock and disconnect the speaker cable.

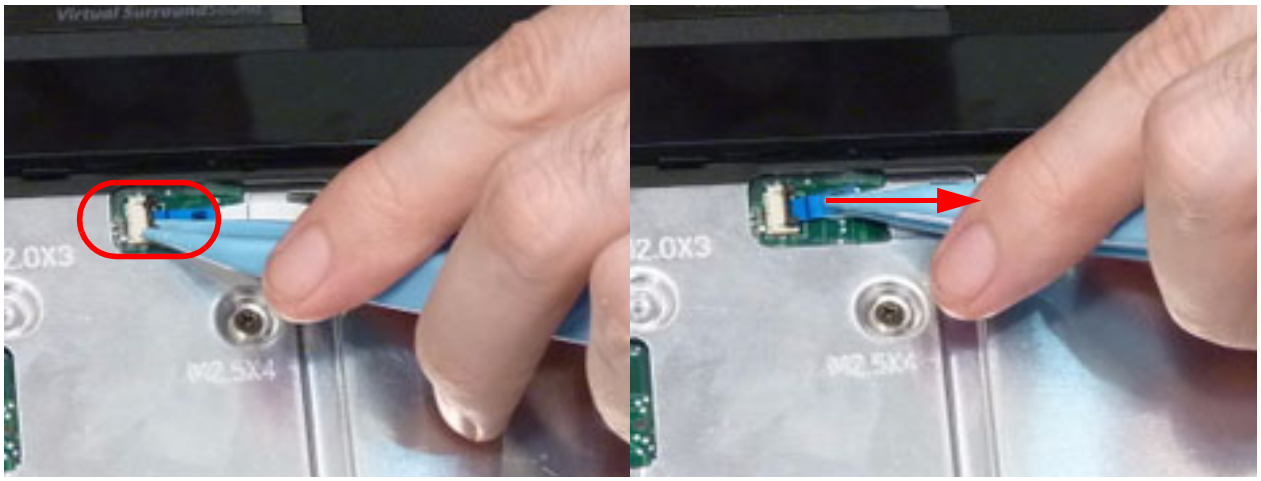

Downloaded from www.Manualslib.com manuals search engine

5. Remove the seven (7) screws from the upper cover.

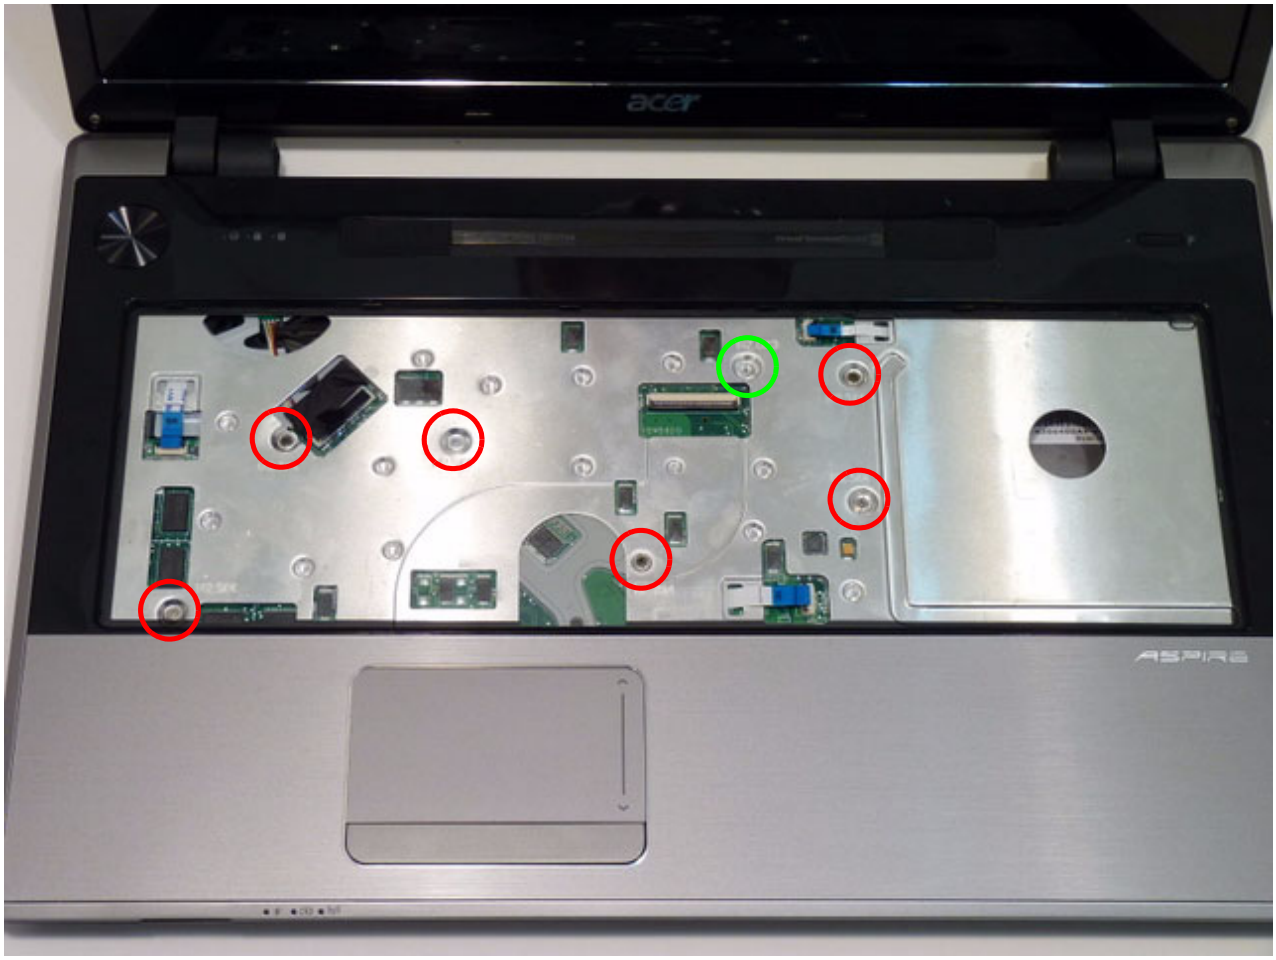

Step	Screw	Quantity	Screw Type
Upper Cover Disassembly	2.5*4.0 (red callouts)	6	
	2.0*3.0 (green callout)	1	

Downloaded from www.Manualslib.com manuals search engine

6. Lift the upper cover away from the lower cover as shown.

Removing the LCD Module

1. See "Removing the Upper Cover" on page 68
2. Pull the WLAN antenna up through the upper cover and free it from the cable channel.

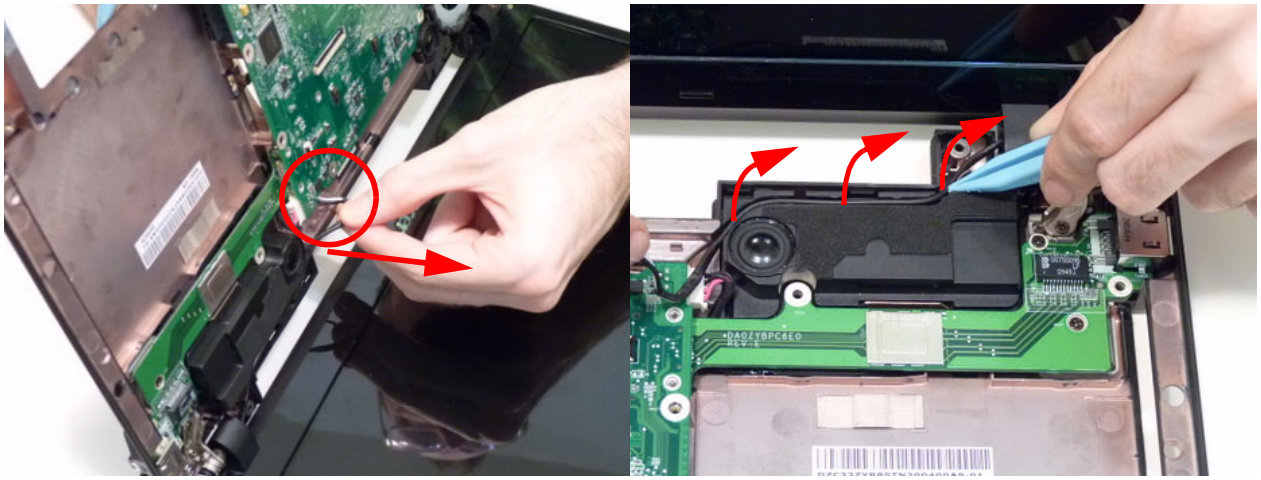

3. Using the pull tab, release the LVDS cable from the connector.

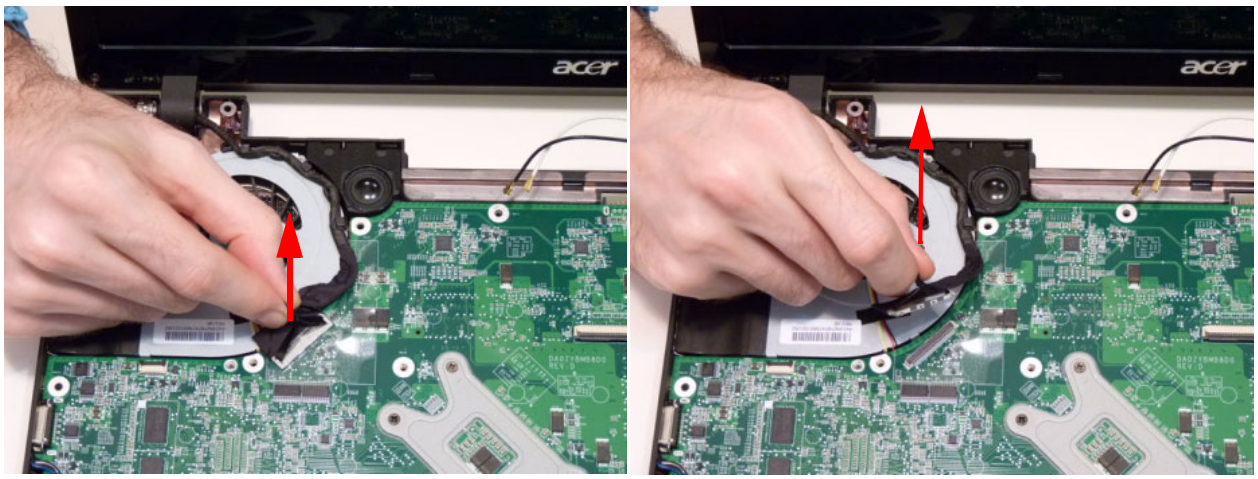

Downloaded from www.Manualslib.com manuals search engine

4. Remove the four (4) screws from the hinges.

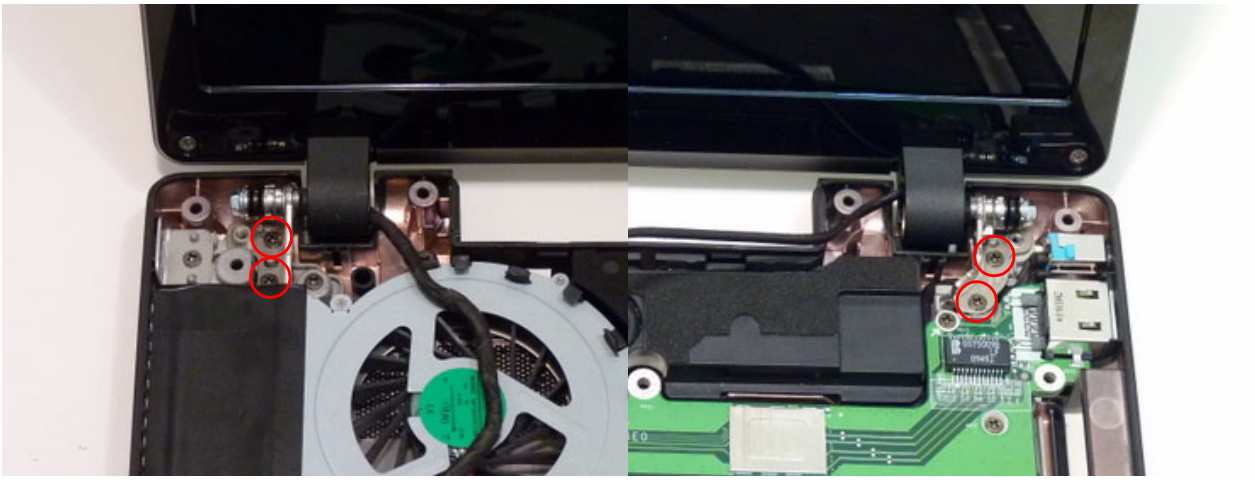

Step	Screw	Quantity	Screw Type
Remove LCD Module	M2.5*6.0	4	

5. Remove the LCD module from the chassis.

CAUTION: Make sure all cables are pulled back and away from the device to avoid damage during removal.

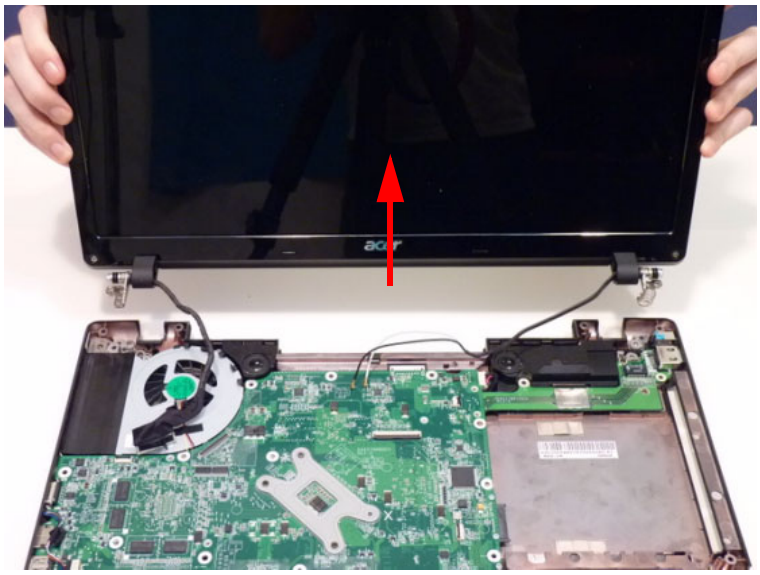

Downloaded from www.Manualslib.com manuals search engine

Removing the Bluetooth Module

1. See “Removing the Upper Cover” on page 68.
2. Disconnect the Bluetooth cable from the mainboard..

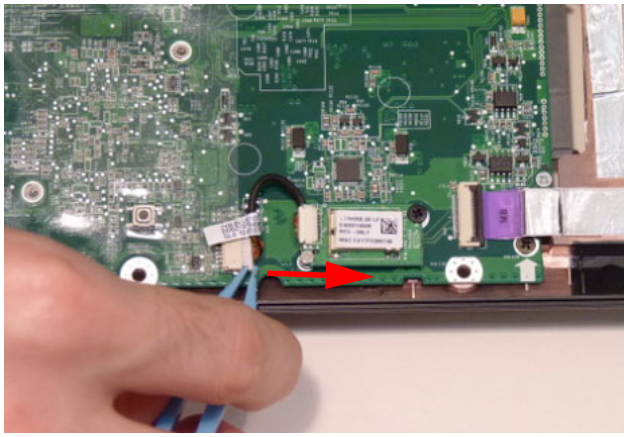

3. Remove the one (1) screw from the Bluetooth module.

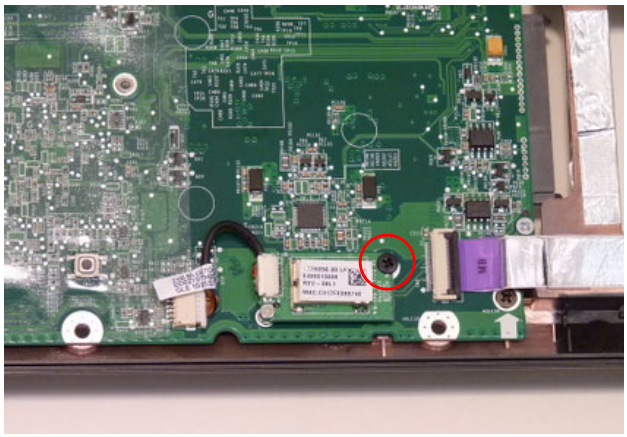

Step	Screw	Quantity	Screw Type.
Bluetooth Module Disassembly	M2.5*3	1	

4. LIft the Bluetooth module away from the upper cover.

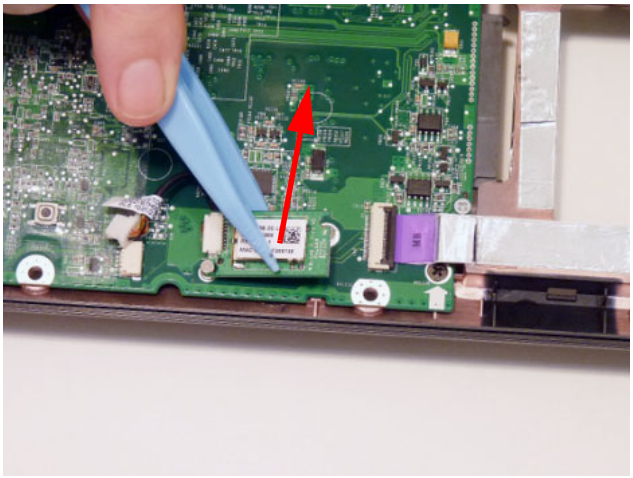

Downloaded from www.Manualslib.com manuals search engine

5. Detach the Bluetooth module cable from the module.

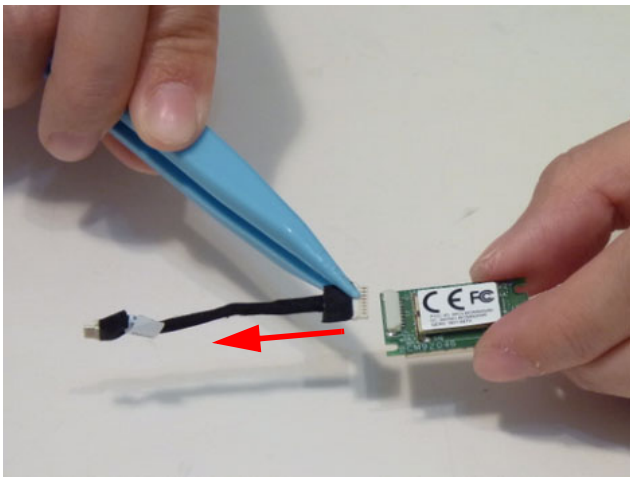

Downloaded from www.Manualslib.com manuals search engine

Removing the USB Board

1. See “Removing the Upper Cover” on page 68.
2. Unlock the USB board connector and disconnect the cable from the mainboard.

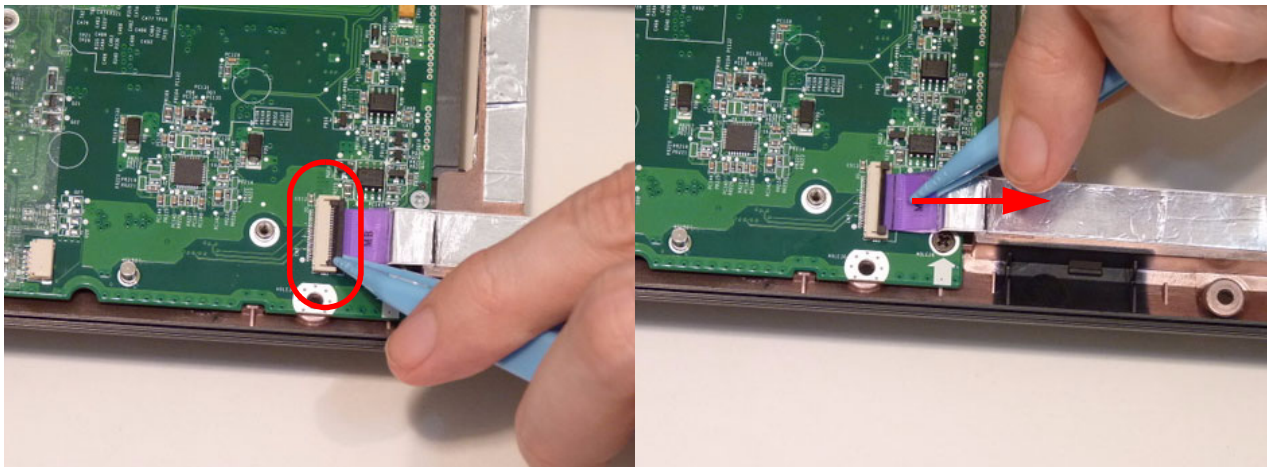

3. Unlock the USB board cable connector and disconnect the cable from the board.

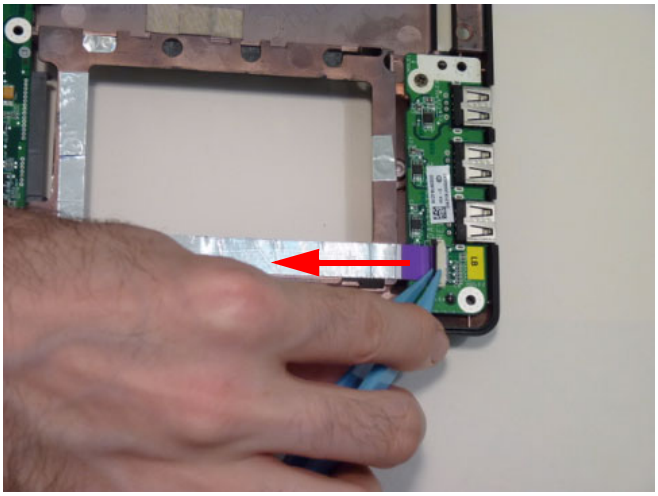

Downloaded from www.Manualslib.com manuals search engine

4. Remove one (1) screw from the USB board.

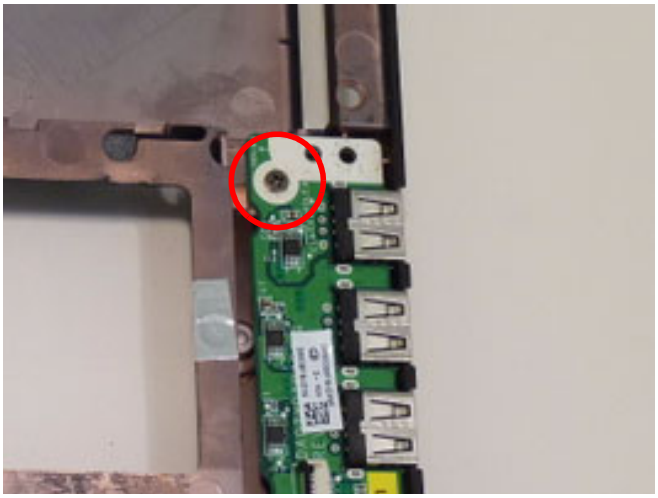

Step	Screw	Quantity	Screw Type.
USB Module Disassembly	2.5*6	1	

5. Lift the USB board clear of the chassis.

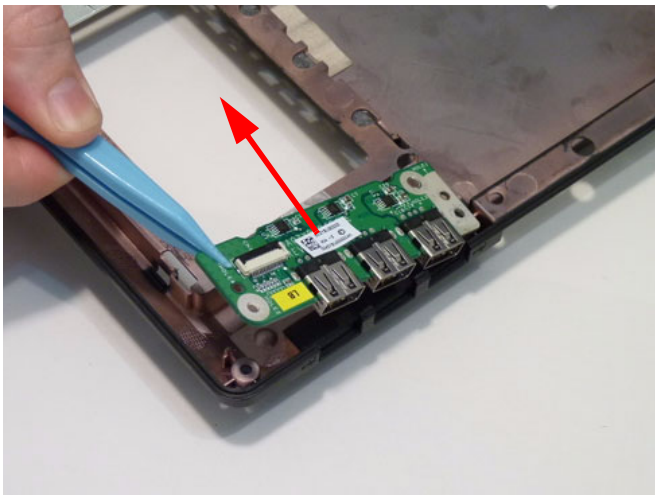

Downloaded from www.Manualslib.com manuals search engine

Removing the Mainboard

1. See “Removing the Upper Cover” on page 68.
2. Disconnect the following cables (a,b) from the mainboard.

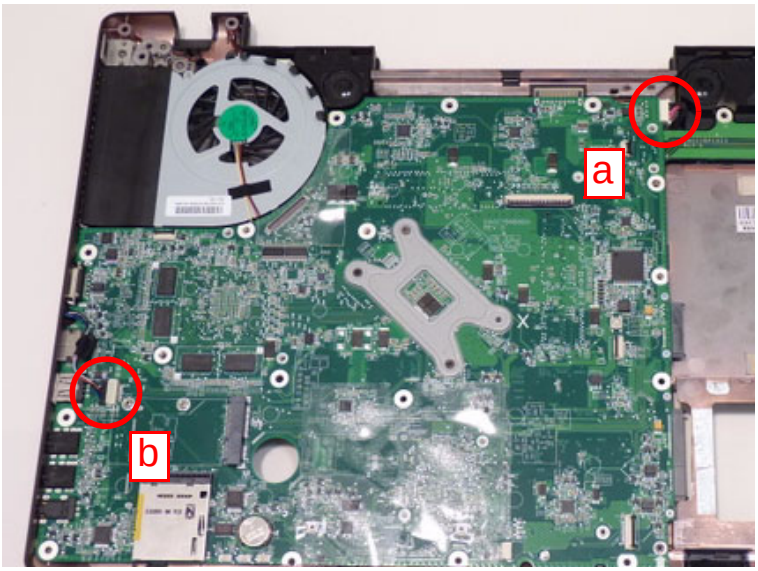

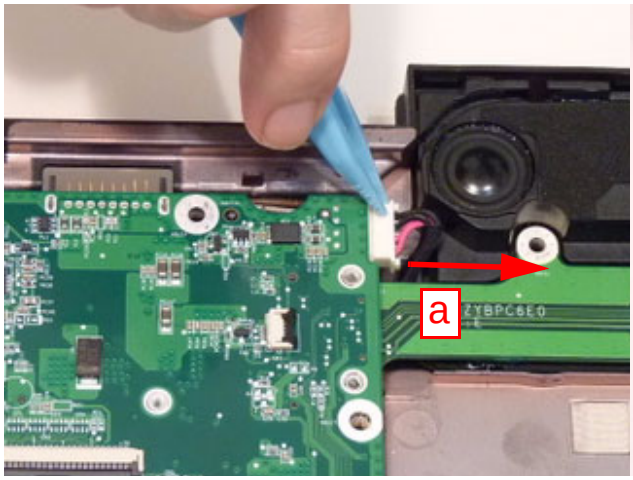

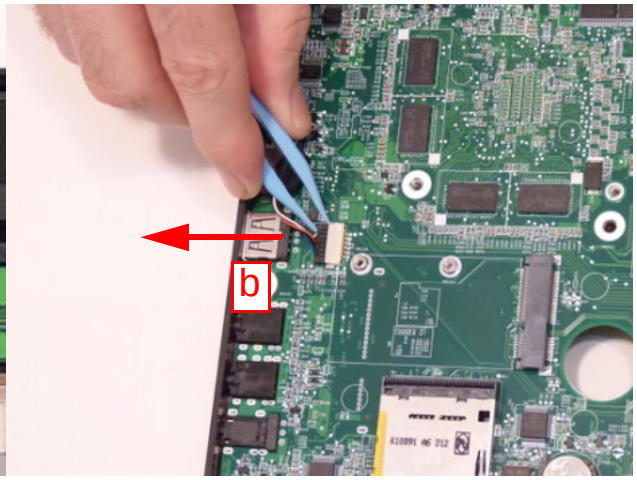

Downloaded from www.Manualslib.com manuals search engine

3. Remove the three (3) screws from the mainboard.

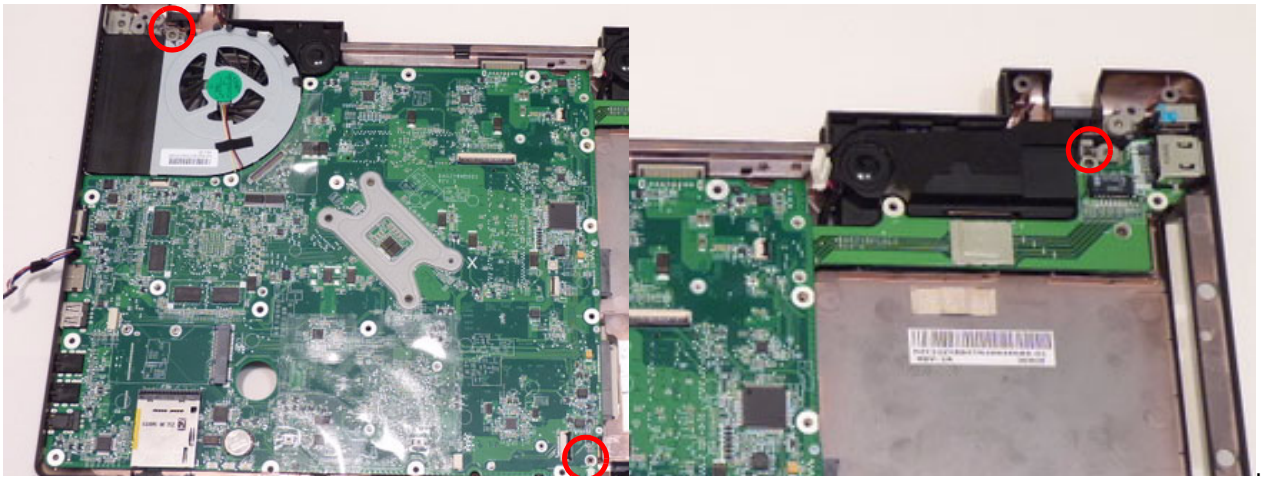

Step	Screw	Quantity	Screw Type.
Main Board Disassembly	M2.5*6	2	

4. Lift the mainboard out of the chassis as shown.

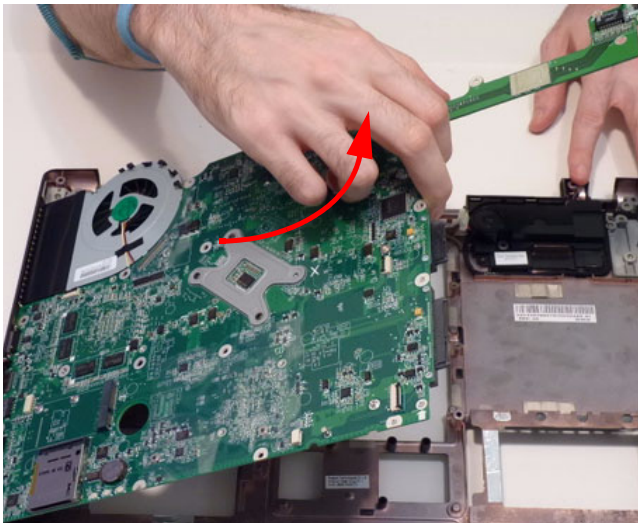

Downloaded from www.Manualslib.com manuals search engine

Removing the LAN Board

1. See “Removing the Mainboard” on page 76.
2. Remove two (2) screws from the LAN board.

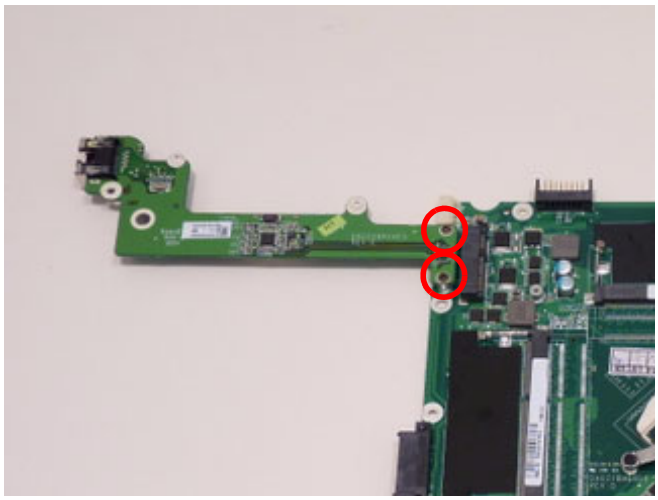

Step	Screw	Quantity	Screw Type.
LAN Module Disassembly	M2.5*6.0	2	

3. Lift the LAN board clear of the chassis.

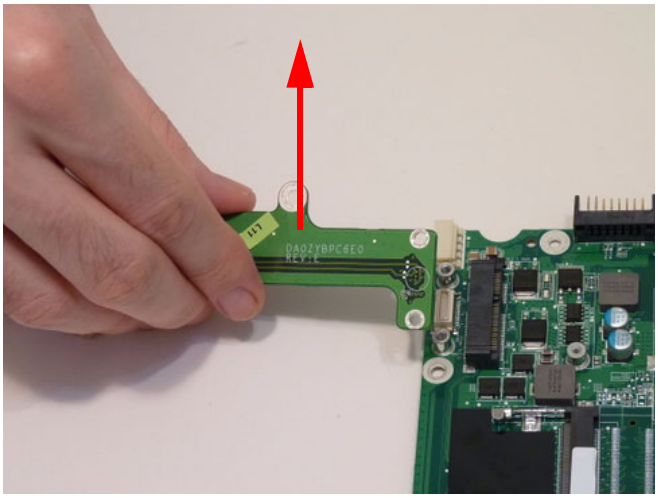

Downloaded from www.Manualslib.com manuals search engine

Removing the RTC Battery

1. See “Removing the Mainboard” on page 76.
2. Pull the RTC battery off the mainboard.

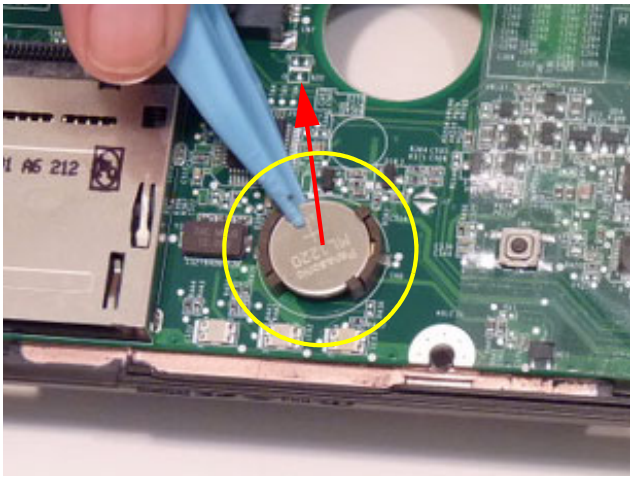

NOTE: The RTC battery has been highlighted with the yellow circle as shown in the previous image. Please detach the RTC battery and follow local regulations for disposal.

Downloaded from www.Manualslib.com manuals search engine

Removing the Thermal Module

1. See “Removing the Mainboard” on page 76.
2. Disconnect the thermal module fan connector.

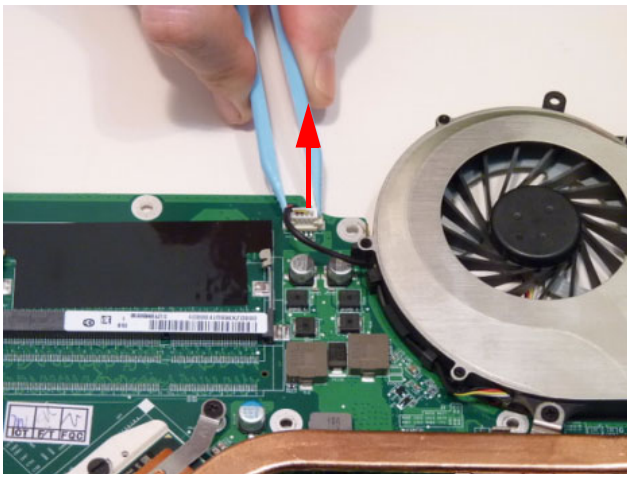

3. Loosen the seven (7) captive screws from the thermal module.

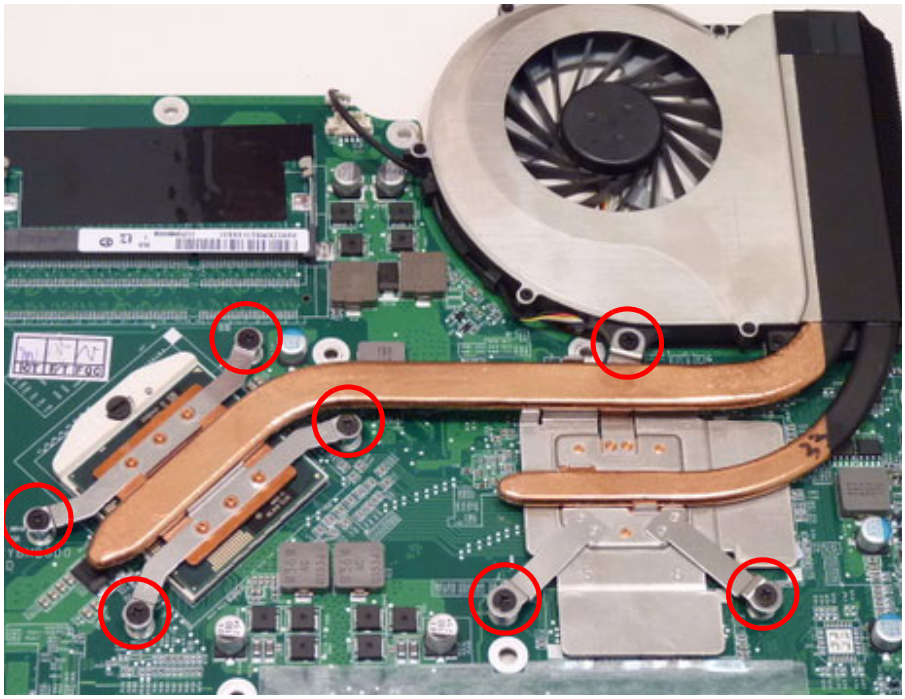

Downloaded from www.Manualslib.com manuals search engine

4. Lift the thermal module away from the main board.

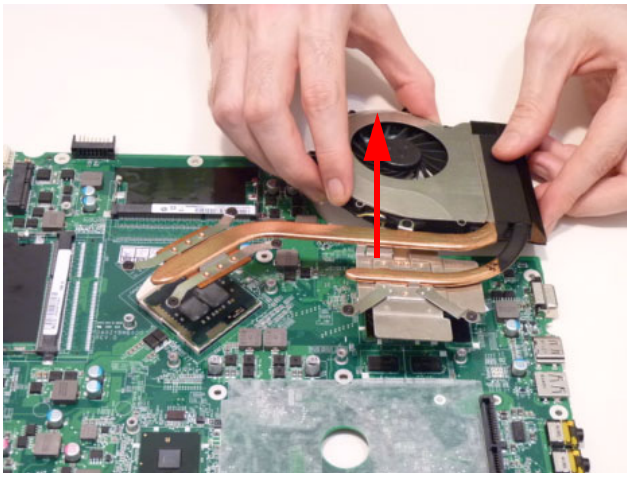

Downloaded from www.Manualslib.com manuals search engine

Removing the CPU

1. See “Removing the Thermal Module” on page 80.
2. Unlock the CPU. Use a flathead screw driver to turn the screw 180°.

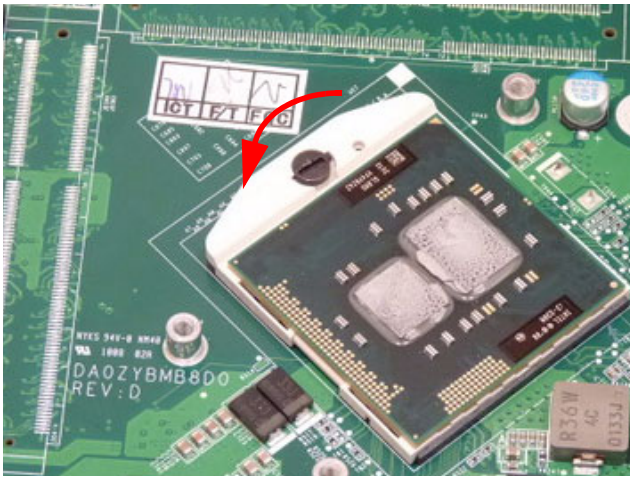

3. Lift the CPU out of the socket.

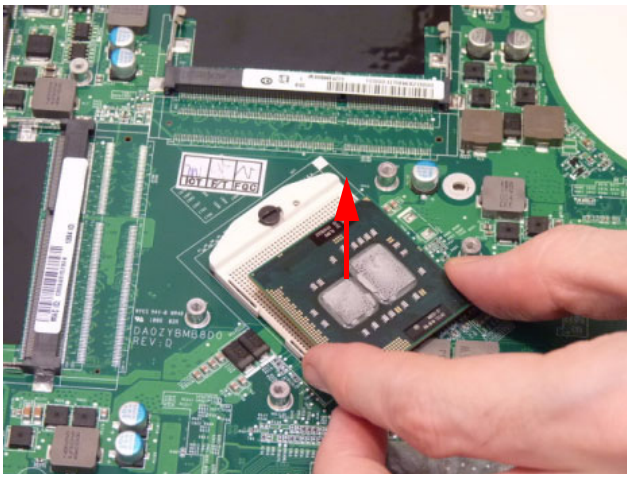

Downloaded from www.Manualslib.com manuals search engine

Removing the PCH Heatsink

1. See “Removing the Mainboard” on page 76.
2. Loosen the two (2) captive screws.

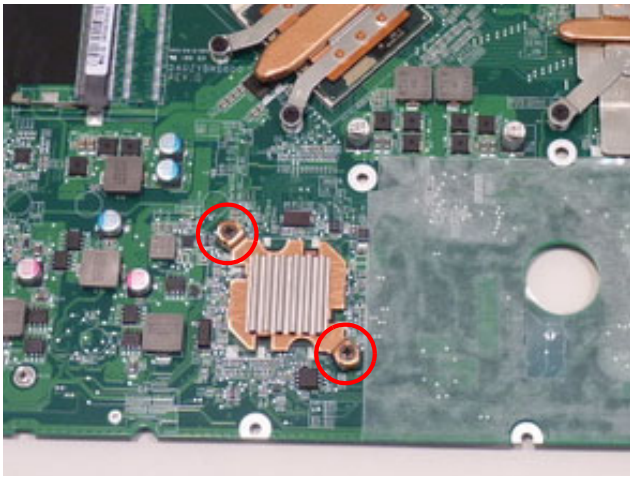

3. Lift the thermal unit away.

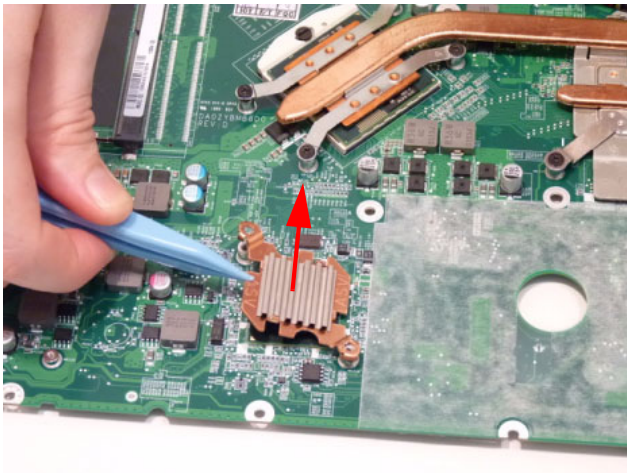

Step	Screw	Quantity	Screw Type.
Removing the PCH Heatsink	M2.5*6.0	2	

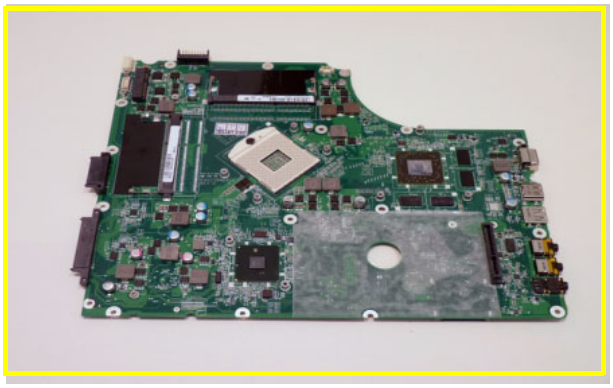

NOTE: Circuit boards >10 cm² have been highlighted with a yellow rectangle as shown in the previous image. Please detach the circuit board and follow local regulations for disposal.

Downloaded from www.Manualslib.com manuals search engine

Removing the DC-IN Cable Assembly

1. See “Removing the Mainboard” on page 76.
2. See “Removing the Upper Cover” on page 68.
3. Remove the DC-IN cable from the retention guides.

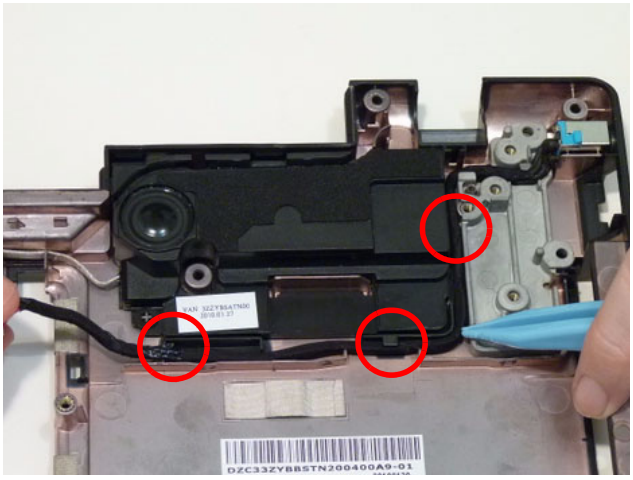

4. Lift the DC-IN cable assembly out of the chassis.

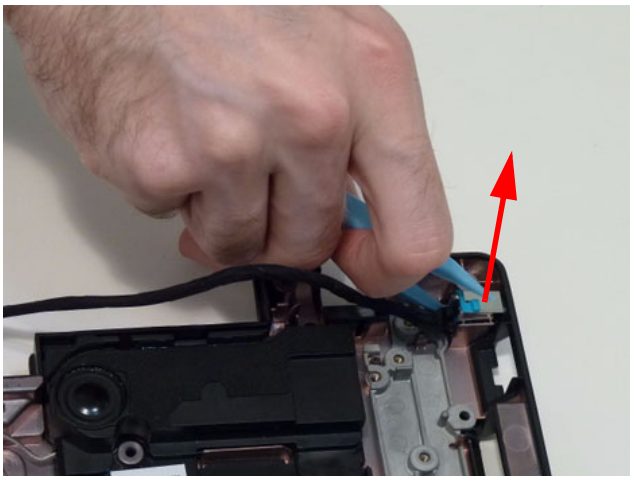

Downloaded from www.Manualslib.com manuals search engine

Removing the Switch Board

1. See “Removing the Upper Cover” on page 68.
2. Remove the two (2) screws.

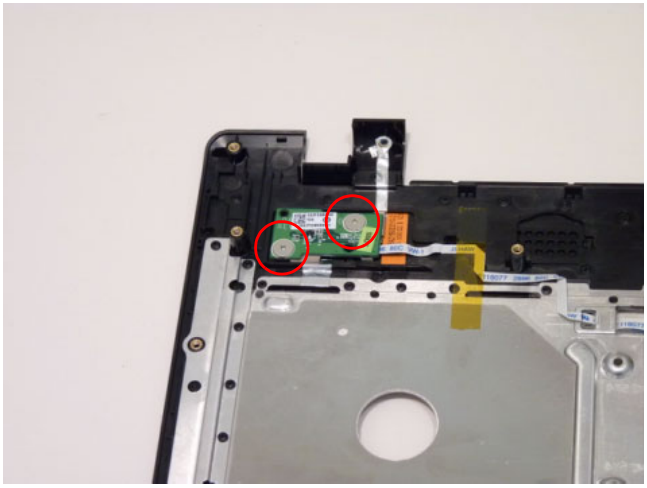

Step	Screw	Quantity	Screw Type
Switch Board Disassembly	M2.5*2Ni	2	

3. Lift the switch board away from the upper cover (1) and turn it over (2).

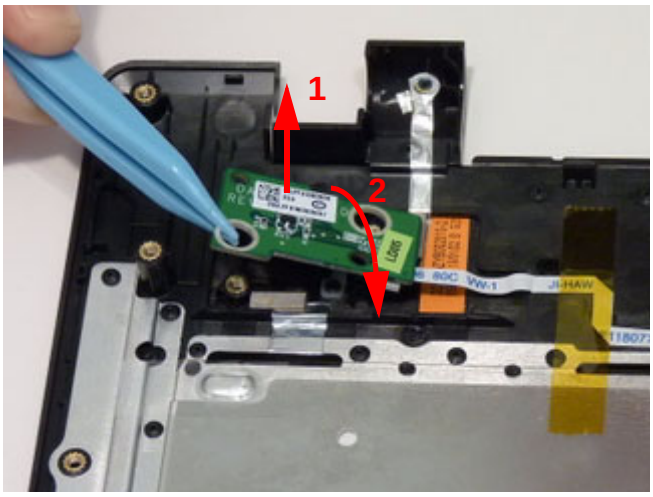

Downloaded from www.Manualslib.com manuals search engine

4. Unlock and disconnect the switch board FFC.

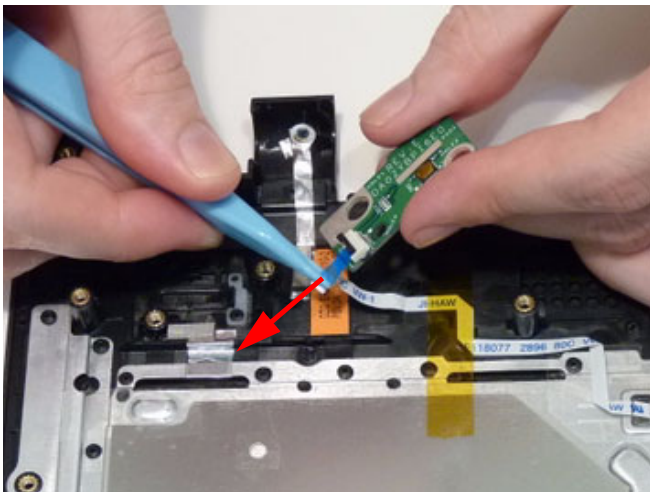

Downloaded from www.Manualslib.com manuals search engine

Removing the Power Board

1. See “Removing the Upper Cover” on page 68.
2. Unlock and disconnect the power board FFC.

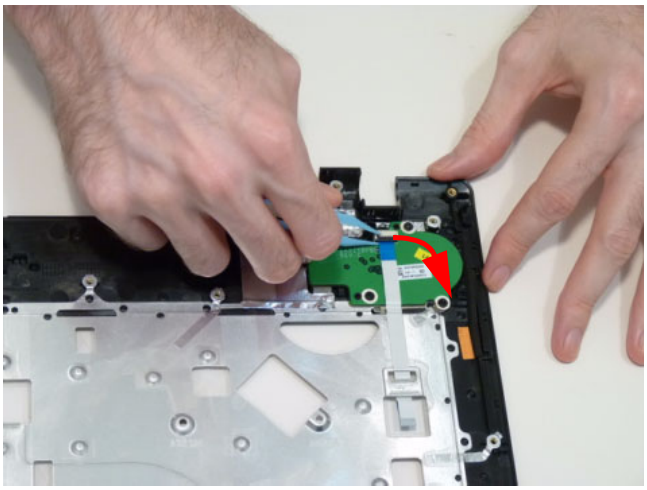

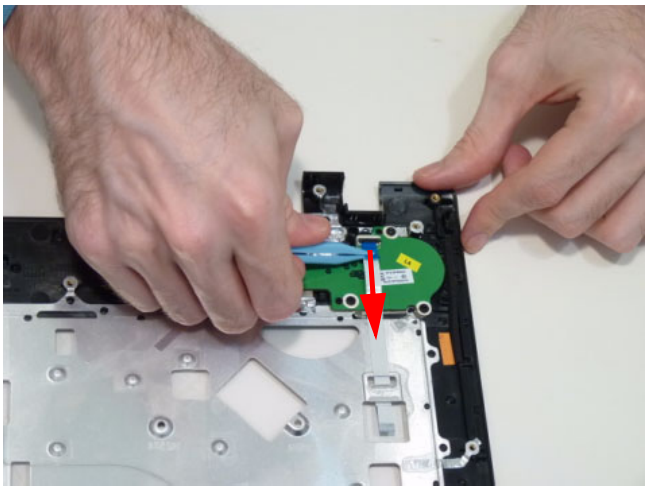

Downloaded from www.Manualslib.com manuals search engine

3. Remove the three (3) screws.

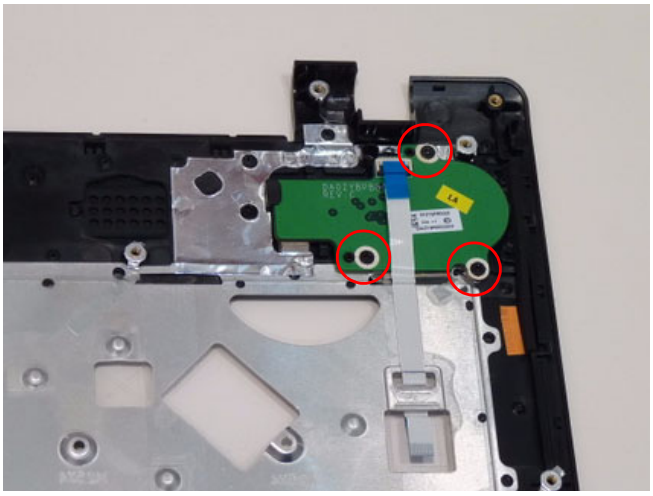

Step	Screw	Quantity	Screw Type
Power Board Disassembly	2.0*3	3	

4. Lift the power board away.

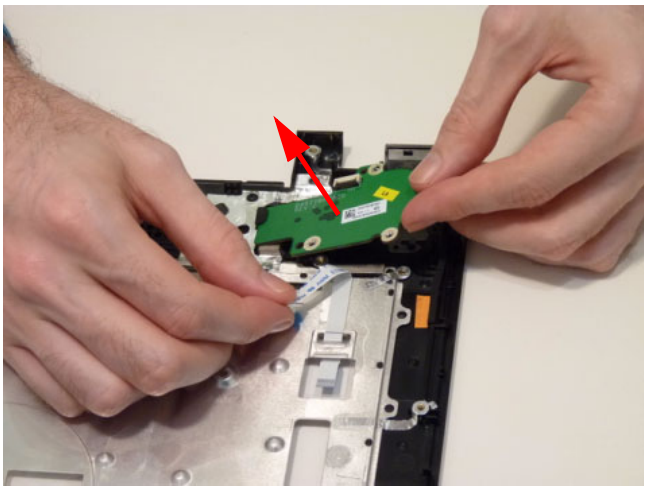

Downloaded from www.Manualslib.com manuals search engine

LCD Module Disassembly Process

IMPORTANT: Cable paths and positioning may not represent the actual model. During the removal and replacement of components, ensure all available cable channels and clips are used and that the cables are replaced in the same position.

NOTE: The product previews seen in the disassembly procedures may not represent the final product color or configuration.

LCD Module Disassembly Flowchart

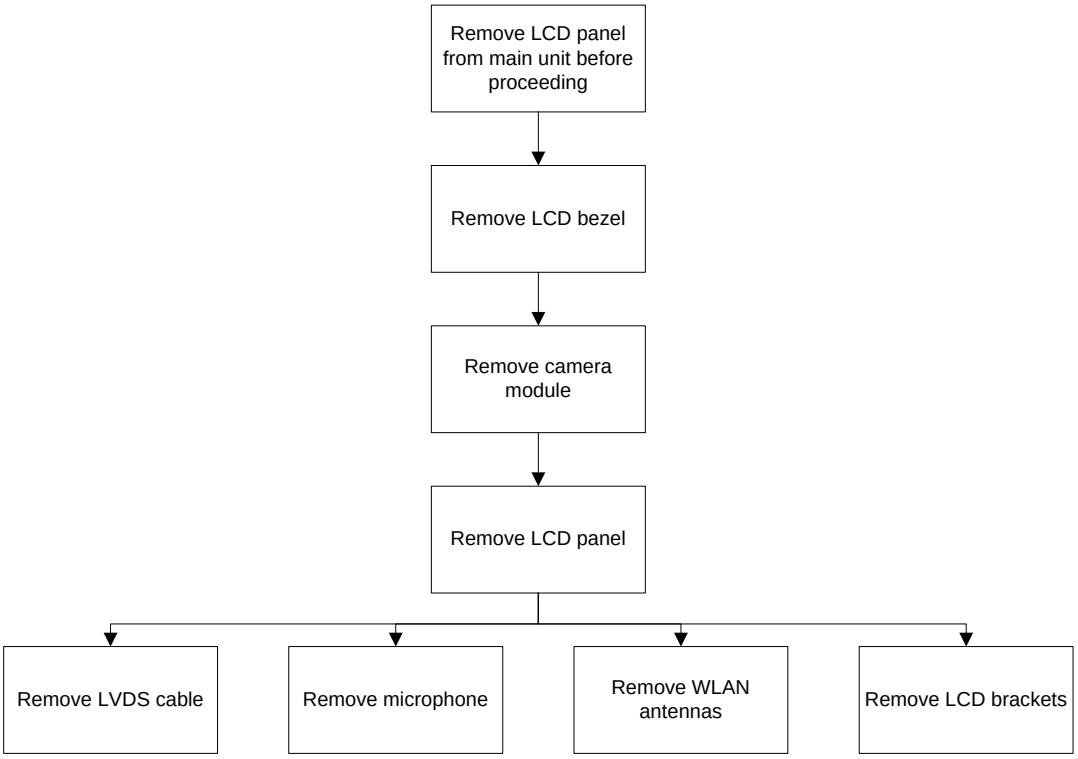

Screw List

Step	Screw	Quantity	Part No.
LCD Bezel Disassembly	M2.5*6L(BNI)	2	86.A08V7.004
LCD Panel Disassembly	M2.0*3L(BK)	6	86.ARE07.002
Left Hinge Disassembly	M2.5*5L(NI)	3	TBD
Right Hinge Disassembly	M2.5*5L(NI)	3	

Downloaded from www.Manualslib.com manuals search engine

Removing the LCD Bezel

1. See “Removing the Upper Cover” on page 68.
2. Remove the two (2) screws from the LCD bezel as shown.

Step	Screw	Quantity	Screw Type.
Removing the LCD Bezel	2.5*4	2	

3. Pry the bezel away from the top-center and then work around until the entire bezel is detached.

Downloaded from www.Manualslib.com manuals search engine

4. Remove the bezel from the LCD module.

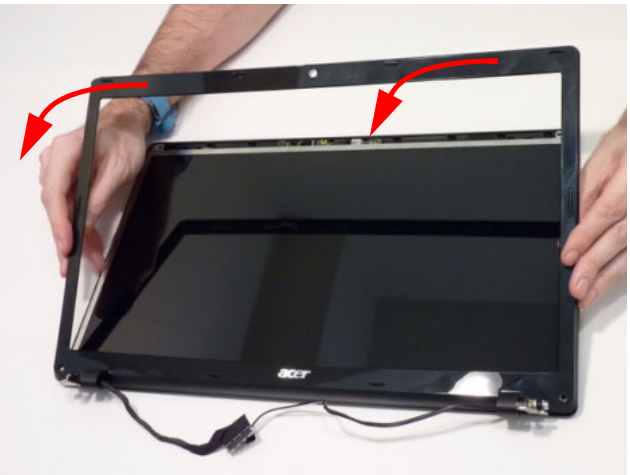

Downloaded from www.Manualslib.com manuals search engine

Removing the Camera Board

1. See “Removing the LCD Bezel” on page 90.
2. Pull up the camera board.

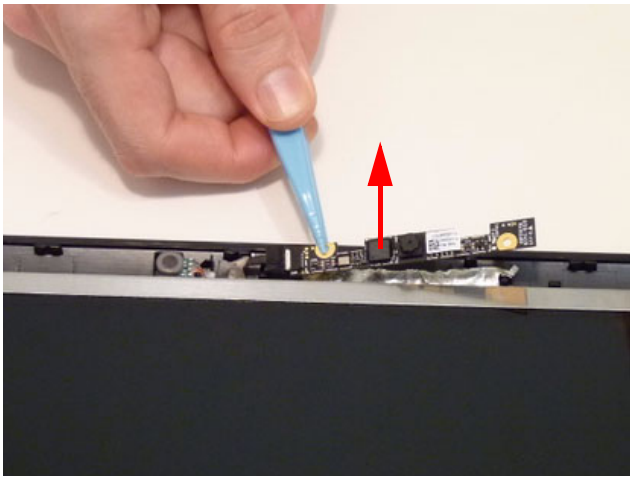

3. Disconnect the camera connector.

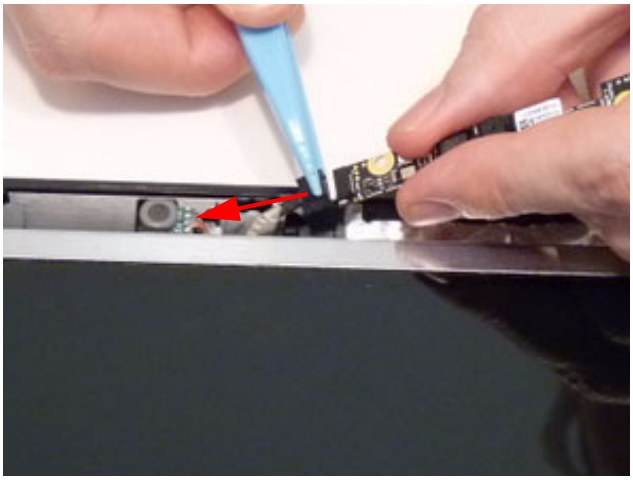

Downloaded from www.Manualslib.com manuals search engine

Removing the LCD Panel

1. See “Removing the LCD Bezel” on page 90.
2. Remove the six (6) screws from the LCD panel.

Step	Screw	Quantity	Screw Type
LCD Panel Disassembly	2.5*5L Ni	6	

3. Remove LVDS cable from cable guides

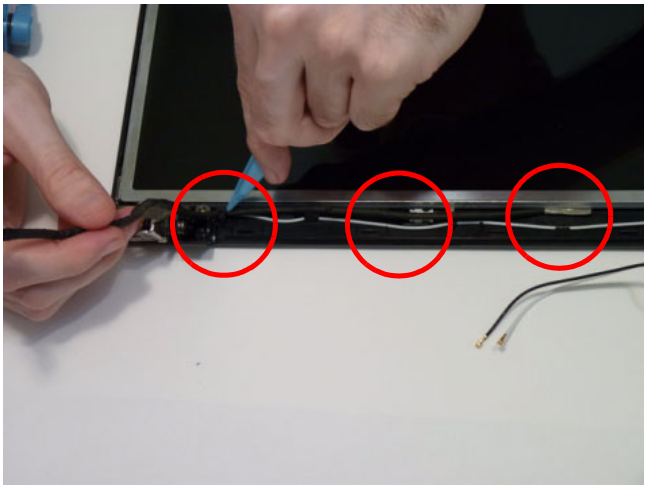

Downloaded from www.Manualslib.com manuals search engine

4. Disconnect the microphone cable.

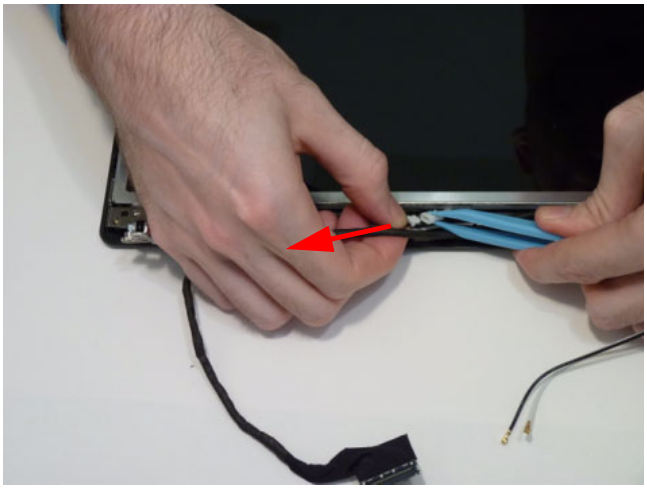

5. Lift the LCD panel out.

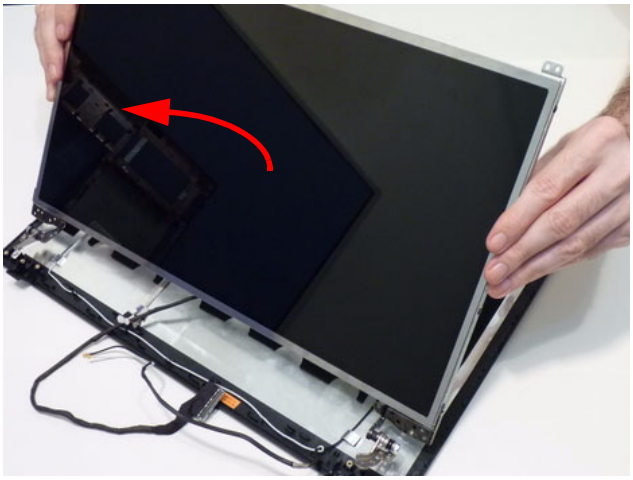

6. Remove 6 screws from the LCD brackets (3 on each side).

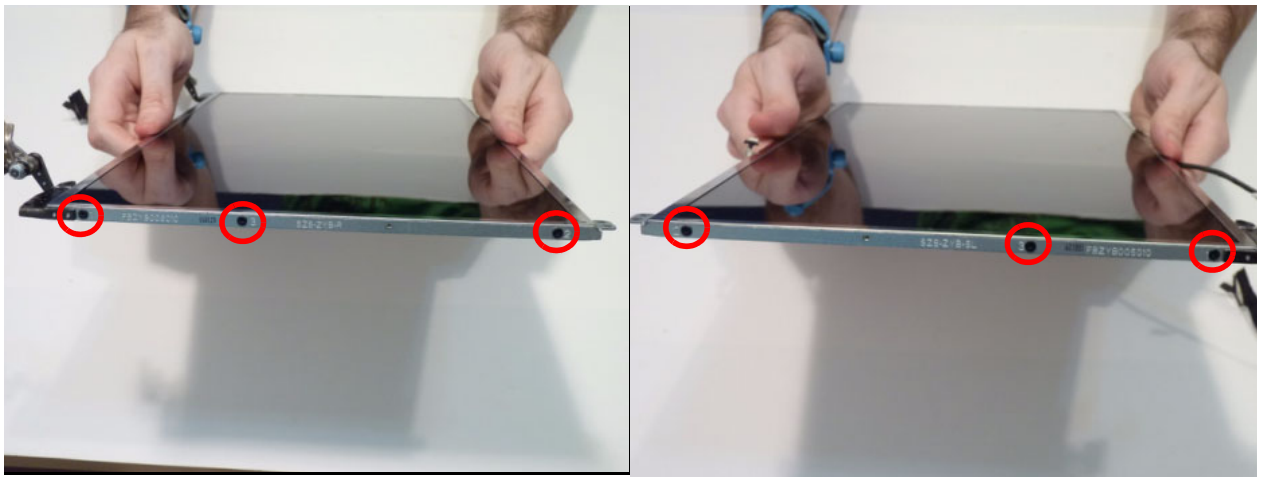

Step	Screw	Quantity	Screw Type
LCD Bracket Disassembly	2.5*3L	6	

Downloaded from www.Manualslib.com manuals search engine

7. Separate the brackets from the panel as shown.

8. Peel the LVDS cable off the panel.

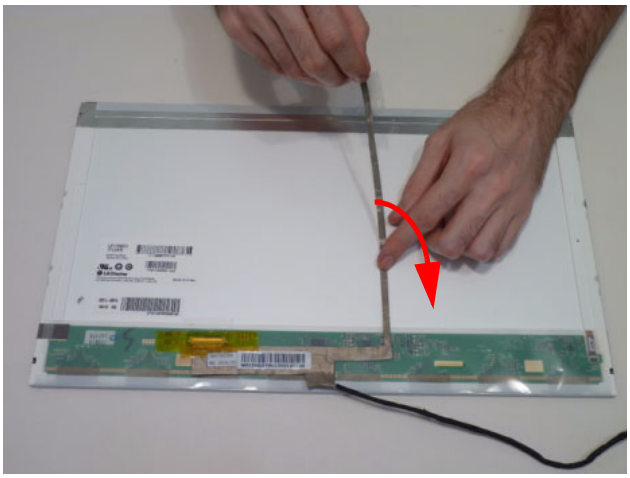

9. Continue peeling the cable off the LCD panel.

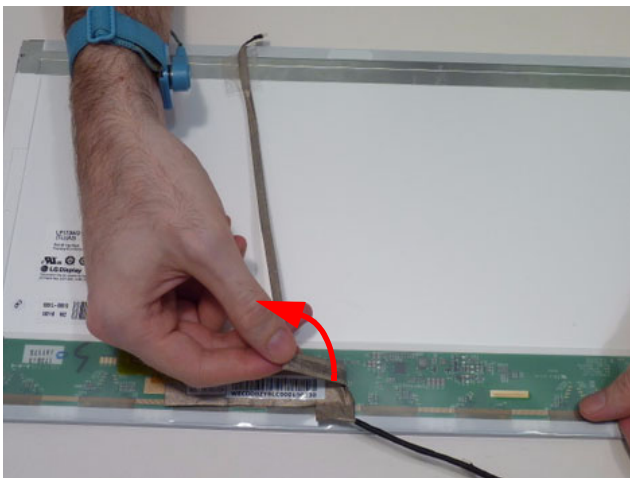

Downloaded from www.Manualslib.com manuals search engine

10. Peel back the mylar tape and disconnect the LVDS cable.

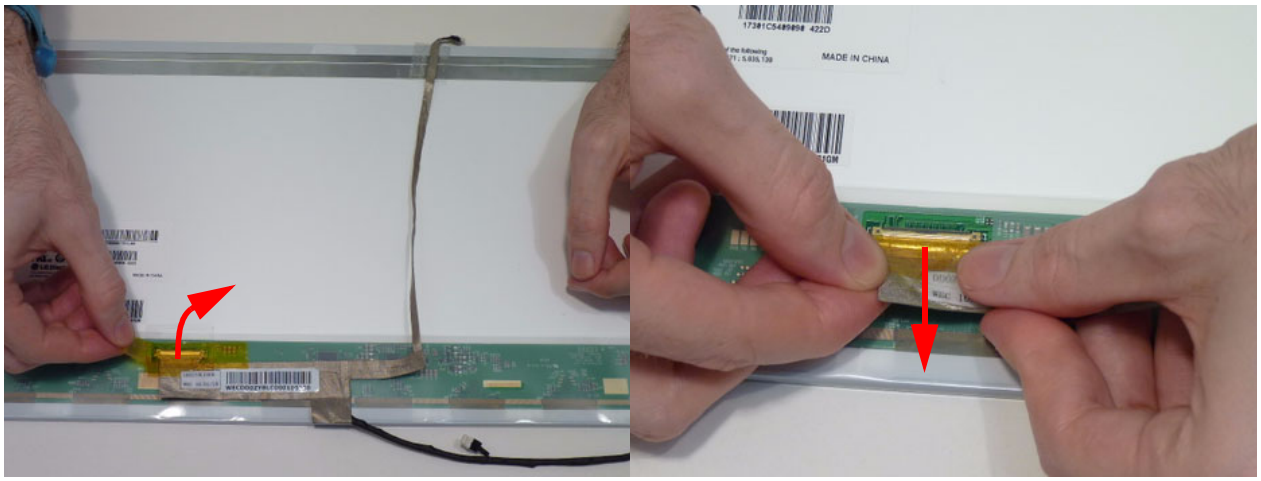

11. Remove the adhesive foil tabs covering the microphone cable.

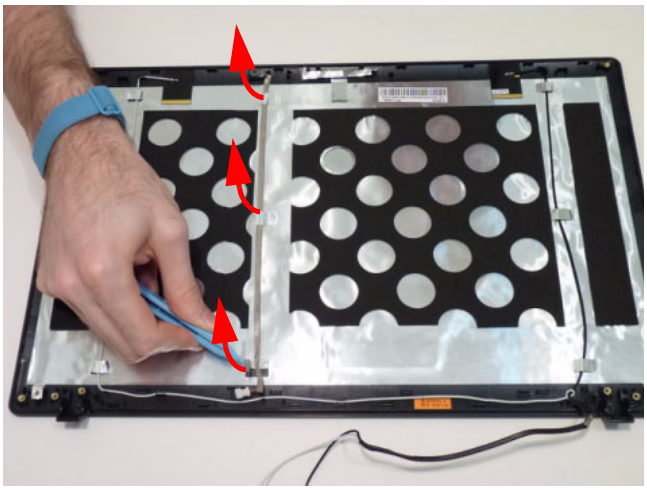

12. Lift up the microphone cable and remove it from the LCD cover.

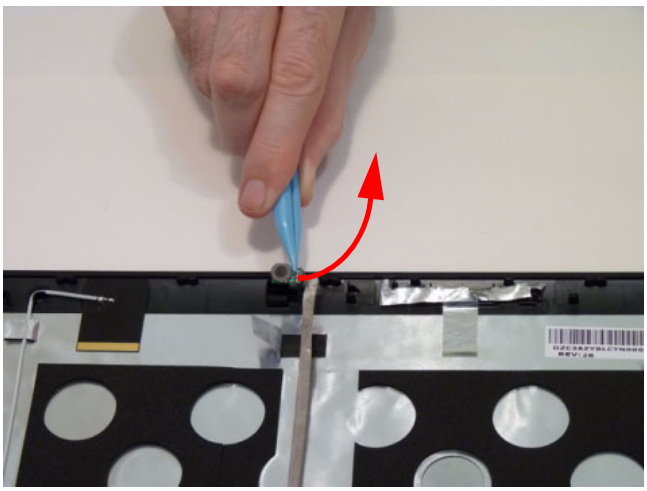

Downloaded from www.Manualslib.com manuals search engine

Removing the Antennas

1. See “Removing the LCD Panel” on page 93.
2. Remove the antenna cables from the retention guides.

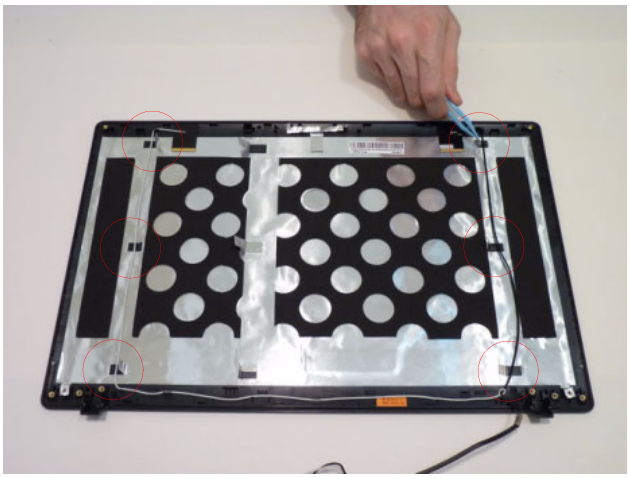

3. Free the cables completely.

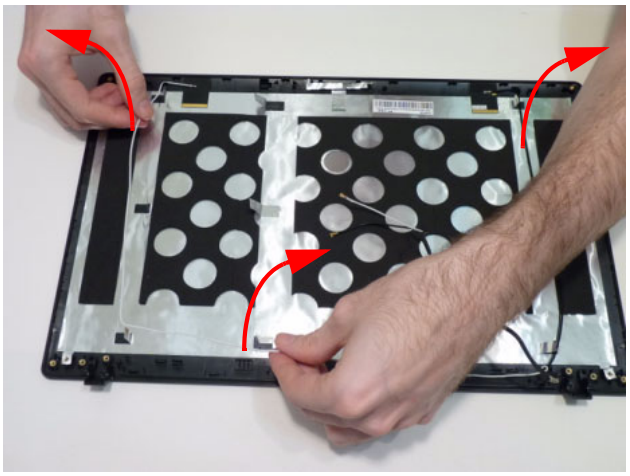

4. Pry the left antenna from the casing.

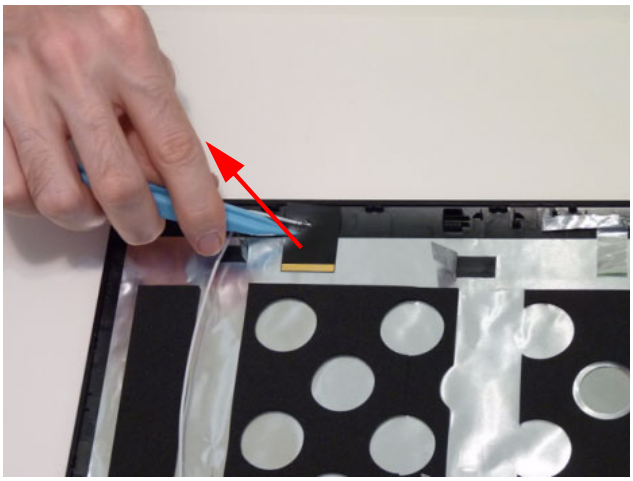

Downloaded from www.Manualslib.com manuals search engine

5. Pry the right antenna from the casing.

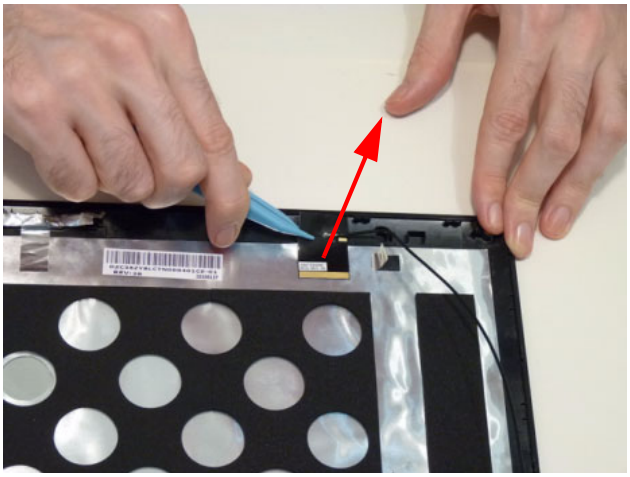

Downloaded from www.Manualslib.com manuals search engine

LCD Reassembly Procedure

Replacing the Microphone

1. Lay the microphone cable in the LCD cover and replace the adhesive foil tabs.

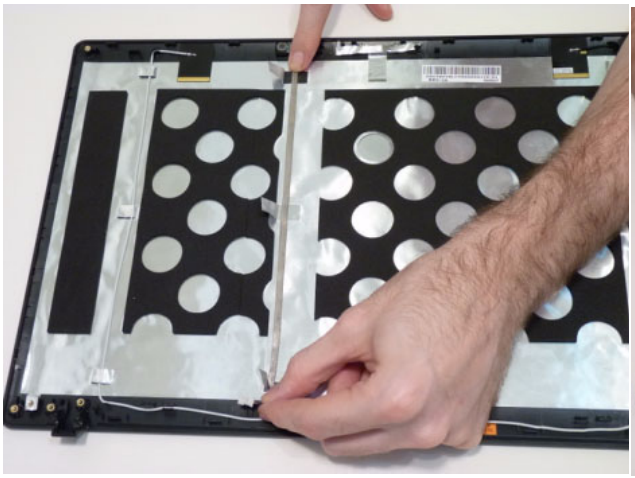

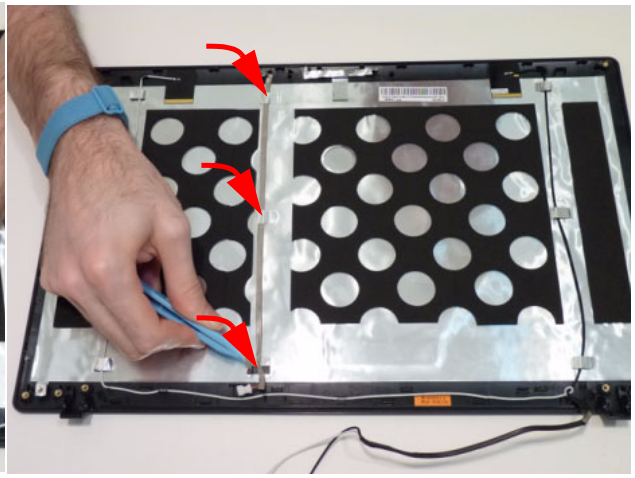

2. Replace the microphone.

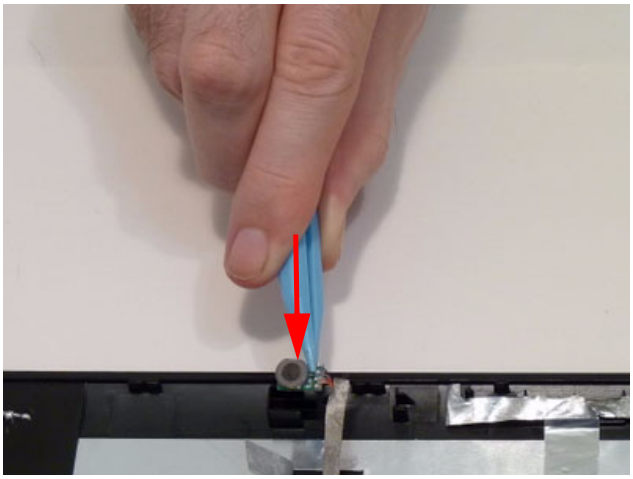

Downloaded from www.Manualslib.com manuals search engine

Replacing the Antennas

1. Adhere the left antenna down firmly onto the LCD module casing.

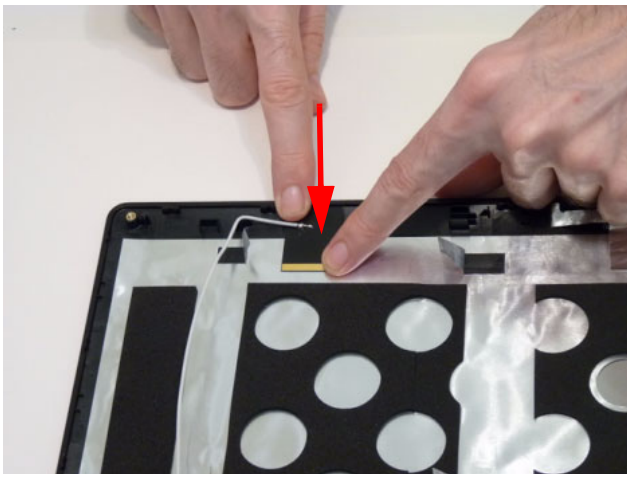

2. Adhere the right antenna down firmly onto the LCD module casing.

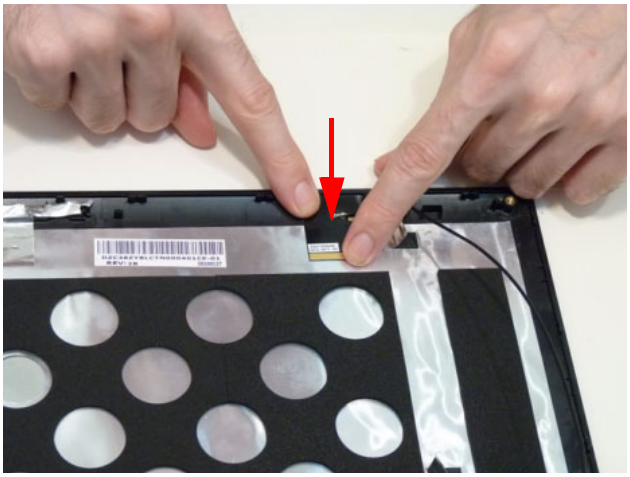

Downloaded from www.Manualslib.com manuals search engine

3. Lay the cables around the module edge.

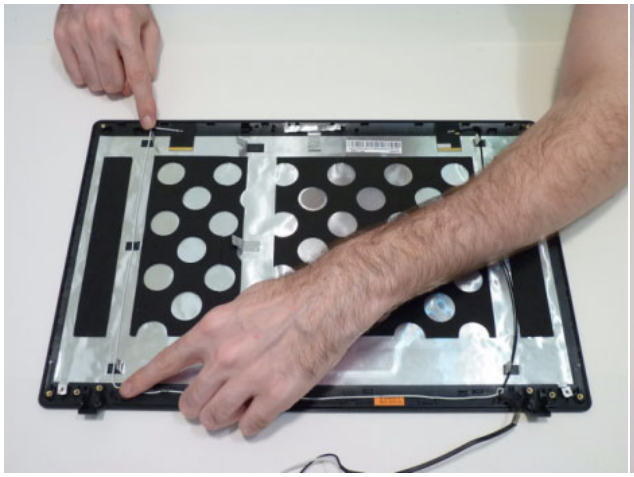

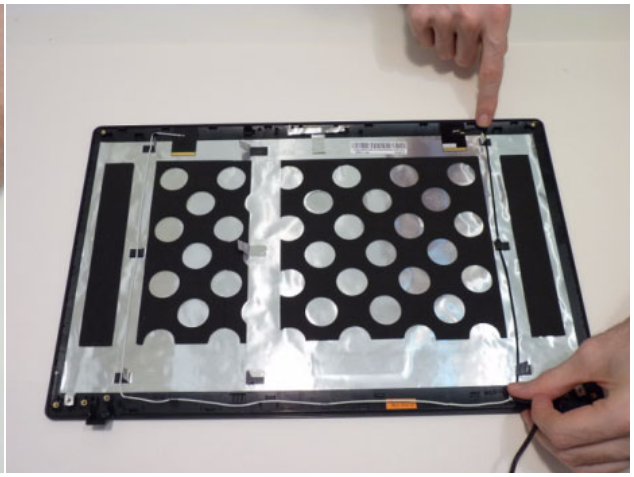

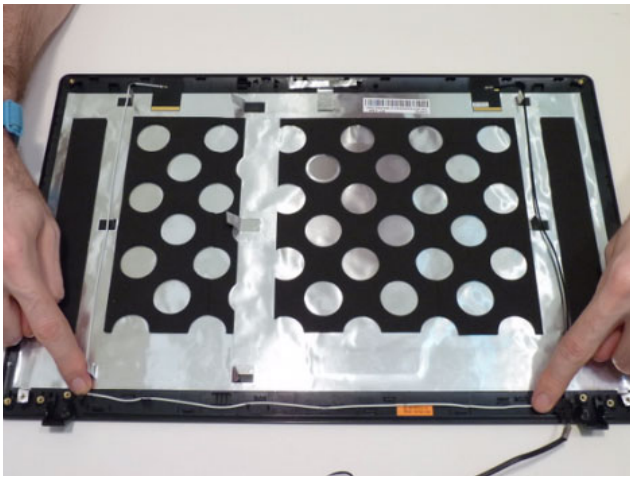

Downloaded from www.Manualslib.com manuals search engine

Replacing the LCD Panel

1. Connect the FPC cable connector.

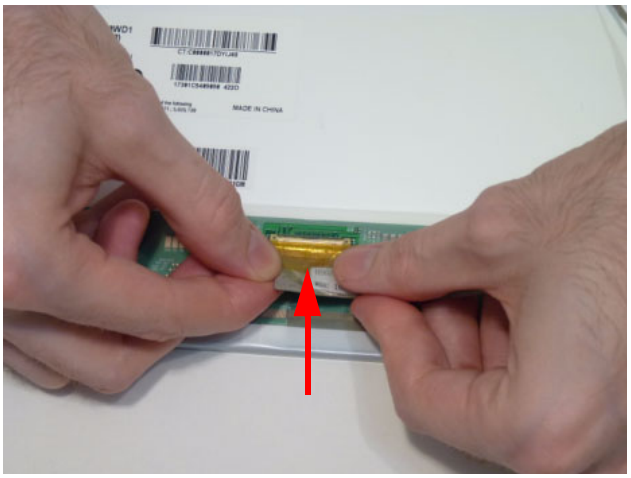

2. Place the protective clear adhesive mylar tape down firmly over the connector.

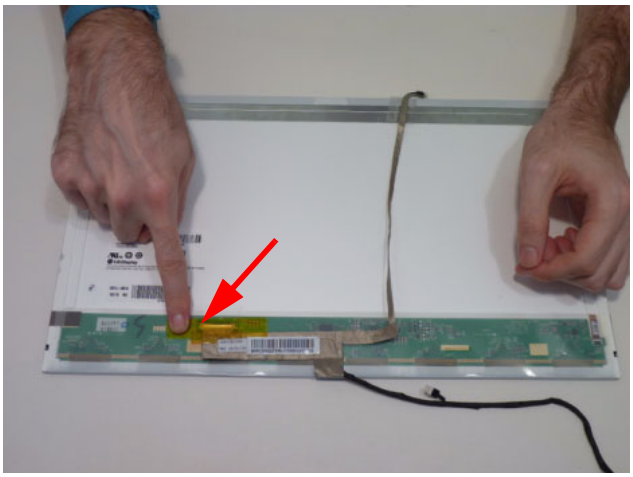

3. Continue adhering the webcam cable to the LCD panel.

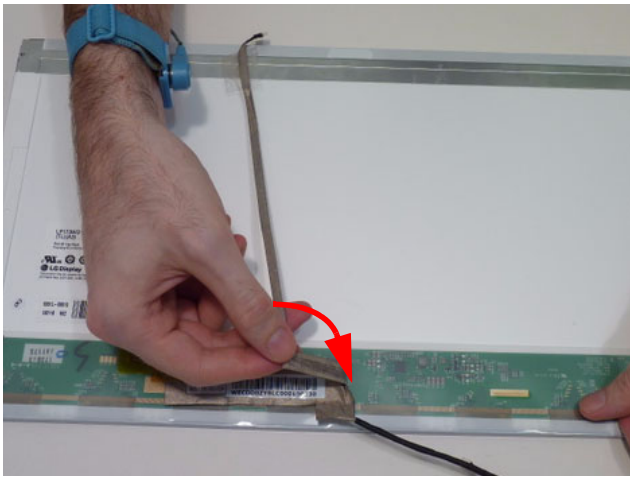

Downloaded from www.Manualslib.com manuals search engine

4. Adhere the webcam cable to the back of the LCD panel, in parallel with the panel edges.

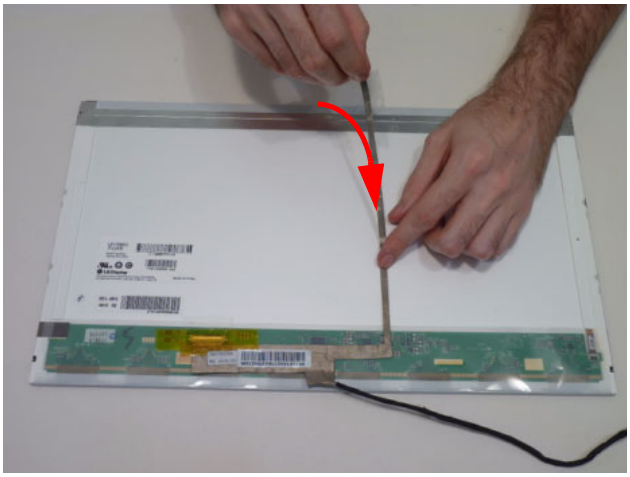

5. Replace the brackets to the panel as shown.

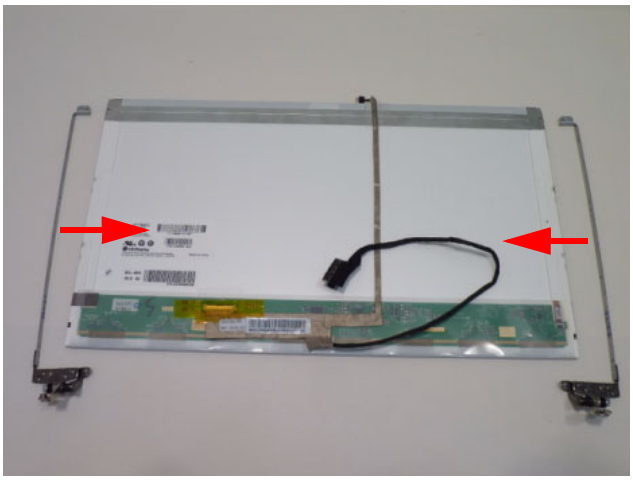

6. Replace the six (6) screws to the LCD brackets (3 on each side).

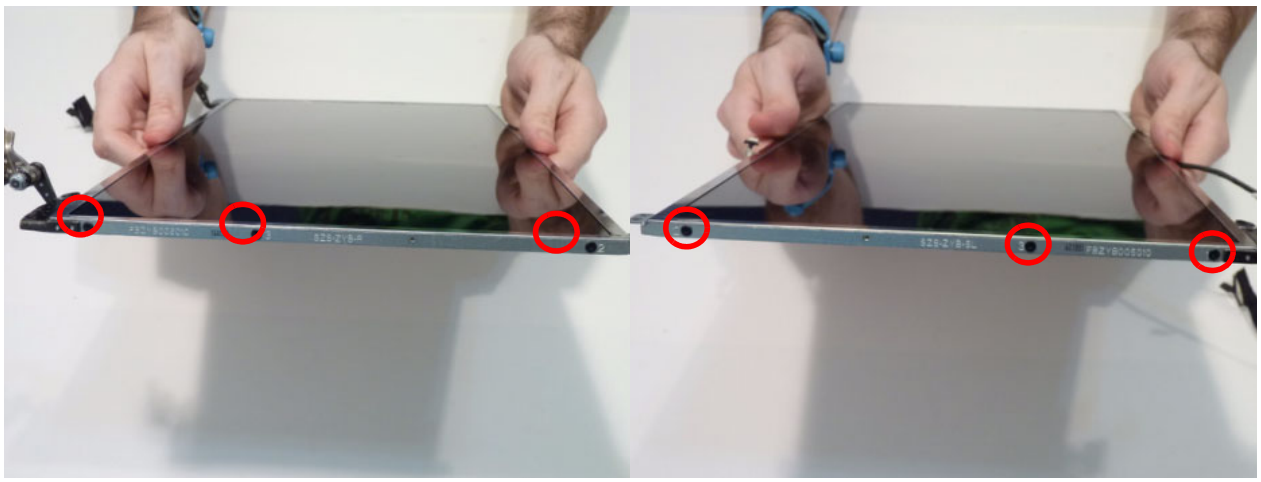

Downloaded from www.Manualslib.com manuals search engine

7. Replace the LCD panel into the top cover.

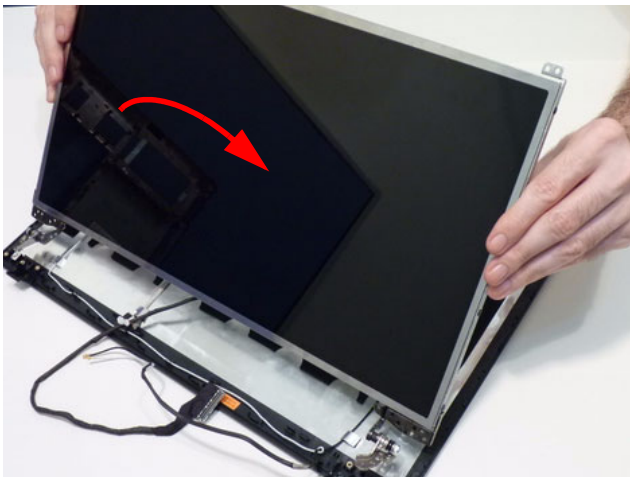

8. Replace the six (6) screws to the LCD panel.

9. Connect the microphone cable.

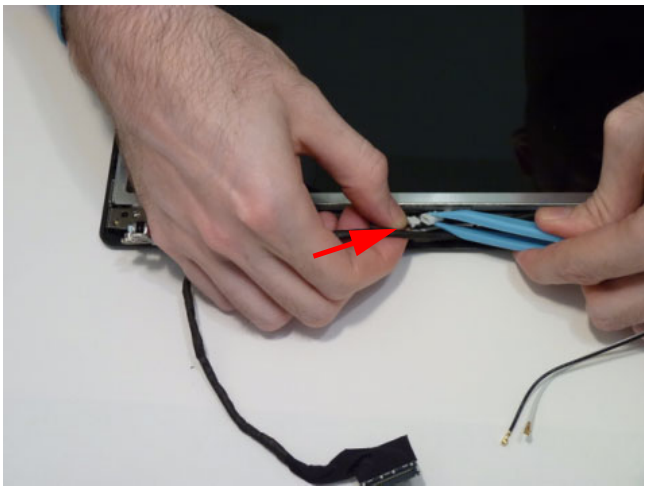

Downloaded from www.Manualslib.com manuals search engine

10. Place the LVDS cable into cable guides

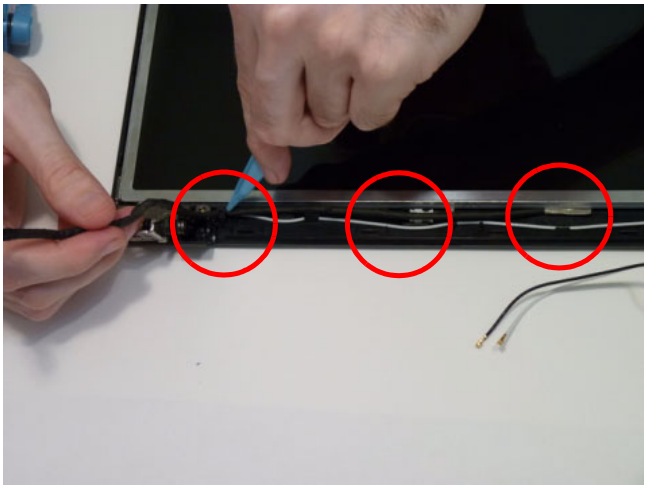

Downloaded from www.Manualslib.com manuals search engine

Replacing the Camera Board

1. Connect the cable to the Camera Board.

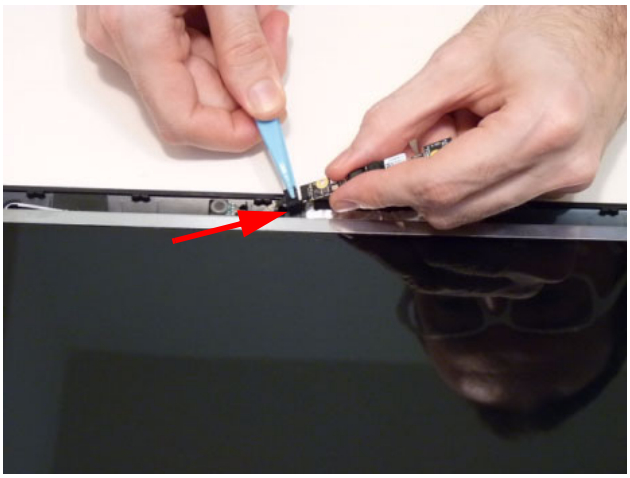

2. Lay the Camera board down and press firmly to apply the adhesive.

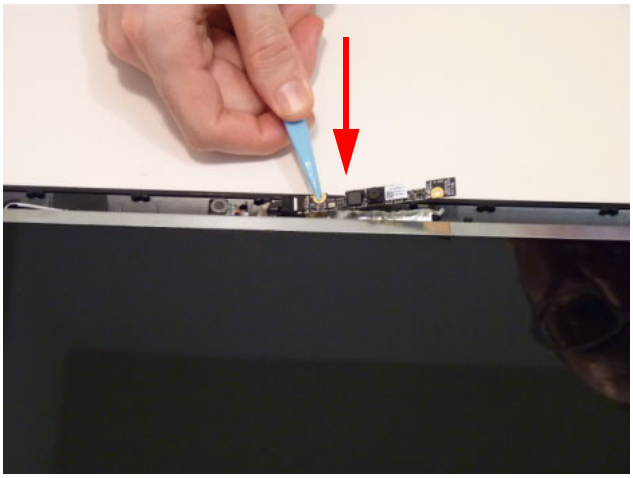

Downloaded from www.Manualslib.com manuals search engine

Replacing the LCD Bezel

1. Place the bezel hinge covers over the hinges. Ensure the cables are correctly exiting the hinges.

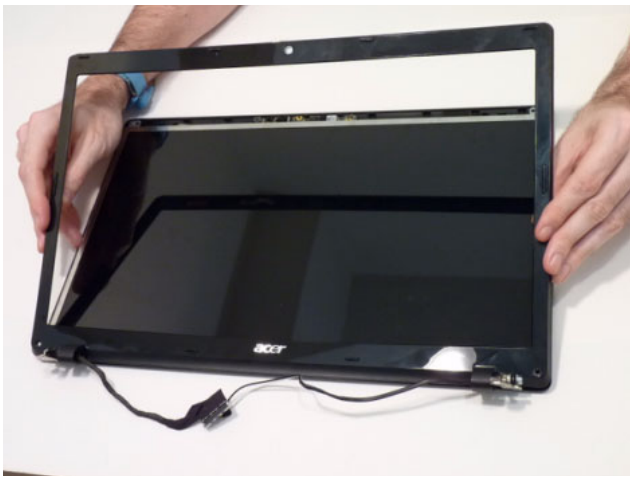

2. Press down on the top middle edge of the bezel to engage the locking clips.

3. Press down on the bezel edge working simultaneously around the edges to the bottom.

Downloaded from www.Manualslib.com manuals search engine

4. Replace the two (2) bezel screws.

Downloaded from www.Manualslib.com manuals search engine

Main Unit Reassembly Process

Replacing the Power Assembly

1. Place the DC jack into the lower cover.

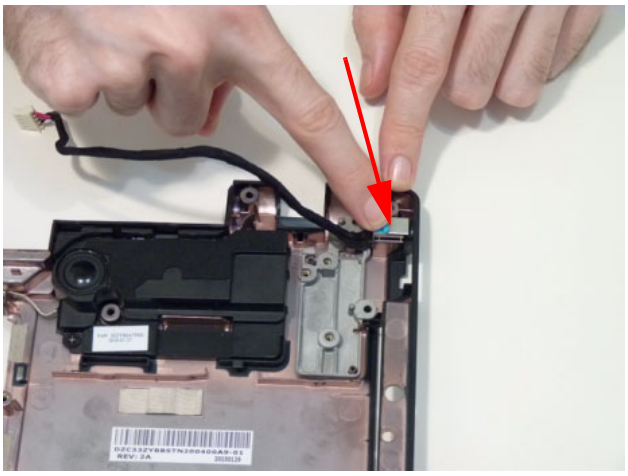

2. Lay the cables in the retention guides.

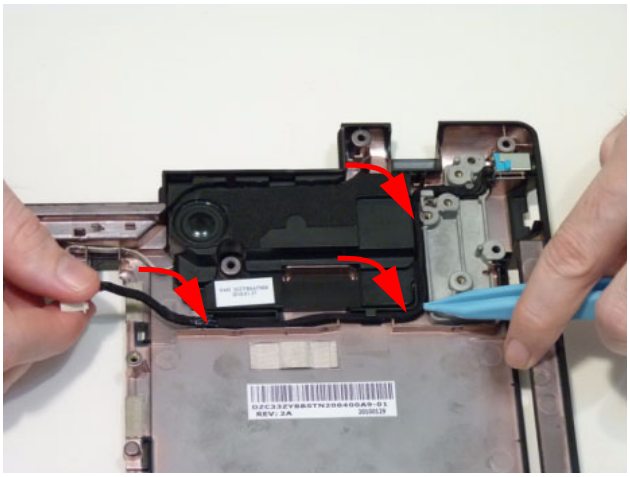

Downloaded from www.Manualslib.com manuals search engine

Replacing the PCH Thermal Module

1. Place the PCH thermal module on the PCH chip.

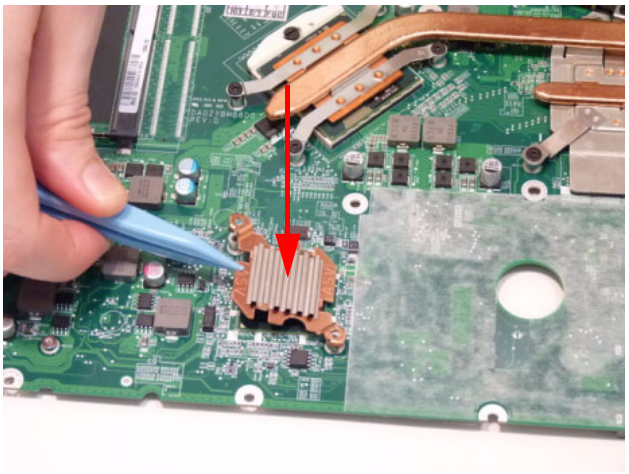

2. Replace the two (2) screws.

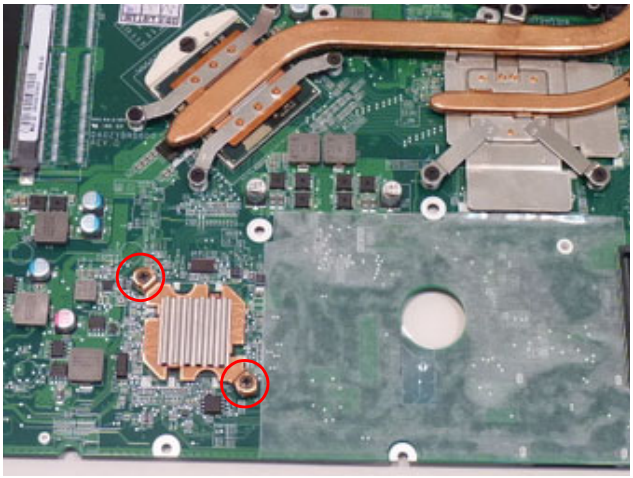

Replacing the CPU

IMPORTANT: The CPU has a Pin1 locator that must be positioned corresponding to the marker on the CPU socket.

1. Place the CPU into the CPU socket as shown, taking note of the Pin1 locator.

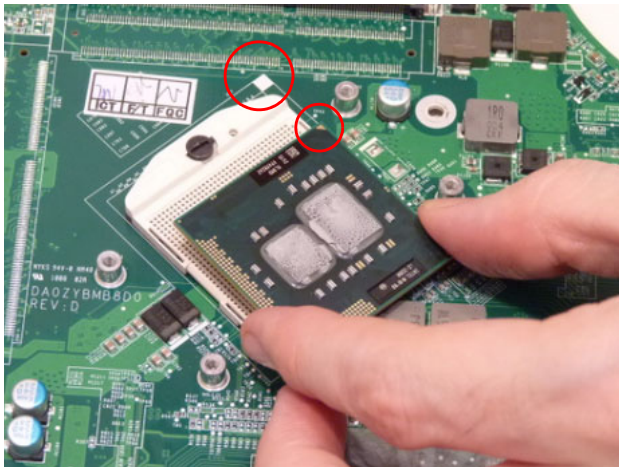

Downloaded from www.Manualslib.com manuals search engine

2. Using a flat-bladed screw driver, rotate the CPU locking screw 180° clockwise to secure the CPU in place.

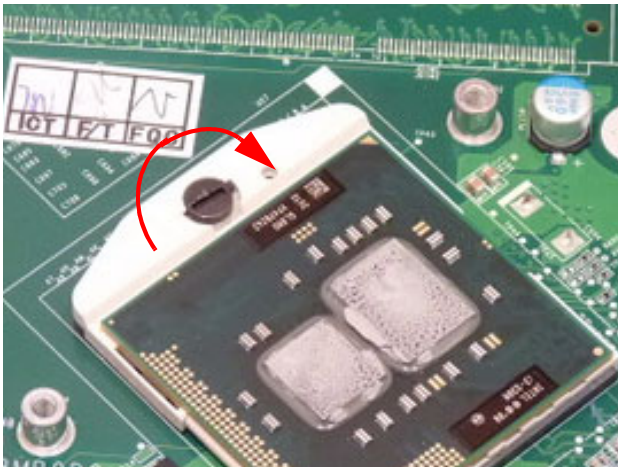

Downloaded from www.Manualslib.com manuals search engine

Replacing the Thermal Module

IMPORTANT: Apply a suitable thermal grease and ensure all heat pads are in place before replacing the Thermal Module.

The following thermal grease types are approved for use:

- Silmore GP50
- Honeywell
- Jet Motor 7762

The following thermal pads are approved for use:

- Eapus XR-PE

1. See “Replacing the CPU” on page 110.
2. Remove all traces of thermal grease from the CPU using a lint-free cloth or cotton swab and Isopropyl Alcohol, Acetone, or other approved cleaning agent.
3. Apply a small amount of thermal grease to the centre of the CPU—there is no need to spread the grease manually, the force used during the installation of the Thermal Module is sufficient.
4. Align the screw holes on the Thermal Module and Mainboard then replace the module. Keep the module as level as possible to spread the thermal grease evenly.
5. Replace the seven (7) securing screws to secure the Thermal Module in place.

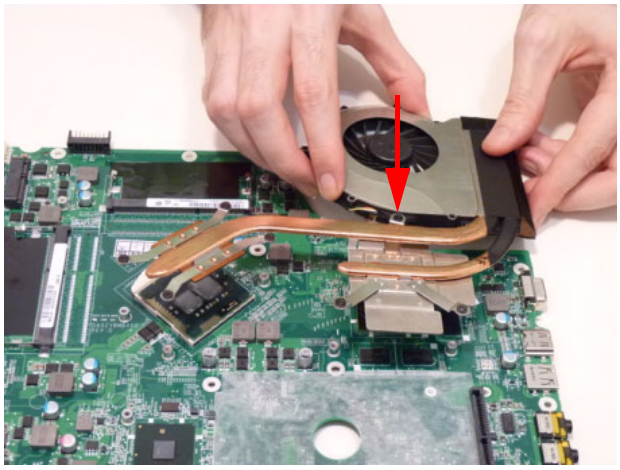

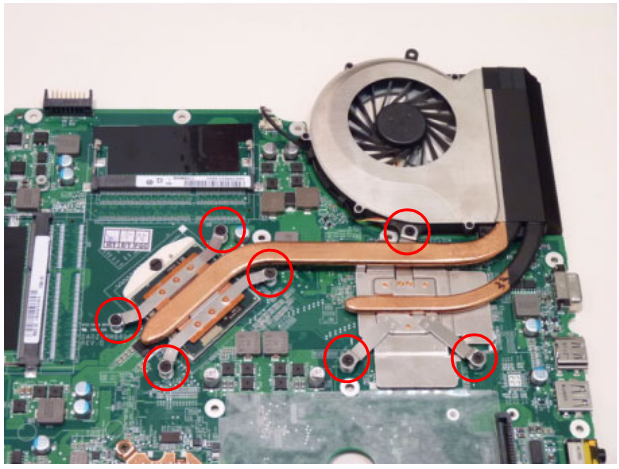

6. Connect the fan cable.

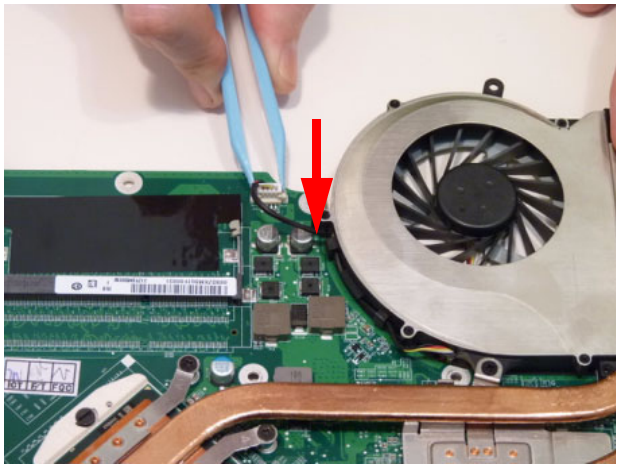

Downloaded from www.Manualslib.com manuals search engine

Replacing the RTC Battery

1. Push the RTC battery into the cradle on the mainboard, plus (+) side up.

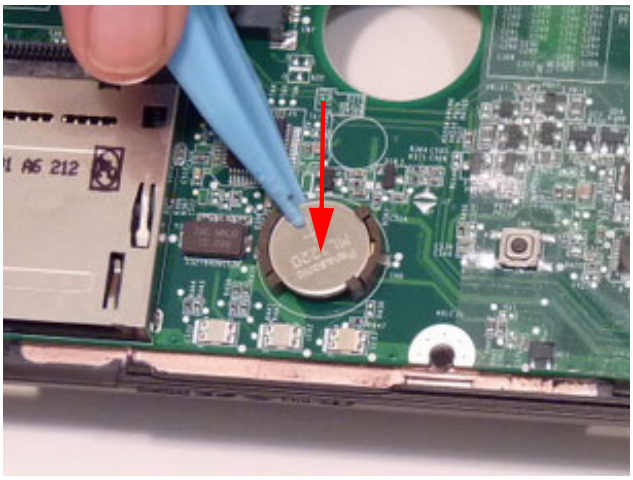

Downloaded from www.Manualslib.com manuals search engine

Removing the LAN Board

1. Line up the screw holes, then replace the LAN board onto the mainboard.

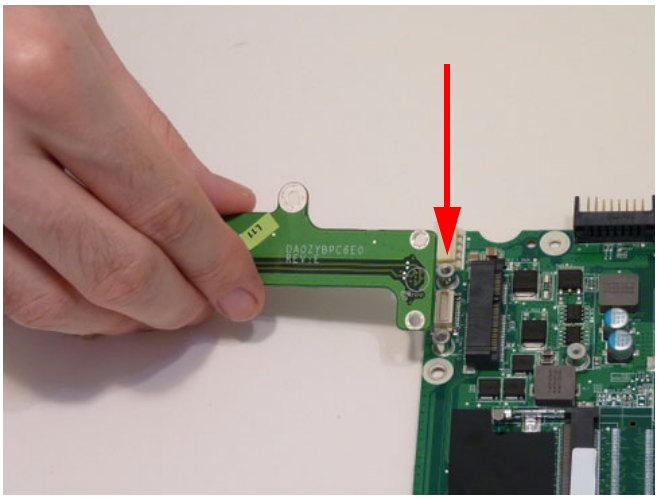

2. Replace the two (2) screws.

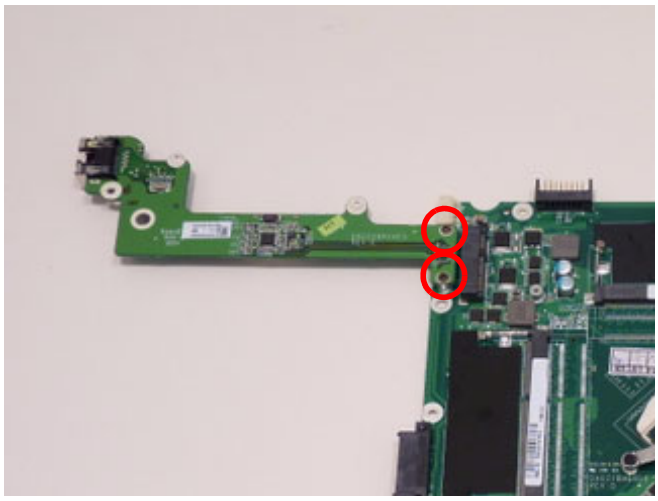

Downloaded from www.Manualslib.com manuals search engine

Replacing the Mainboard

1. Slide the main board external connector edge in first to the lower case, then lower into place.

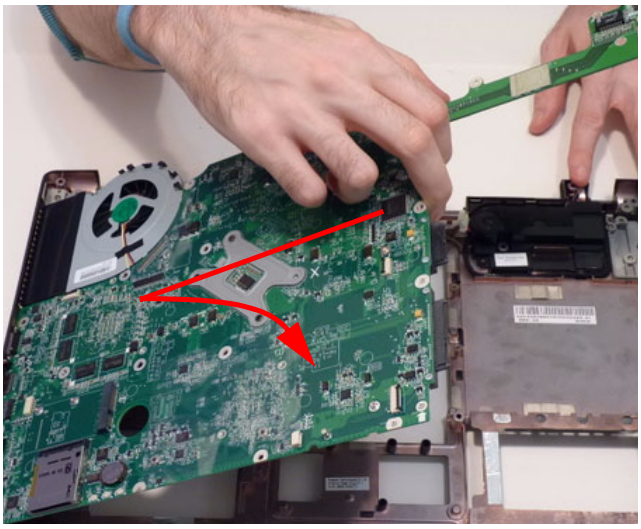

2. Replace the three (3) screws to secure the mainboard to the lower cover.

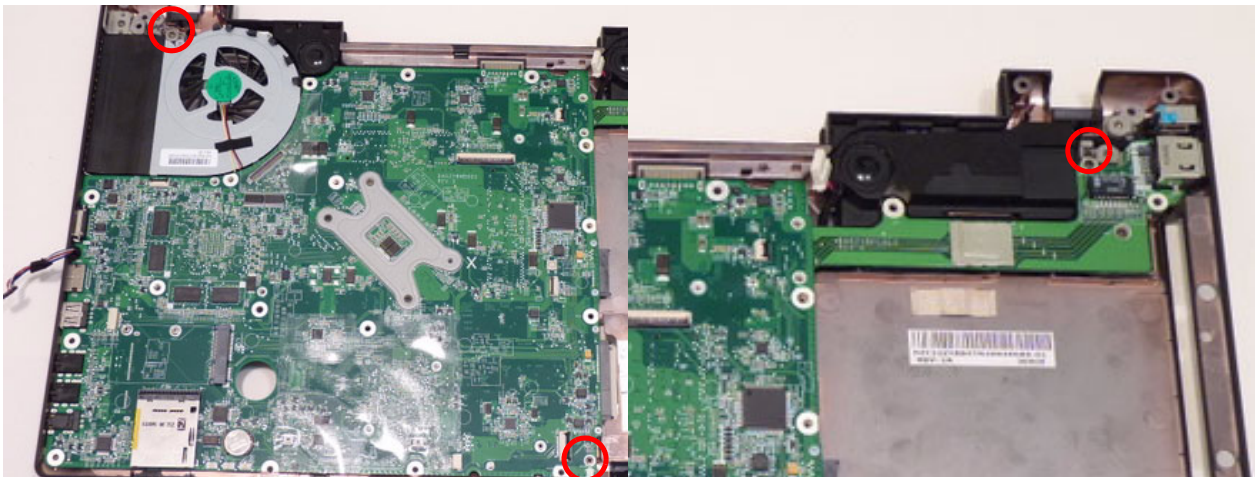

NOTE: Ensure the USB cable is clear of the mainboard before securing the screws.

3. Connect the CD-IN connector.

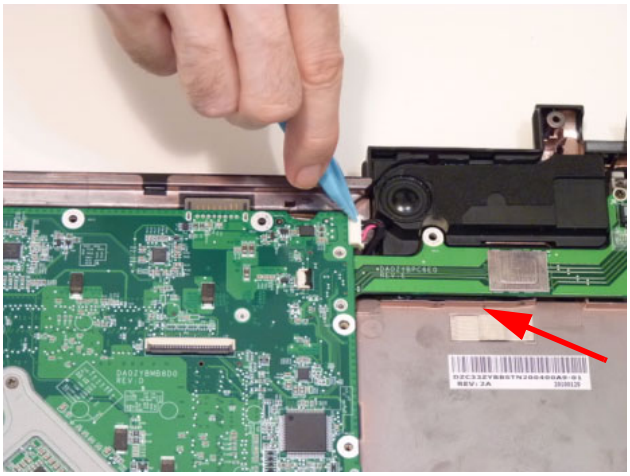

Downloaded from www.Manualslib.com manuals search engine

Replacing the USB board

1. Place the USB board into the lower case edge first.

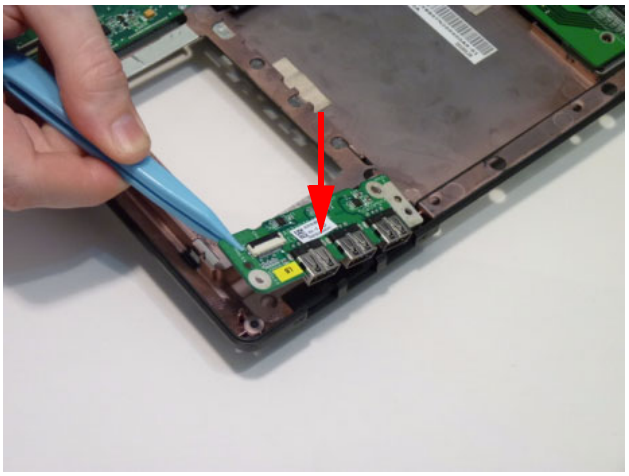

2. Replace the one (1) screw.

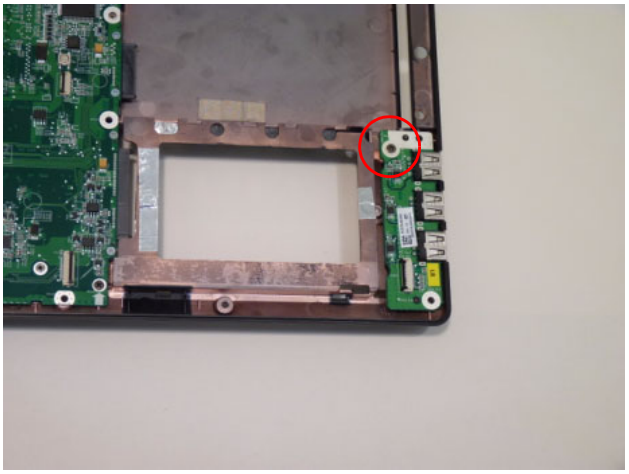

3. Adhere the USB board FFC to the chassis.

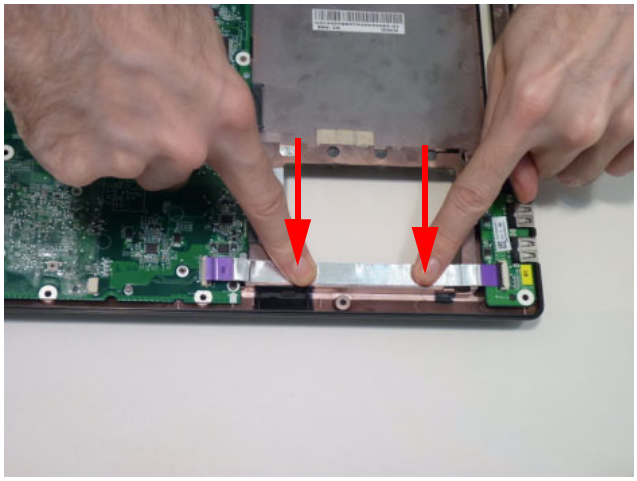

Downloaded from www.Manualslib.com manuals search engine

4. Connect and lock the USB board FFC to the USB board.

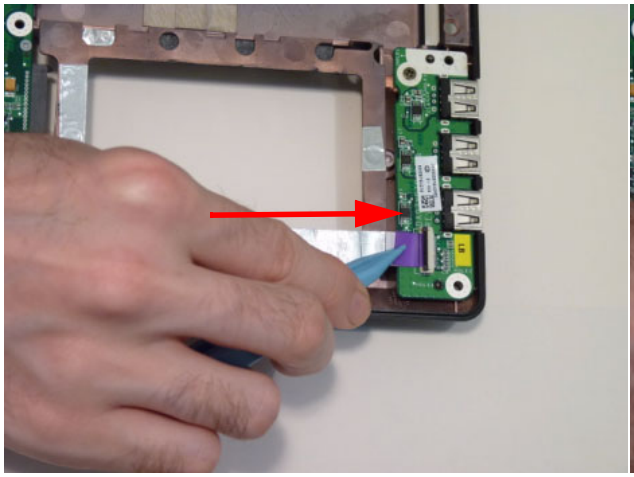

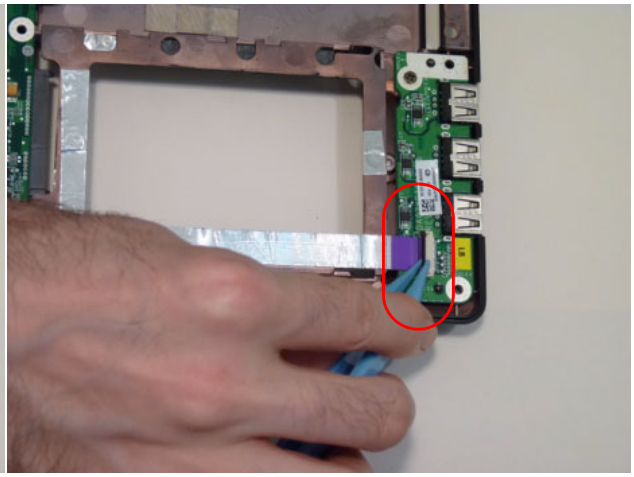

5. Connect and lock the USB board FFC to the mainboard.

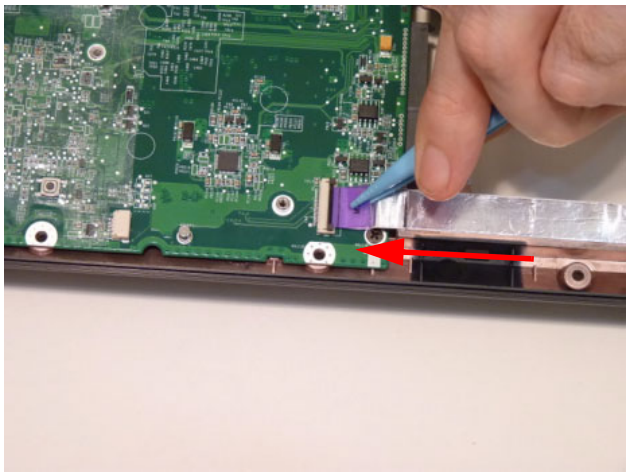

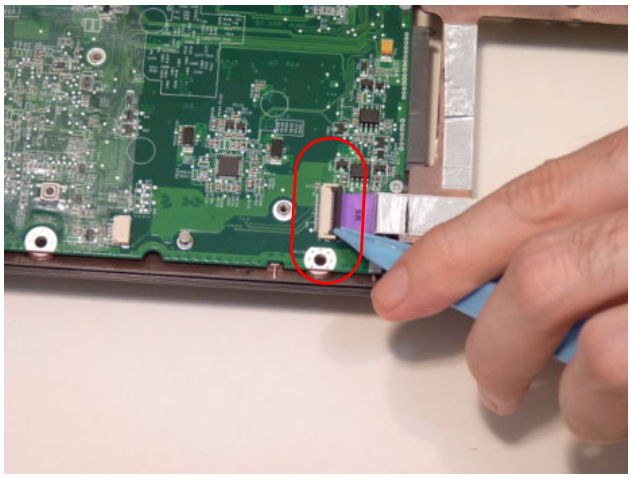

Downloaded from www.Manualslib.com manuals search engine

Replacing the Bluetooth Module

1. Connect the Bluetooth cable to the Bluetooth module.

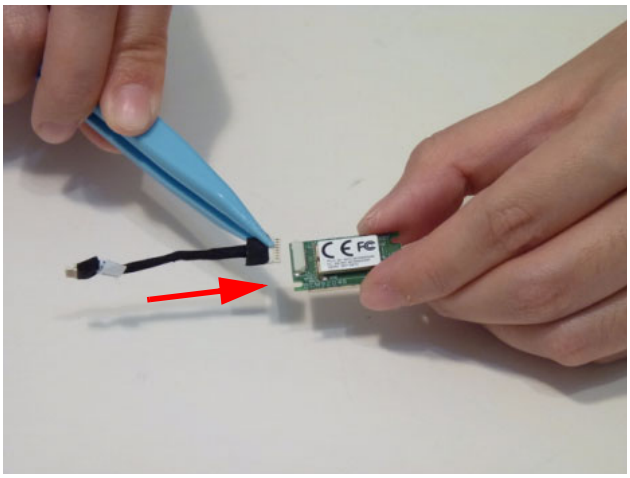

2. Place the Bluetooth module onto the mainboard pressing down firmly.

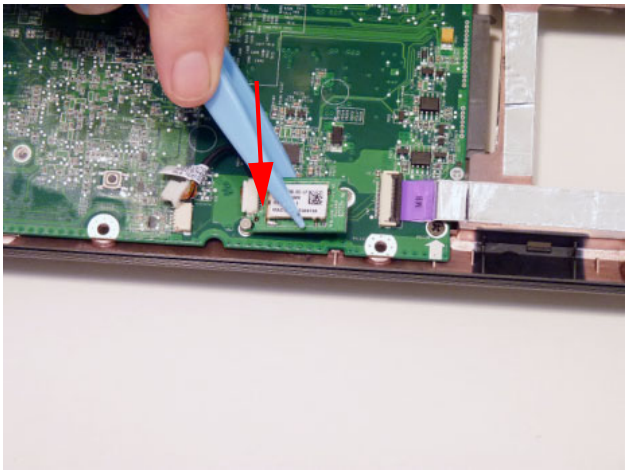

3. Replace the one (1) screw.

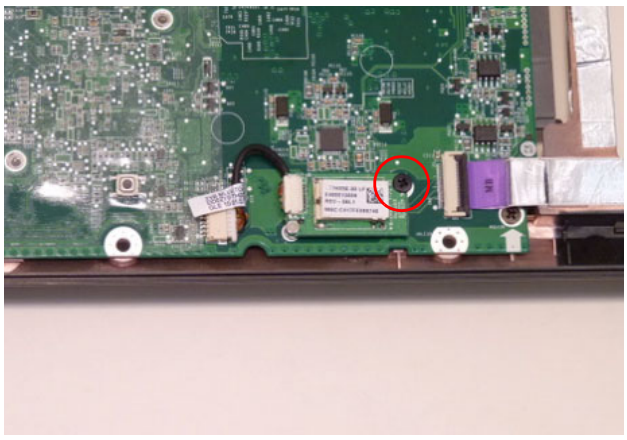

Downloaded from www.Manualslib.com manuals search engine

4. Connect the Bluetooth module cable to the main board.

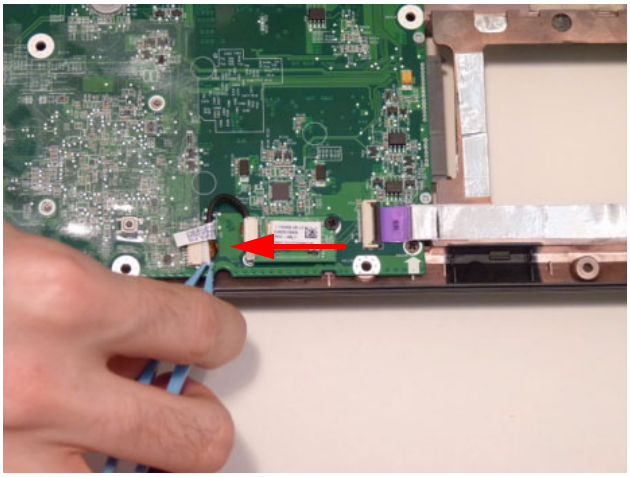

Downloaded from www.Manualslib.com manuals search engine

Replacing the LCD Module

1. Place the LCD module hinges into position on the lower case.

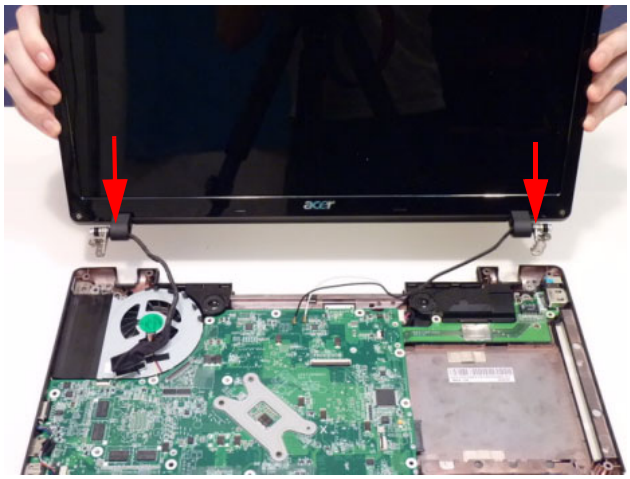

2. Replace the four (4) screws, two each in the left and right hinges.

3. Insert the antenna cables through the lower cover and pull through from the other side.

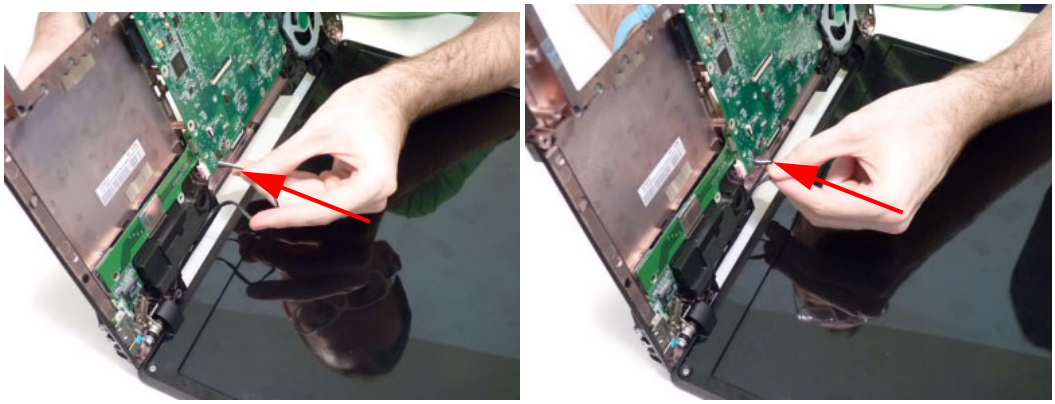

Downloaded from www.Manualslib.com manuals search engine

4. Connect the LVDC cable.

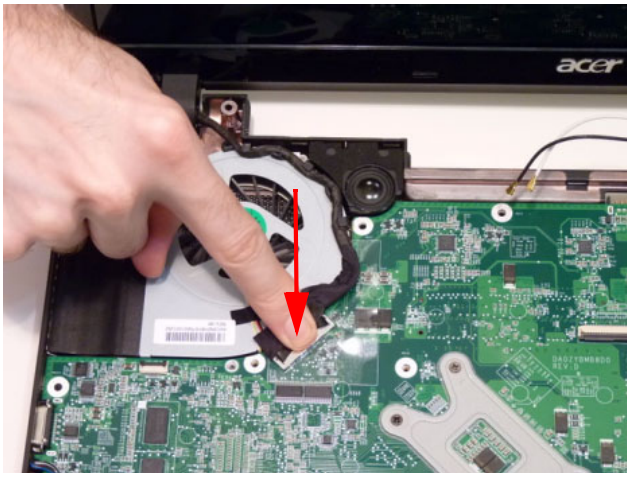

5. Lay the LVDS cable across the assembly as shown and press down firmly.

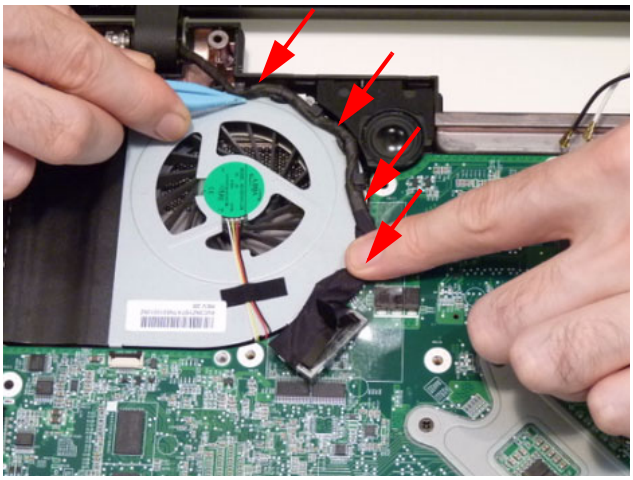

Downloaded from www.Manualslib.com manuals search engine

Replacing the Power Board

1. Place the power board into the upper cover.

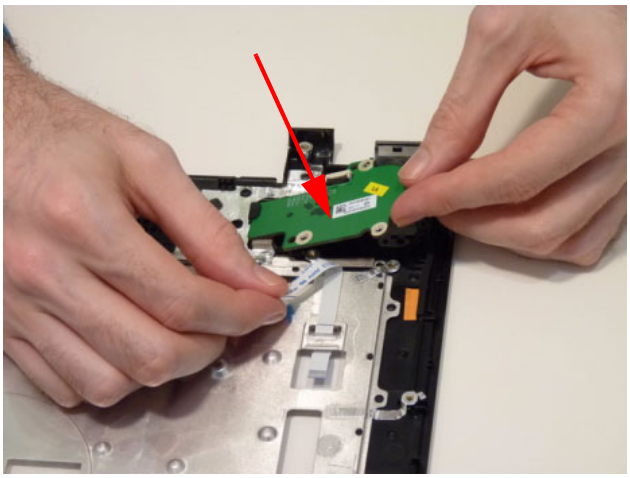

2. Replace the three (3) screws.

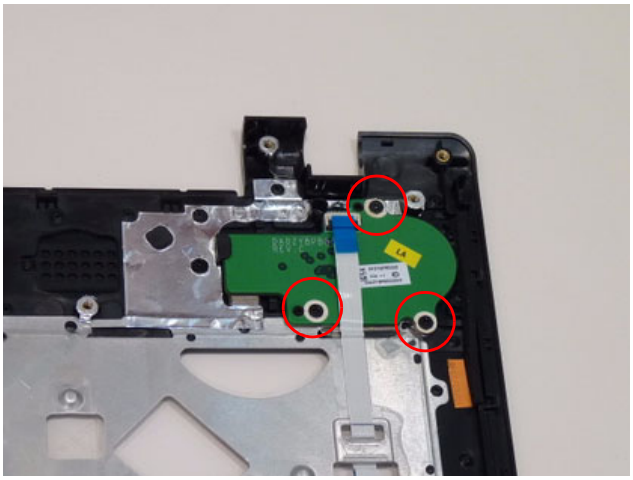

3. Connect and lock the FFC.

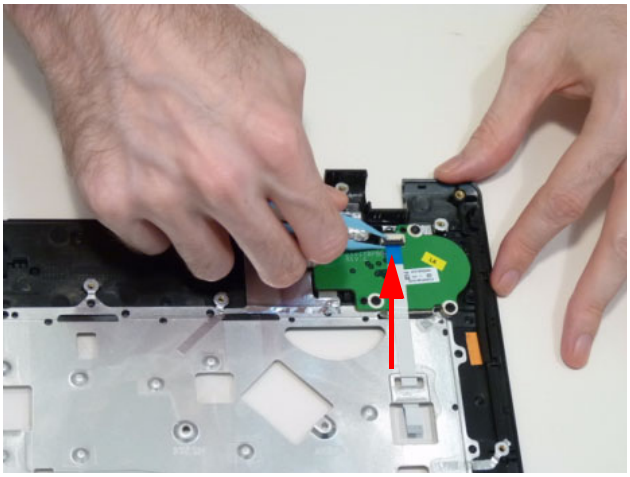

Downloaded from www.Manualslib.com manuals search engine

Replacing the Switch Board

1. Connect and lock the FFC.

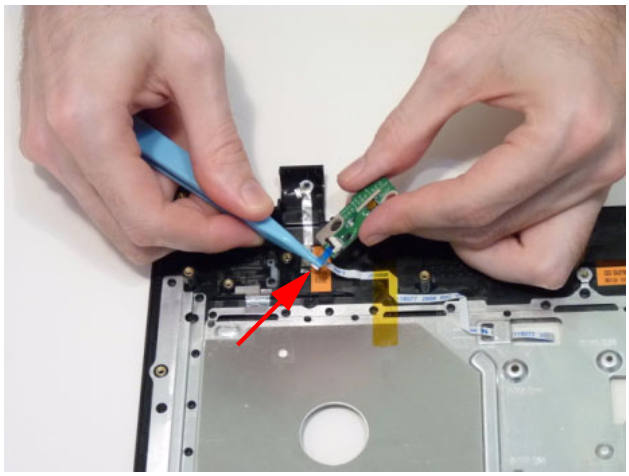

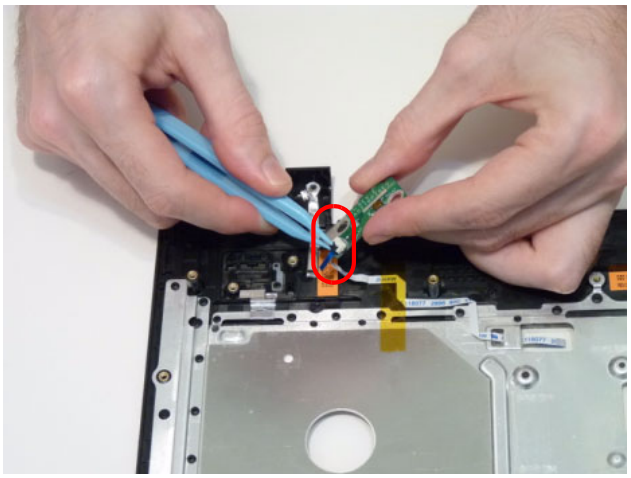

2. Turn the switch board over and place into the upper cover.

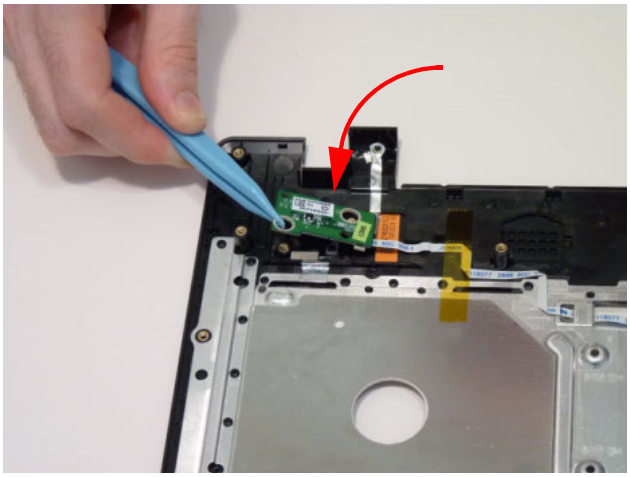

3. Replace the two (2) screws.

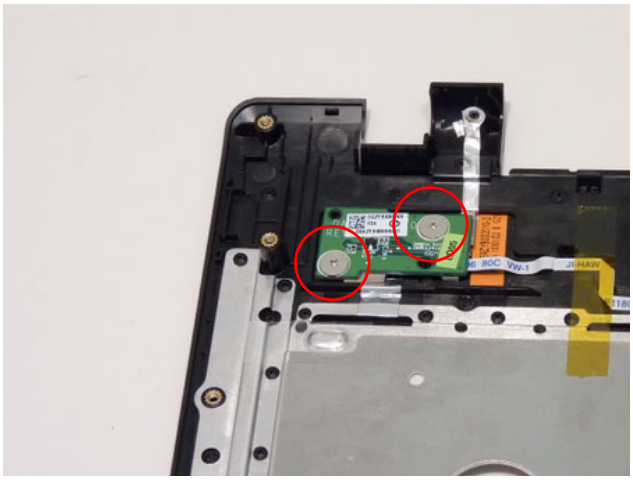

Downloaded from www.Manualslib.com manuals search engine

Replacing the Upper Cover

1. Place the upper cover onto the lower cover aligning the hinges first and then press down around the edges.

2. Replace the seven (7) screws.

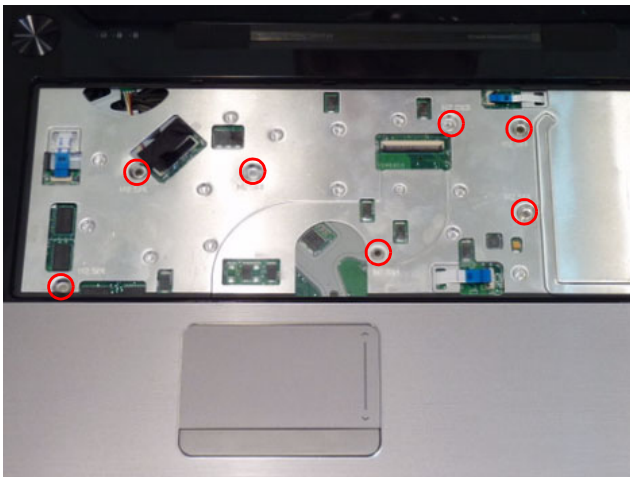

Downloaded from www.Manualslib.com manuals search engine

3. Turn the computer over and replace the twenty (24) screws on the bottom cover.

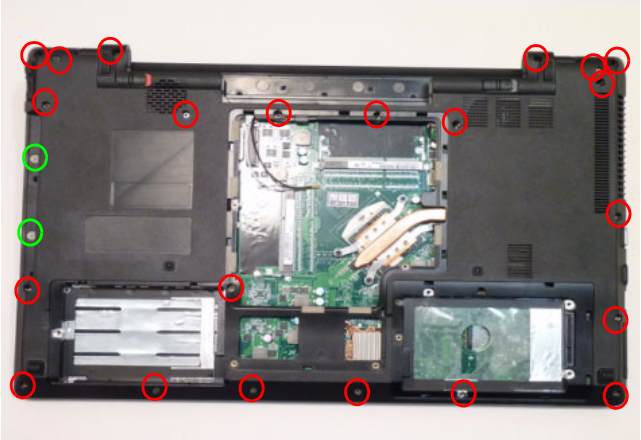

4. Connect the speaker cable.

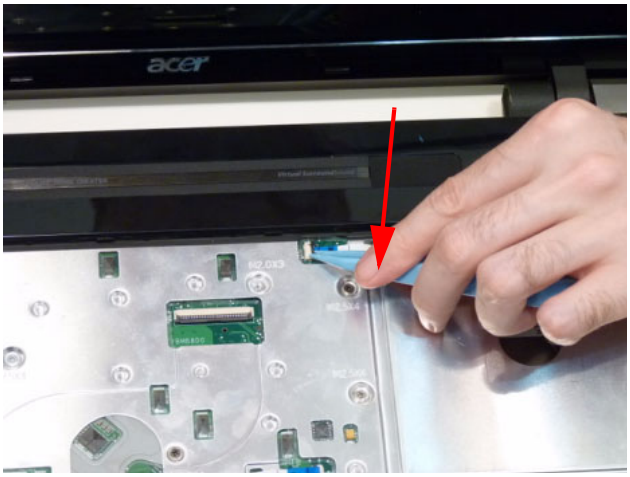

5. Connect and lock the Switch Board FFC.

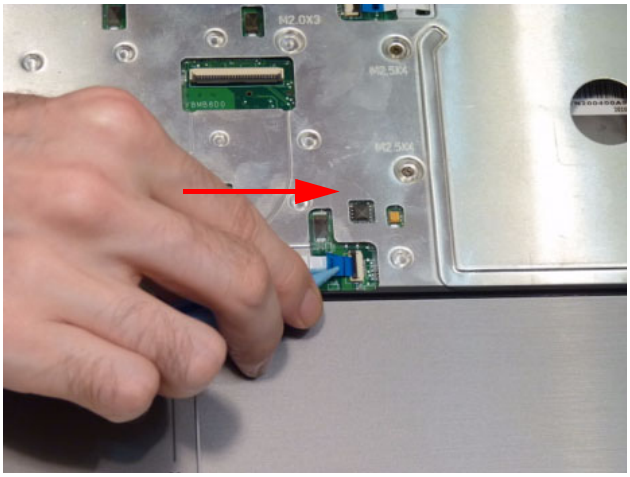

Downloaded from www.Manualslib.com manuals search engine

6. Connect and lock the Power board FFC.

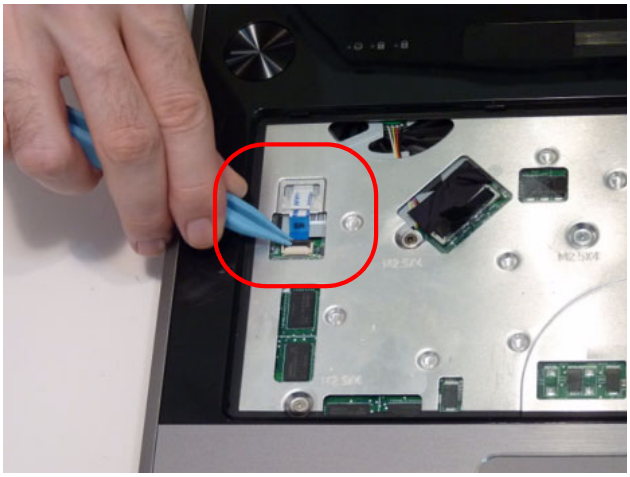

Downloaded from www.Manualslib.com manuals search engine

Replacing the Keyboard

1. Connect and lock the FFC to the mainboard.

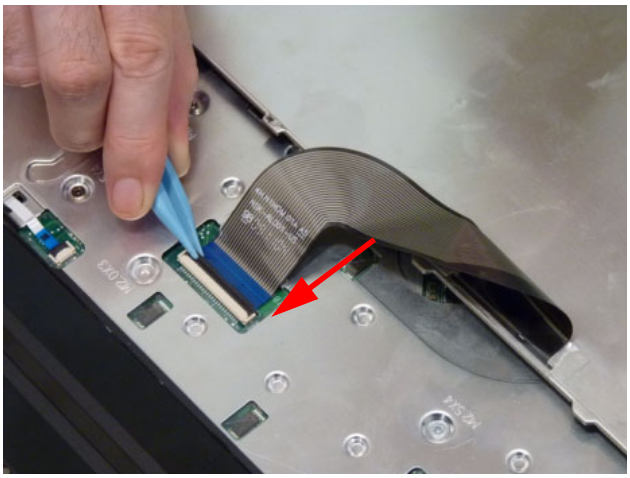

2. Turn the keyboard over and insert the bottom edge in first, then push to down ensure the five latches across the top are fully secured.

Downloaded from www.Manualslib.com manuals search engine

Replacing the Wireless LAN Module

1. Insert the wireless LAN module into the connector.

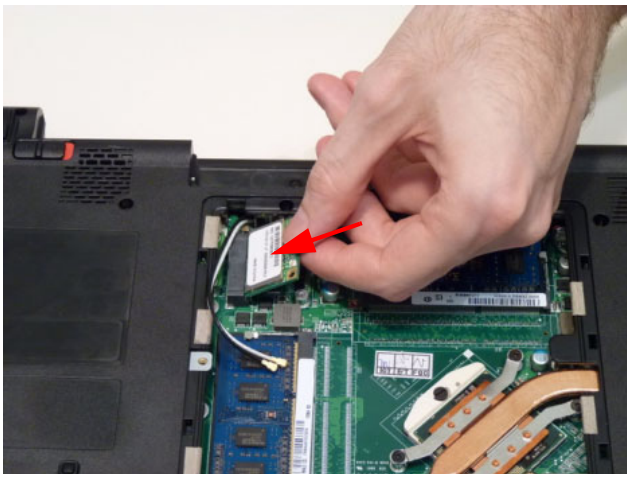

2. Replace the one screw.

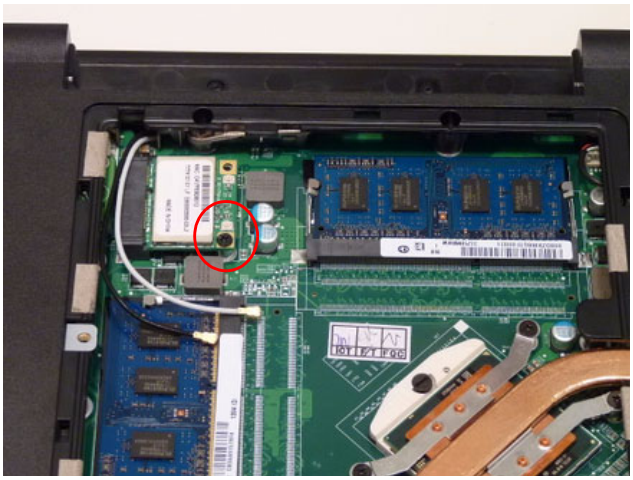

3. Replace the connectors. The white (Aux) cable attaches to the connector marked **2** on the board. The black (Main) cable attaches to the connector marked **1** on the board.

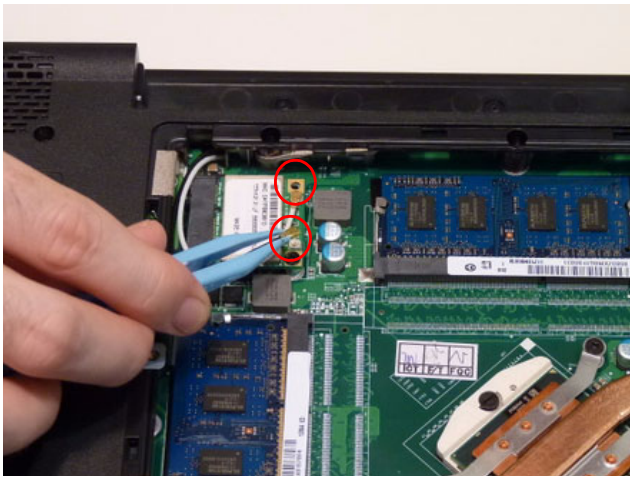

Downloaded from www.Manualslib.com manuals search engine

Replacing the DIMM Module

1. Slide the DIMM module into the connector.

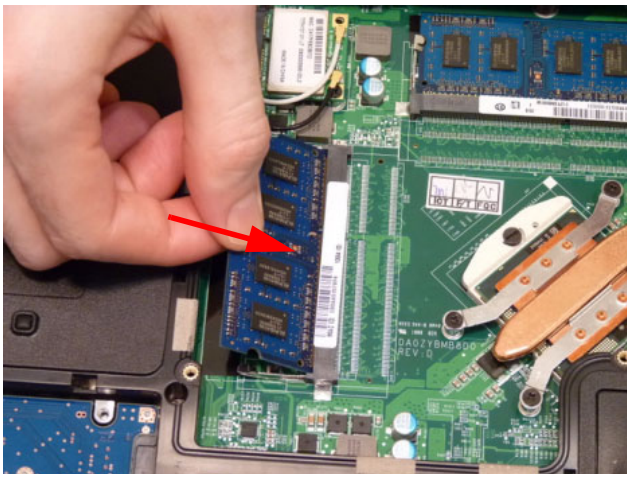

2. Press down till the locking springs click into place.

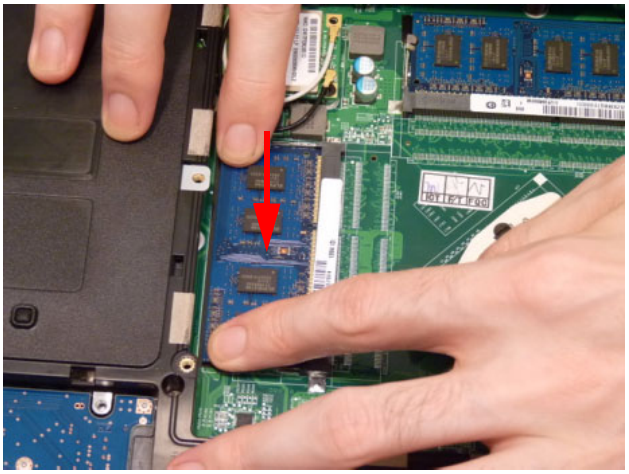

Downloaded from www.Manualslib.com manuals search engine

Replacing the 2nd HDD Module

1. Replace the HDD bracket.

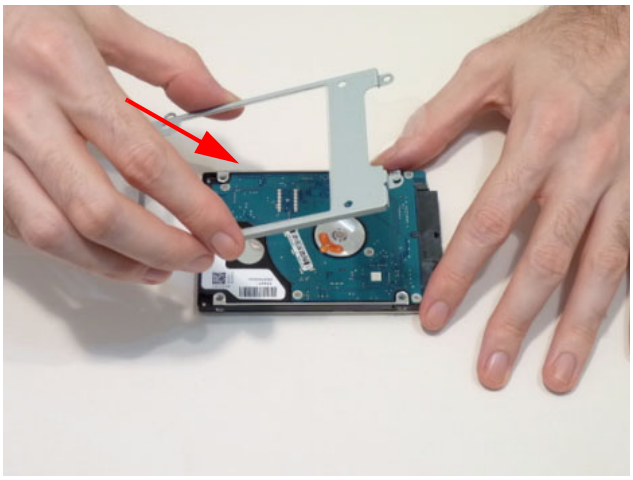

2. Replace the four (4) screws.

3. Place the HDD into the lower cover.

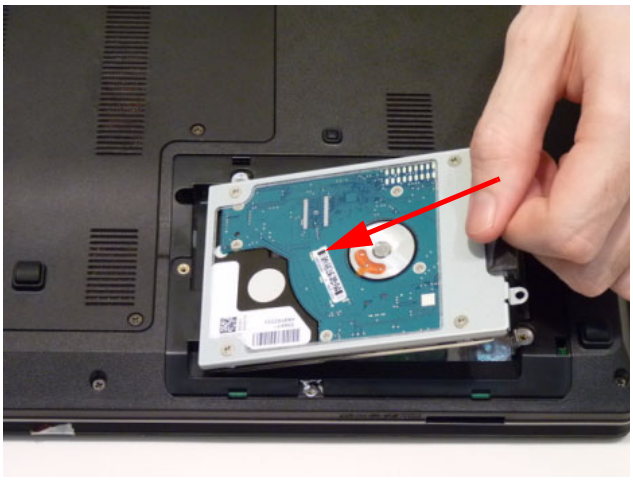

Downloaded from www.Manualslib.com manuals search engine

4. Replace the three (3) screws to secure the 2nd HDD module in the chassis.

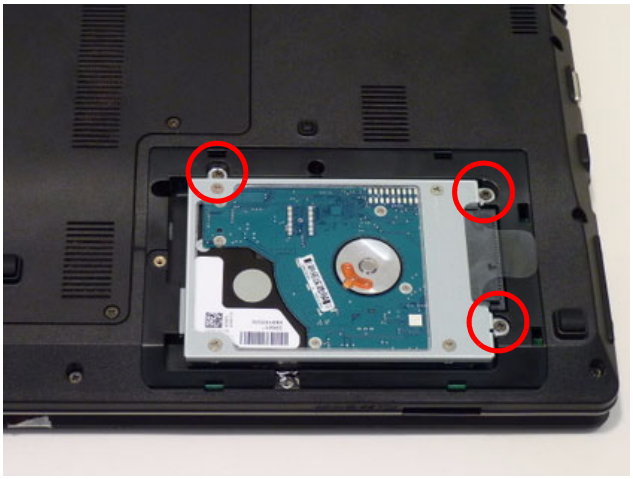

5. Replace the HDD cover.

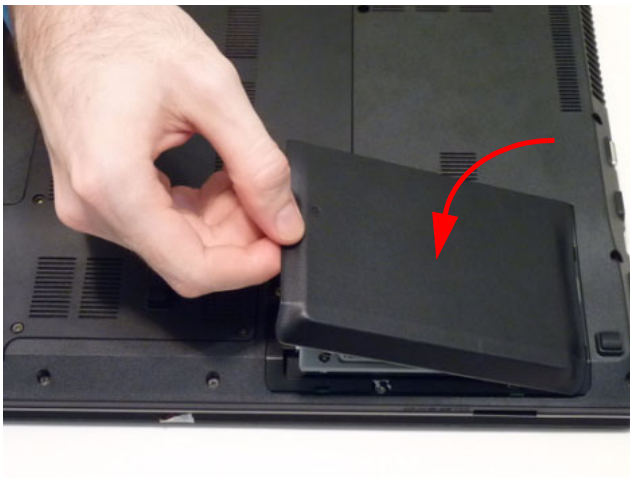

6. Replace the one (1) screw.

Downloaded from www.Manualslib.com manuals search engine

Replacing the Hard Disk Drive

1. Place the HDD bracket onto the HDD.

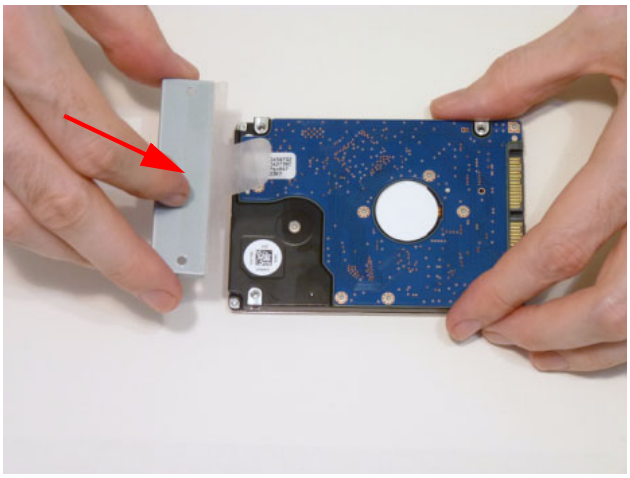

2. Replace the two (2) screws.

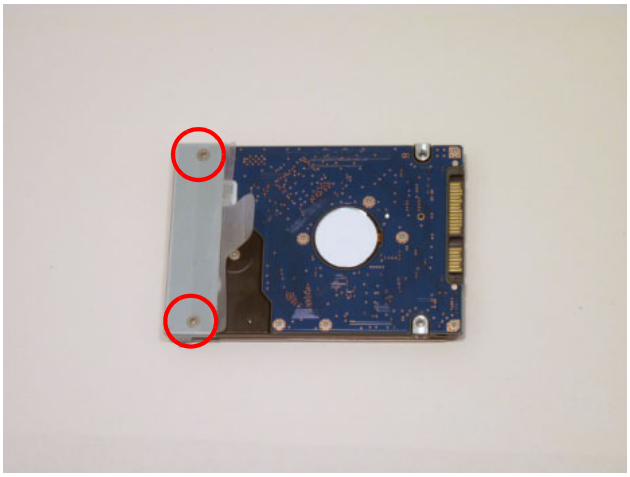

3. Insert the HDD into the bay inserting the bracket flanges into the lower cover slot first.

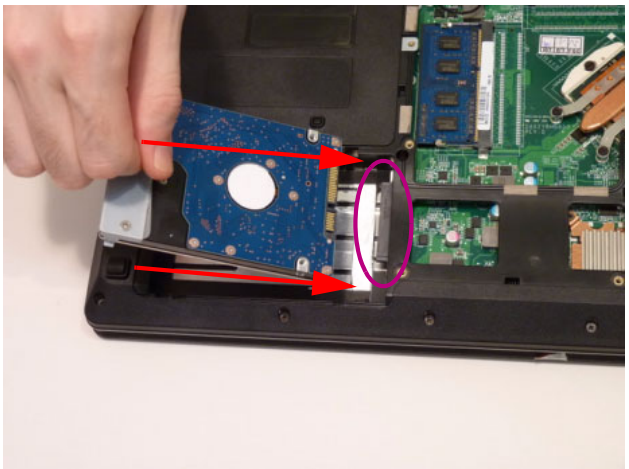

Downloaded from www.Manualslib.com manuals search engine

4. Grasp the tab and slide the HDD firmly into the docking connector.

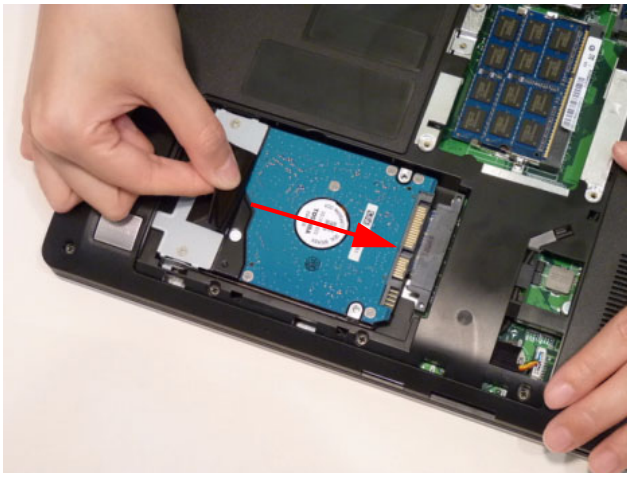

Downloaded from www.Manualslib.com manuals search engine

Replacing the ODD Module

1. Replace the ODD bezel.

2. Replace the ODD bracket.

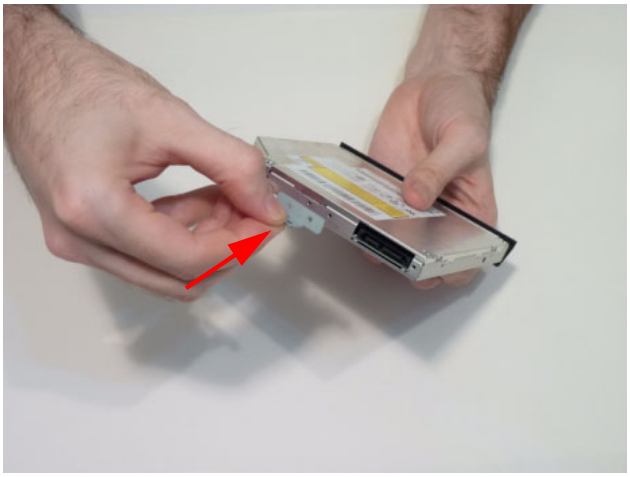

3. Replace the two (2) screws of the ODD bracket.

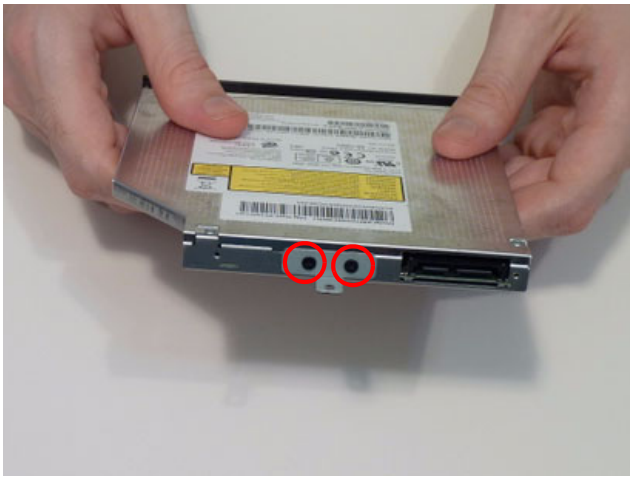

Downloaded from www.Manualslib.com manuals search engine

4. Push the ODD completely into the bay until flush with the lower cover.

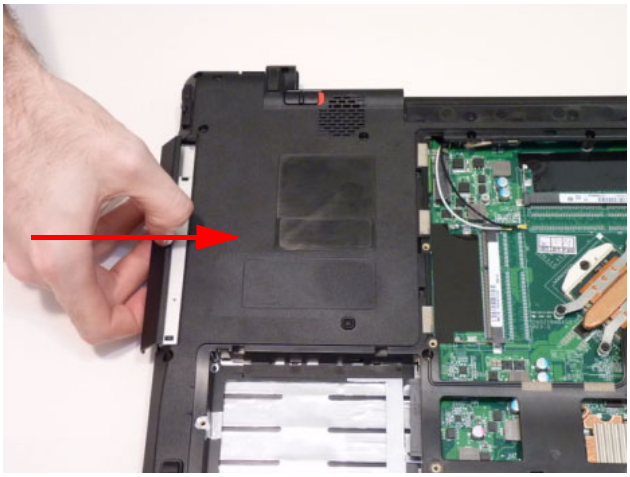

Downloaded from www.Manualslib.com manuals search engine

Replacing the Base Door

1. Insert the base door edge flanges into the slots (1) and lower the base door (2).

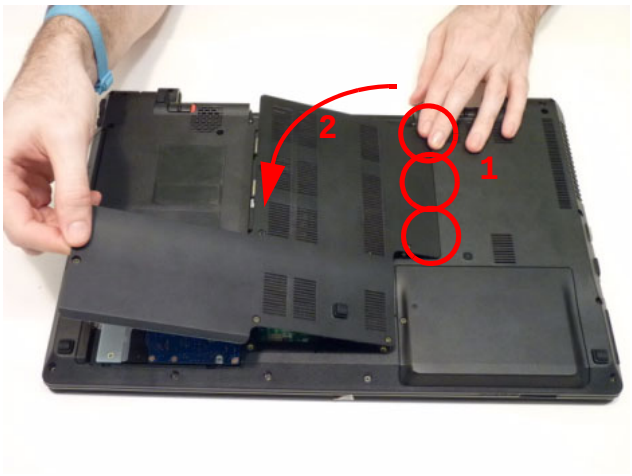

2. Tighten the six (6) screws.

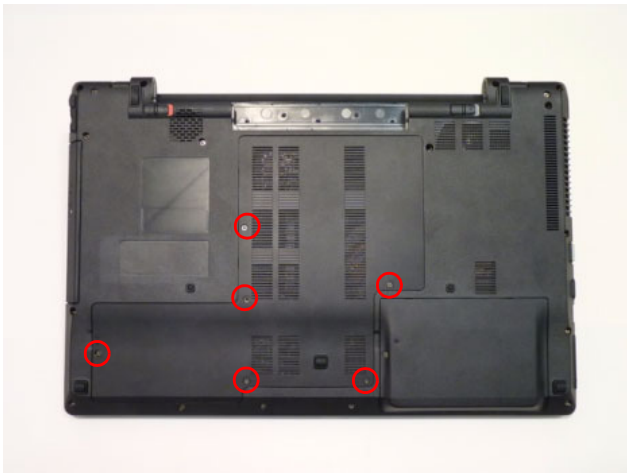

Downloaded from www.Manualslib.com manuals search engine

Replacing the Battery

1. Slide the battery into position.

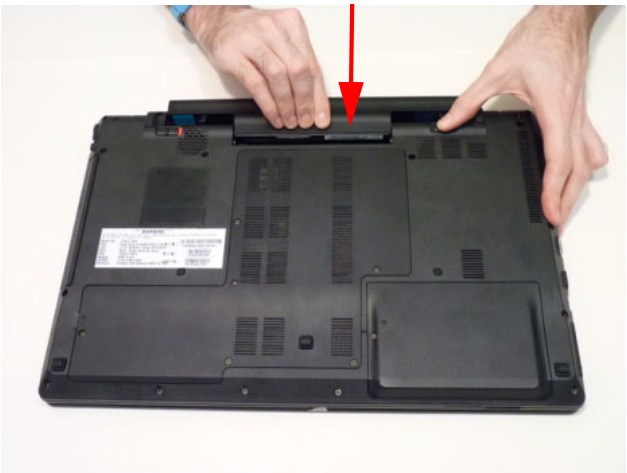

2. Close the locking latch.

Replace the Dummy Card

Push the dummy card into the slot until it clicks into place.

Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine

Troubleshooting

Common Problems

Use the following procedure as a guide for computer problems.

NOTE: The diagnostic tests are intended to test only Acer products. Non-Acer products, prototype cards, or modified options can give false errors and invalid system responses.

1. Obtain the failing symptoms in as much detail as possible.
2. Verify the symptoms by attempting to re-create the failure by running the diagnostic test or by repeating the same operation.
3. Use the following table with the verified symptom to determine which page to go to.

Symptoms (Verified)	Go To
Power On Issue	Page 140
No Display Issue	Page 141
LCD Failure	Page 143
Internal Keyboard Failure	Page 144
TouchPad Failure	Page 145
Internal Speaker Failure	Page 146
Internal Microphone Failure	Page 147
USB Failure	Page 149
Other Function Failure	Page 149

4. If the Issue is still not resolved, see “Online Support Information” on page 279.

Downloaded from www.Manualslib.com manuals search engine

Power On Issue

If the system doesn't power on, perform the following actions one at a time to correct the problem. Do not replace non-defective FRUs:

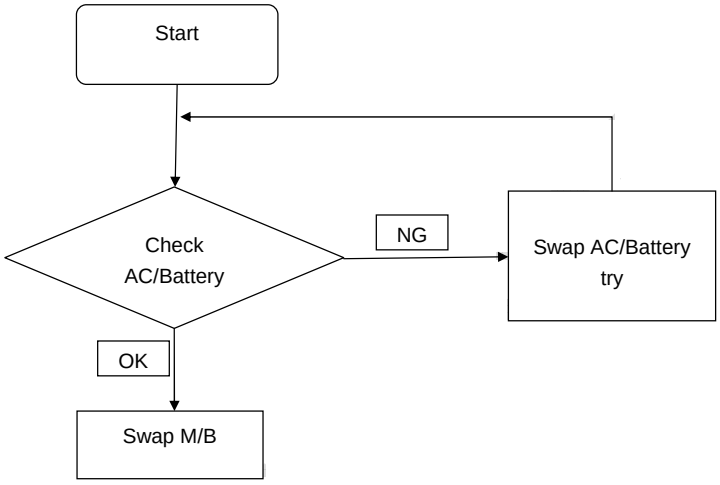

Computer Shuts down Intermittently

If the system powers off at intervals, perform the following actions one at a time to correct the problem.

1. Check the power cable is properly connected to the computer and the electrical outlet.
2. Remove any extension cables between the computer and the outlet.
3. Remove any surge protectors between the computer and the electrical outlet. Plug the computer directly into a known good electrical outlet.
4. Remove all external and non-essential hardware connected to the computer that are not necessary to boot the computer to the failure point.
5. Remove any recently installed software.
6. If the Issue is still not resolved, see "Online Support Information" on page 279.

Downloaded from www.Manualslib.com manuals search engine

No Display Issue

If the **Display** doesn't work, perform the following actions one at a time to correct the problem. Do not replace non-defective FRUs:

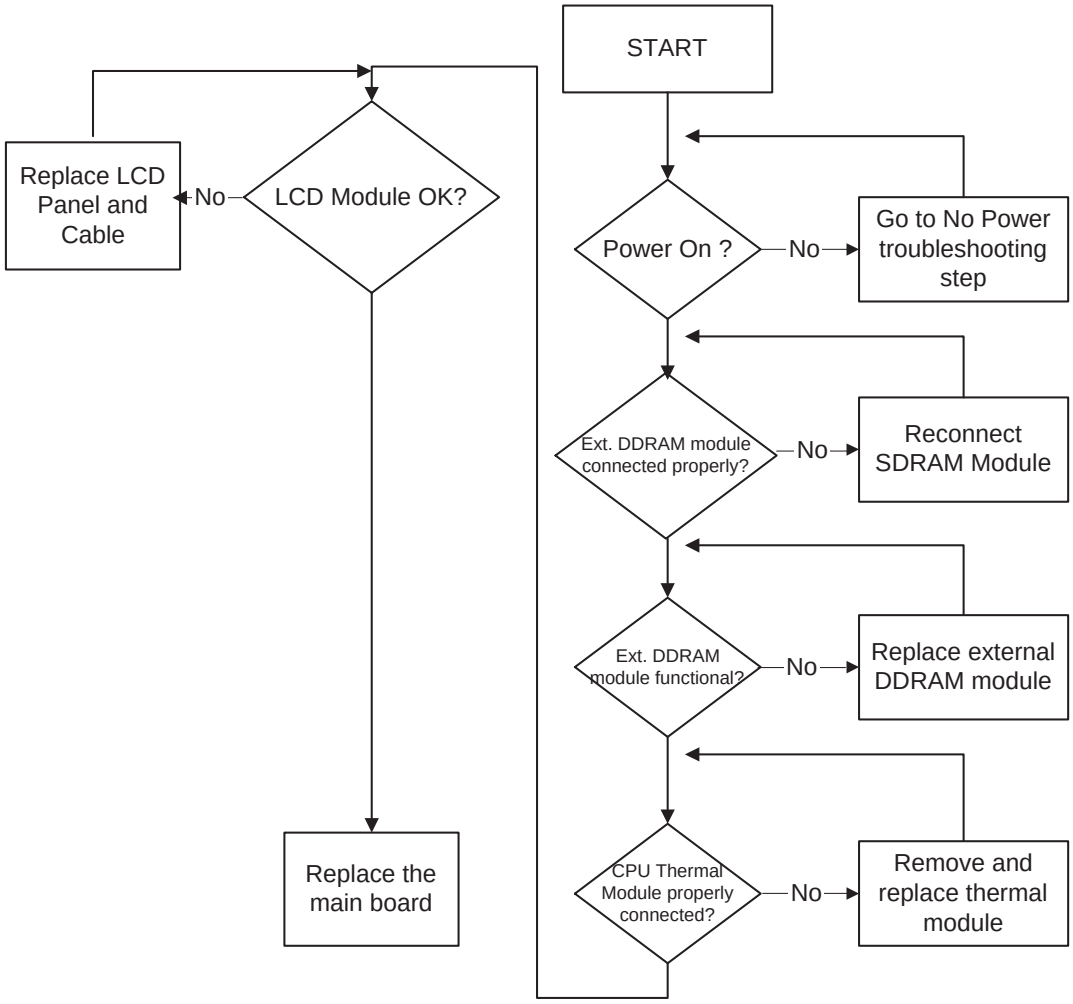

No POST or Video

If the POST or video doesn't display, perform the following actions one at a time to correct the problem.

1. Make sure that the internal display is selected. On this notebook model, switching between the internal display and the external display is done by pressing **Fn+F5**. Reference Product pages for specific model procedures.
2. Make sure the computer has power by checking at least one of the following occurs:
   - Fans start up
   - Status LEDs light up

   If there is no power, see "Power On Issue" on page 140.
3. Drain any stored power by removing the power cable and battery and holding down the power button for 10 seconds. Reconnect the power and reboot the computer.
4. Connect an external monitor to the computer and switch between the internal display and the external display is by pressing **Fn+F5** (on this model).

   If the POST or video appears on the external display, see "LCD Failure" on page 143.
5. Disconnect power and all external devices including port replicators or docking stations. Remove any memory cards and CD/DVD discs. Restart the computer.

Downloaded from www.Manualslib.com manuals search engine

If the computer boots correctly, add the devices one by one until the failure point is discovered.

6. Reseat the memory modules.
7. Remove the drives (see “Disassembly Process” on page 49).
8. If the Issue is still not resolved, see “Online Support Information” on page 279.

Abnormal Video Display

If video displays abnormally, perform the following actions one at a time to correct the problem.

1. Reboot the computer.
2. If permanent vertical/horizontal lines or dark spots display in the same location, the LCD is faulty and should be replaced. See “Disassembly Process” on page 49.
3. If extensive pixel damage is present (different colored spots in the same locations on the screen), the LCD is faulty and should be replaced. See “Disassembly Process” on page 49.
4. Adjust the brightness to its highest level. See the User Manual for instructions on adjusting settings.
   NOTE: Ensure that the computer is not running on battery alone as this may reduce display brightness.

   If the display is too dim at the highest brightness setting, the LCD is faulty and should be replaced. See “Disassembly Process” on page 49.
5. Check the display resolution is correctly configured:
   a. Minimize or close all Windows.
   b. If display size is only abnormal in an application, check the view settings and control/mouse wheel zoom feature in the application.
   c. If desktop display resolution is not normal, right-click on the desktop and select **Personalize→ Display Settings**.
   d. Click and drag the Resolution slider to the desired resolution.
   e. Click **Apply** and check the display. Readjust if necessary.
6. Roll back the video driver to the previous version if updated.
7. Remove and reinstall the video driver.
8. Check the Device Manager to determine that:
   - The device is properly installed. There are no red Xs or yellow exclamation marks.
   - There are no device conflicts.
   - No hardware is listed under Other Devices.
9. If the Issue is still not resolved, see “Online Support Information” on page 279.
10. Run the Windows Memory Diagnostic from the operating system DVD and follow the onscreen prompts.
11. If the Issue is still not resolved, see “Online Support Information” on page 279.

Random Loss of BIOS Settings

If the computer is experiencing intermittent loss of BIOS information, perform the following actions one at a time to correct the problem.

1. If the computer is more than one year old, replace the CMOS battery.
2. Run a complete virus scan using up-to-date software to ensure the computer is virus free.
3. If the computer is experiencing HDD or ODD BIOS information loss, disconnect and reconnect the power and data cables between devices.

   If the BIOS settings are still lost, replace the cables.
4. If HDD information is missing from the BIOS, the drive may be defective and should be replaced.
5. Replace the Motherboard.

Downloaded from www.Manualslib.com manuals search engine

6. If the Issue is still not resolved, see “Online Support Information” on page 279.

LCD Failure

If the **LCD** fails, perform the following actions one at a time to correct the problem. Do not replace non-defective FRUs:

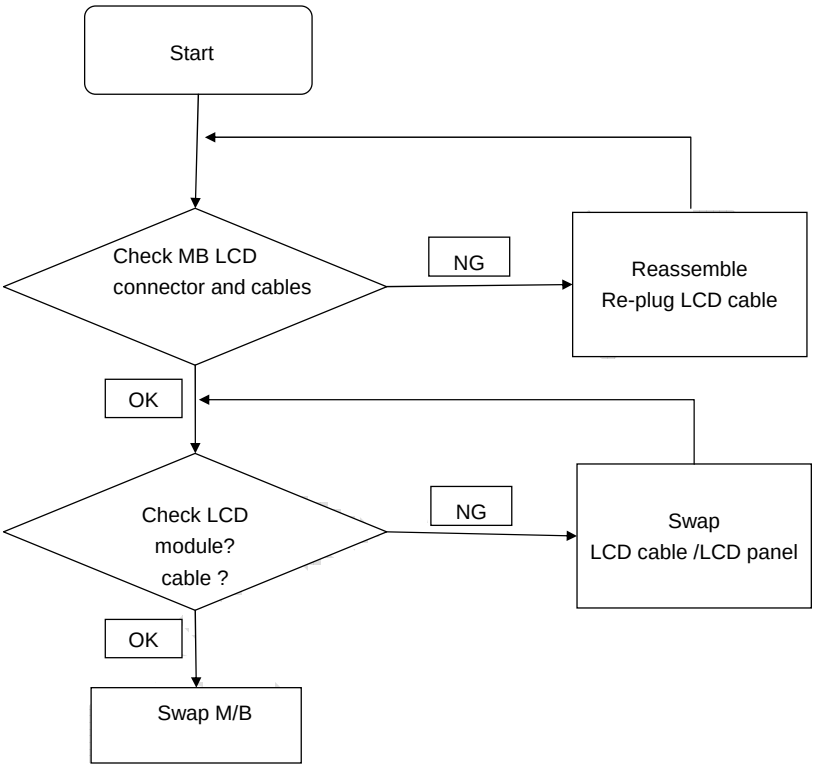

Downloaded from www.Manualslib.com manuals search engine

Built-In Keyboard Failure

If the built-in **Keyboard** fails, perform the following actions one at a time to correct the problem. Do not replace non-defective FRUs:

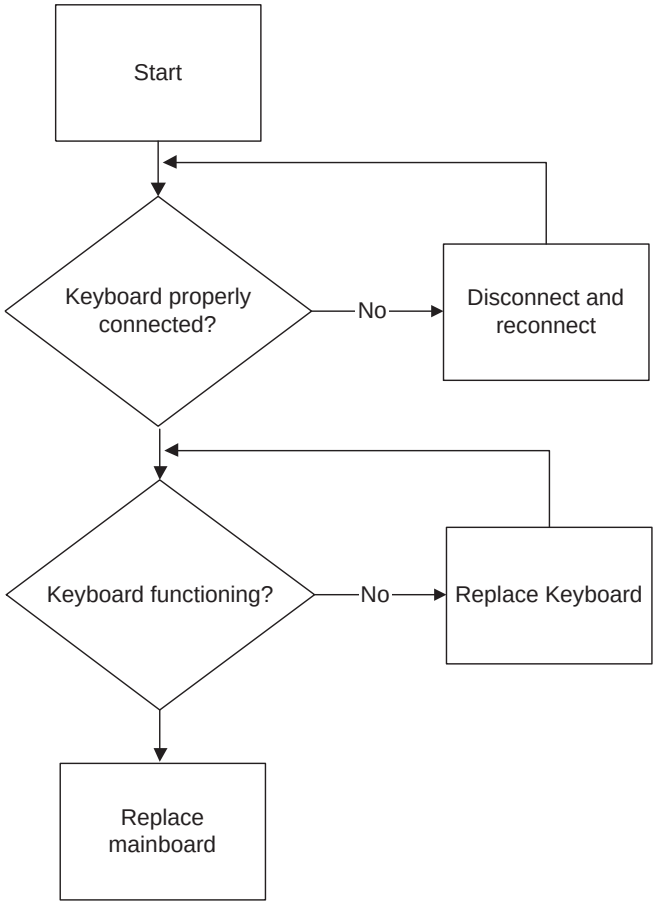

Downloaded from www.Manualslib.com manuals search engine

TouchPad Failure

If the **TouchPad** doesn't work, perform the following actions one at a time to correct the problem. Do not replace non-defective FRUs:

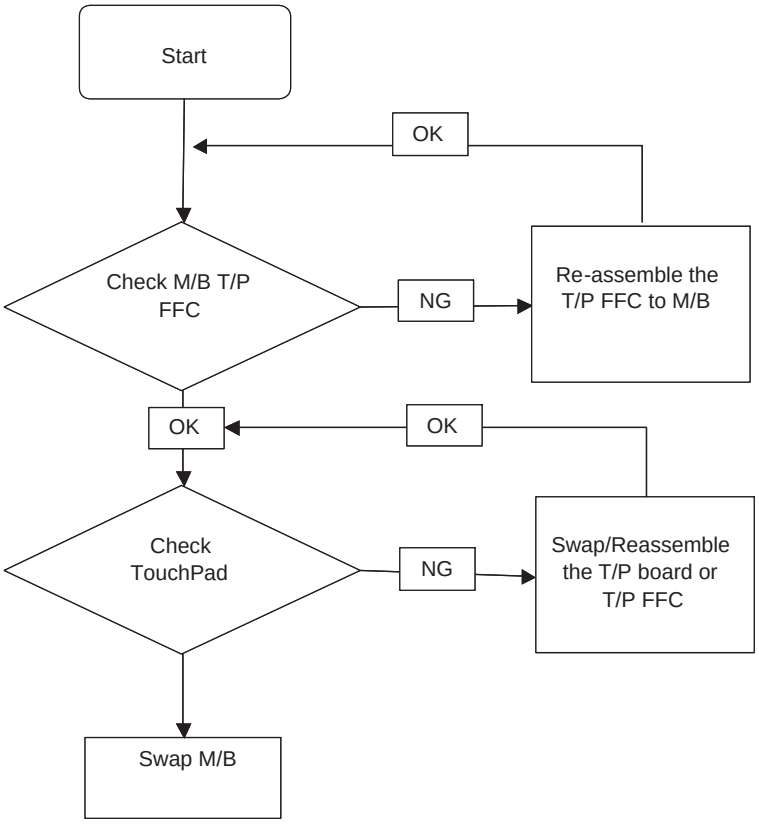

Downloaded from www.Manualslib.com manuals search engine

Internal Speaker Failure

If the internal **Speakers** fail, perform the following actions one at a time to correct the problem. Do not replace non-defective FRUs:

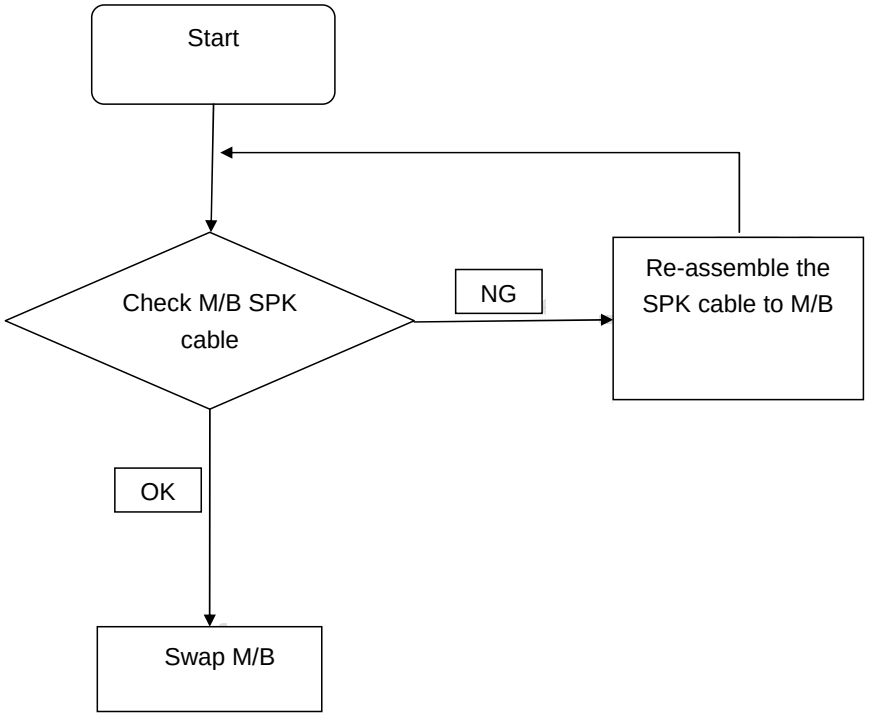

Sound Problems

If sound problems are experienced, perform the following actions one at a time to correct the problem.

1. Reboot the computer.
2. Navigate to **Start**→ **Control Panel**→ **System and Maintenance**→ **System**→ **Device Manager**. Check the Device Manager to determine that:
   - The device is properly installed.
   - There are no red Xs or yellow exclamation marks.
   - There are no device conflicts.
   - No hardware is listed under Other Devices.
3. Roll back the audio driver to the previous version, if updated recently.
4. Remove and reinstall the audio driver.
5. Ensure that all volume controls are set mid range:
   a. Click the volume icon on the taskbar and drag the slider to 50. Ensure that the volume is not muted.
   b. Click Mixer to verify that other audio applications are set to 50 and not muted.
6. Navigate to **Start**→ **Control Panel**→ **Hardware and Sound**→ **Sound**. Ensure that Speakers are selected as the default audio device (green check mark).
   NOTE: If Speakers does not show, right-click on the **Playback** tab and select **Show Disabled Devices** (clear by default).
7. Select Speakers and click **Configure** to start **Speaker Setup**. Follow the onscreen prompts to configure the speakers.
8. Remove and recently installed hardware or software.

Downloaded from www.Manualslib.com manuals search engine

9. Restore system and file settings from a known good date using **System Restore**.

   If the issue is not fixed, repeat the preceding steps and select an earlier time and date.

10. Reinstall the Operating System.
11. If the Issue is still not resolved, see “Online Support Information” on page 279.

Internal Microphone Failure

If the internal **Microphone** fails, perform the following actions one at a time to correct the problem. Do not replace non-defective FRUs:

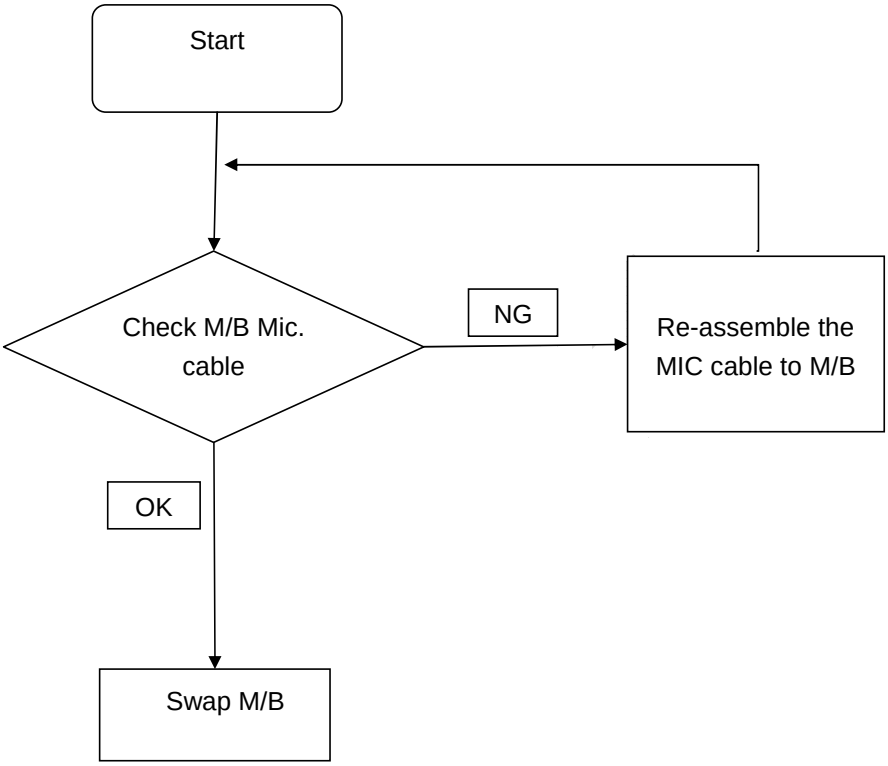

Microphone Problems

If internal or external **Microphones** do no operate correctly, perform the following actions one at a time to correct the problem.

1. Check that the microphone is enabled. Navigate to **Start→ Control Panel→ Hardware and Sound→ Sound** and select the **Recording** tab.
2. Right-click on the **Recording** tab and select **Show Disabled Devices** (clear by default).
3. The microphone appears on the **Recording** tab.
4. Right-click on the microphone and select **Enable**.
5. Select the microphone then click **Properties**. Select the **Levels** tab.
6. Increase the volume to the maximum setting and click **OK**.
7. Test the microphone hardware:
   a. Select the microphone and click **Configure**.
   b. Select **Set up microphone**.
   c. Select the microphone type from the list and click **Next**.
   d. Follow the onscreen prompts to complete the test.

Downloaded from www.Manualslib.com manuals search engine

8. If the Issue is still not resolved, see “Online Support Information” on page 279.

HDD Not Operating Correctly

If the **HDD** does not operate correctly, perform the following actions one at a time to correct the problem.

1. Disconnect all external devices.
2. Run a complete virus scan using up-to-date software to ensure the computer is virus free.
3. Run the Windows 7 Startup Repair Utility:
   a. insert the Windows 7 Operating System DVD in the ODD and restart the computer.
   b. When prompted, press any key to start to the operating system DVD.
   c. The **Install Windows** screen displays. Click **Next**.
   d. Select **Repair your computer**.
   e. The **System Recovery Options** screen displays. Click **Next**.
   f. Select the appropriate operating system, and click **Next**.

   NOTE: Click **Load Drivers** if controller drives are required.

   g. Select **Startup Repair**.
   h. Startup Repair attempts to locate and resolve issues with the computer.
   i. When complete, click **Finish**.

   If an issue is discovered, follow the onscreen information to resolve the problem.
4. Run the Windows Memory Diagnostic Tool. For more information see Windows Help and Support.
5. Restart the computer and press F2 to enter the BIOS Utility. Check the BIOS settings are correct and that CD/DVD drive is set as the first boot device on the Boot menu.
6. Ensure all cables and jumpers on the HDD and ODD are set correctly.
7. Remove any recently added hardware and associated software.
8. Run the Windows Disk Defragmenter. For more information see Windows Help and Support.
9. Run Windows Check Disk by entering **chkdsk /r** from a command prompt. For more information see Windows Help and Support.
10. Restore system and file settings from a known good date using **System Restore**.

    If the issue is not fixed, repeat the preceding steps and select an earlier time and date.
11. Replace the HDD. See “Disassembly Process” on page 49.

Downloaded from www.Manualslib.com manuals search engine

USB Failure (Right up/down side)

If the rightside **USB** port fails, perform the following actions one at a time to correct the problem. Do not replace non-defective FRUs:

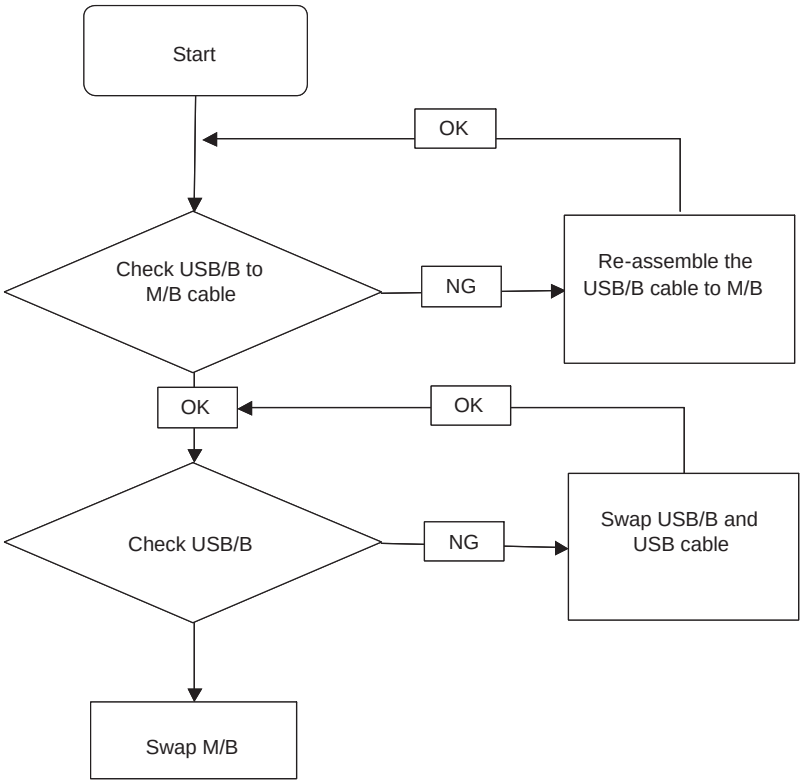

Other Failures

If the VGA board, LAN Port, external MIC or Speakers, PCI Express Card, 5-in-1 Card Reader or Volume Wheel fail, perform the following general steps to correct the problem. Do not replace non-defective FRUs:

1. Check whether the drive is OK.
2. Verify that the Test Fixture is OK.
3. Swap the mainboard and retest.

Downloaded from www.Manualslib.com manuals search engine

Intermittent Problems

Intermittent system hang problems can be caused by a variety of reasons that have nothing to do with a hardware defect, such as: cosmic radiation, electrostatic discharge, or software errors. FRU replacement should be considered only when a recurring problem exists.

When analyzing an intermittent problem, do the following:

1. Run the advanced diagnostic test for the system board in loop mode at least 10 times.
2. If no error is detected, do not replace any FRU.
3. If any error is detected, replace the FRU. Rerun the test to verify that there are no more errors.

Undetermined Problems

The diagnostic problems does not identify which adapter or device failed, which installed devices are incorrect, whether a short circuit is suspected, or whether the system is inoperative.

Follow these procedures to isolate the failing FRU (do not isolate non-defective FRU).

NOTE: Verify that all attached devices are supported by the computer.

NOTE: Verify that the power supply being used at the time of the failure is operating correctly. (See “Power On Issue” on page 140.):

1. Power-off the computer.
2. Visually check them for damage. If any problems are found, replace the FRU.
3. Remove or disconnect all of the following devices:
    - Non-Acer devices
    - Printer, mouse, and other external devices
    - Battery pack
    - Hard disk drive
    - DIMM
    - CD-ROM/Diskette drive Module
    - PC Cards
4. Power-on the computer.
5. Determine if the problem has changed.
6. If the problem does not recur, reconnect the removed devices one at a time until you find the failing FRU.
7. If the problem remains, replace the following FRU one at a time. Do not replace a non-defective FRU:
    - System board
    - LCD assembly

Downloaded from www.Manualslib.com manuals search engine

Post Code Reference Tables

These tables describe the POST codes and descriptions during the POST.

Post Code Range

Phase	POST Code Range
SEC	0x01 - 0x0F
PEI	0x70 - 0x9F
DXE	0x40 - 0x6F
BDS	0x10 - 0x3F
SMM	0xA0 - 0xBF
S3	0xC0 - 0xCF
ASL	0x51 – 0x55
	0xE1 – 0xE4
PostBDS	0xF9 – 0xFE
InsydeH2ODDT™ Reserve	0xD0 – 0xD7
OEM Reserve	0xE8 – 0xEB
Reserved	0xD8 – 0xE0
	0xE5 – 0xE7
	0xEC – 0xF8

SEC Phase POST Code Table

Functionality Name (Include\ PostCode.h)	Phase	Post Code	Description
SEC_SYSTEM_POWER_ON	SEC	1	CPU power on and switch to Protected mode
SEC_BEFORE_MICROCODE_PATCH	SEC	2	Patching CPU microcode
SEC_AFTER_MICROCODE_PATCH	SEC	3	Setup Cache as RAM
SEC_ACCESS_CSR	SEC	4	PCIE MMIO Base Address initial
SEC_GENERIC_MSRINIT	SEC	5	CPU Generic MSR initialization
SEC_CPU_SPEEDCFG	SEC	6	Setup CPU speed
SEC_SETUP_CAR_OK	SEC	7	Cache as RAM test
SEC_FORCE_MAX_RATIO	SEC	8	Tune CPU frequency ratio to maximum level
SEC_GO_TO_SECSTARTUP	SEC	9	Setup BIOS ROM cache
SEC_GO_TO_PEICORE	SEC	0A	Enter Boot Firmware Volume

PEI Phase POST Code Table:

Functionality Name (Include\ PostCode.h)	Phase	Post Code	Description
PEI_SIO_INIT	PEI	70	Super I/O Initialization
PEI_CPU_REG_INIT	PEI	71	CPU Early Initialization
PEI_PCIE_MMIO_INIT	PEI	74	PCIE MMIO BAR Initialization
PEI_NB_REG_INIT	PEI	75	North Bridge Early Initialization
PEI_SB_REG_INIT	PEI	76	South Bridge Early Initialization
PEI_TPM_INIT	PEI	78	TPM Initialization
PEI_SMBUS_INIT	PEI	79	SMBUS Early Initialization

Downloaded from www.Manualslib.com manuals search engine

Functionality Name (Include\ PostCode.h)	Phase	Post Code	Description
PEI_PROGRAM_CLOCK_GEN	PEI	7A	Clock Generator Initialization
PEI_IGD_EARLY_INITIAL	PEI	7B	Internal Graphic device early Initialization
PEI_HECI_INIT	PEI	7C	HECI Initialization
PEI_WATCHDOG_INIT	PEI	7D	Watchdog timer Initialization
PEI_MEMORY_INIT	PEI	7E	Memory Initial for Normal boot.
PEI_MEMORY_INIT_FOR_CRISIS	PEI	7F	Memory Initial for Crisis Recovery
PEI_MEMORY_INSTALL	PEI	80	Simple Memory test
PEI_TXTPEI	PEI	81	TXT function early Initialization
PEI_SWITCH_STACK	PEI	82	Start to use Memory
PEI_MEMORY_CALLBACK	PEI	83	Set cache for physical memory
PEI_ENTER_RECOVERY_MODE	PEI	84	Recovery device Initialization
PEI_RECOVERY_MEDIA_FOUND	PEI	85	Found Recovery image
PEI_RECOVERY_MEDIA_NOT_FOUND	PEI	86	Recovery image not found
PEI_RECOVERY_LOAD_FILE_DONE	PEI	87	Load Recovery Image completed
PEI_RECOVERY_START_FLASH	PEI	88	Start Flash BIOS with Recovery image
PEI_ENTER_DXEIPL	PEI	89	Loading BIOS image to RAM
PEI_FINDING_DXE_CORE	PEI	8A	Loading DXE core
PEI_GO_TO_DXE_CORE	PEI	8B	Enter DXE core

DXE Phase POST Code Table:

Functionality Name (Include\ PostCode.h)	Phase	PostCode	Description
DXE_TCGDXE	DXE	40	TPM initial in DXE
DXE_SB_SPI_INIT	DXE	41	South bridge SPI initialization
DXE_CF9_RESET	DXE	42	Setup Reset service
DXE_SB_SERIAL_GPIO_INIT	DXE	43	South bridge Serial GPIO initialization
DXE_SMMACCESS	DXE	44	Setup SMM ACCE SS service
DXE_SIO_INIT	DXE	46	Super I/O DXE initialization
DXE_LEGACY_REGION	DXE	47	Setup Legacy Region service
DXE_IDENTIFY_FLASH_DEVICE	DXE	49	Identify Flash device
DXE_FTW_INIT	DXE	4A	Fault Tolerant Write verification
DXE_VARIABLE_INIT	DXE	4B	Variable Service initialization
DXE_VARIABLE_INIT_FAIL	DXE	4C	Fail to initial Variable Service
DXE_MTC_INIT	DXE	4D	MTC Initial
DXE_CPU_INIT	DXE	4E	CPU Middle Initialization
DXE_MP_CPU_INIT	DXE	4F	Multi-processor MiddleInitialization
DXE_SMBUS_INIT	DXE	50	SMBUS Driver Initialization
DXE_SMART_TIMER_INIT	DXE	51	8259 Initialization
DXE_PCRTC_INIT	DXE	52	RTC Initialization

Downloaded from www.Manualslib.com manuals search engine

Functionality Name (Include\ PostCode.h)	Phase	PostCode	Description
DXE_SATA_INIT	DXE	53	SATA Controller earlyInitialization
DXE_SMM_CONTROLER_INIT	DXE	54	Setup SMM Control service
DXE_LEGACY_INTERRUPT	DXE	55	Setup Legacy Interrupt service
DXE_RELOCATE_SMBASE	DXE	56	Relocate SMM BASE
DXE_FIRST_SMI	DXE	57	SMI test
DXE_VTD_INIT	DXE	58	VTD Initial
DXE_BEFORE_CSM16_INIT	DXE	59	Legacy BIOS Initialization
DXE_AFTER_CSM16_INIT	DXE	5A	Legacy interrupt function Initialization
DXE_LOAD_ACPI_TABLE	DXE	5B	ACPI Table Initialization
DXE_SB_DISPATCH	DXE	5C	Setup SB SMM Dispatcher service
DXE_SB_IOTRAP_INIT	DXE	5D	Setup SB IOTRAP Service
DXE_SUBCLASS_DRIVER	DXE	5E	Build AMT Table
DXE_PPM_INIT	DXE	5F	PPM Initialization
DXE_HECIDRV_INIT	DXE	60	HECIDRV Initialization

BDS Phase POST Code Table:

Functionality Name (Include\ PostCode.h)	Phase	Post Code	Description
BDS_ENTER_BDS	BDS	10	Enter BDS entry
BDS_INSTALL_HOTKEY	BDS	11	Install Hotkey service
BDS_ASF_INIT	BDS	12	ASF Initialization
BDS_PCI_ENUMERATION_START	BDS	13	PCI enumeration
BDS_BEFORE_PCIIO_INSTALL	BDS	14	PCI resource assign complete
BDS_PCI_ENUMERATION_END	BDS	15	PCI enumeration complete
BDS_CONNECT_CONSOLE_IN	BDS	16	Keyboard Controller, Keyboard and Mouse initialization
BDS_CONNECT_CONSOLE_OUT	BDS	17	Video device initialization
BDS_CONNECT_STD_ERR	BDS	18	Error report device initialization
BDS_CONNECT_USB_HC	BDS	19	USB host controller initialization
BDS_CONNECT_USB_BUS	BDS	1A	USB BUS driver initialization
BDS_CONNECT_USB_DEVICE	BDS	1B	USB device driver initialization
BDS_NO_CONSOLE_ACTION	BDS	1C	Console device initial fail
BDS_DISPLAY_LOGO_SYSTEM_INFO	BDS	1D	Display logo or system information
BDS_START_IDE_CONTROLLER	BDS	1E	IDE controller initialization
BDS_START_SATA_CONTROLLER	BDS	1F	SATA controller initialization
BDS_START_ISA_ACPI_CONTROLLER	BDS	20	SIO controller initialization
BDS_START_ISA_BUS	BDS	21	ISA BUS driver initialization
BDS_START_ISA_FDD	BDS	22	Floppy device initialization
BDS_START_ISA_SEIRAL	BDS	23	Serial device initialization
BDS_START_IDE_BUS	BDS	24	IDE device initialization
BDS_START_AHCI_BUS	BDS	25	AHCI device initialization

Downloaded from www.Manualslib.com manuals search engine

Functionality Name (Include\ PostCode.h)	Phase	Post Code	Description
BDS_CONNECT_LEGACY_ROM	BDS	26	Dispatch option ROMs
BDS_ENUMERATE_ALL_BOOT_OPTION	BDS	27	Get boot device information
BDS_END_OF_BOOT_SELECTION	BDS	28	End of boot selection
BDS_ENTER_SETUP	BDS	29	Enter Setup Menu
BDS_ENTER_BOOT_MANAGER	BDS	2A	Enter Boot manager
BDS_BOOT_DEVICE_SELECT	BDS	2B	Try to boot system to OS
BDS_EFI64_SHADOW_ALL_LEGACY_ROM	BDS	2C	Shadow Misc Option ROM
BDS_ACPI_S3SAVE	BDS	2D	Save S3 resume required data in RAM
BDS_READY_TO_BOOT_EVENT	BDS	2E	Last Chipset initial before boot to OS
BDS_GO_LEGACY_BOOT	BDS	2F	Start to boot Legacy OS
BDS_GO_UEFI_BOOT	BDS	30	Start to boot UEFI OS
BDS_LEGACY16_PREPARE_TO_BOOT	BDS	31	Prepare to Boot to Legacy OS
BDS_EXIT_BOOT_SERVICES	BDS	32	Send END of POST Message to ME via HECI
BDS_LEGACY_BOOT_EVENT	BDS	33	Last Chipset initial before boot to Legacy OS.
BDS_ENTER_LEGACY_16_BOOT	BDS	34	Ready to Boot Legacy OS.
BDS_RECOVERY_START_FLASH	BDS	35	Fast Recovery Start Flash.

PostBDS POST Code Table

Functionality Name (Include\ PostCode.h)	Phase	Post Code	Description
POST_BDS_NO_BOOT_DEVICE	POST_BDS	F9	No Boot Device
POST_BDS_START_IMAGE	POST_BDS	FB	UEFI Boot Start Image
POST_BDS_ENTER_INT19	POST_BDS	FD	Legacy 16 boot entry
POST_BDS_JUMP_BOOT_SECTOR	POST_BDS	FE	Try to Boot with INT 19

S3 Functions POST Code Table

Functionality Name (Include\ PostCode.h)	Phase	Post Code	Description
POST_BDS_NO_BOOT_DEVICE	POST_BDS	F9	No Boot Device
POST_BDS_START_IMAGE	POST_BDS	FB	UEFI Boot Start Image
POST_BDS_ENTER_INT19	POST_BDS	FD	Legacy 16 boot entry
POST_BDS_JUMP_BOOT_SECTOR	POST_BDS	FE	Try to Boot with INT 19

ACPI Functions POST Code Table

Functionality Name (Include\ PostCode.h)	Phase	Post Code	Description
ASL_ENTER_S1	ASL	51	Prepare to enter S1
ASL_ENTER_S3	ASL	53	Prepare to enter S3

Downloaded from www.Manualslib.com manuals search engine

Functionality Name (Include\ PostCode.h)	Phase	Post Code	Description
ASL_ENTER_S4	ASL	54	Prepare to enter S4
ASL_ENTER_S5	ASL	55	Prepare to enter S5
ASL_WAKEUP_S1	ASL	E1	System wakeup from S1
ASL_WAKEUP_S3	ASL	E3	System wakeup from S3
ASL_WAKEUP_S4	ASL	E4	System wakeup from S4

SMM Functions POST Code Table

Functionality Name (Include\ PostCode.h)	Phase	Post Code	Description
SMM_IDENTIFY_FLASH_DEVICE	SMM	0xA0	Identify Flash device in SMM
SMM_SMM_PLATFORM_INIT	SMM	0xA2	SMM service initial
SMM_ACPI_ENABLE_START	SMM	0xA6	OS call ACPI enable function
SMM_ACPI_ENABLE_END	SMM	0xA7	ACPI enable function complete
SMM_S1_SLEEP_CALLBACK	SMM	0xA1	Enter S1
SMM_S3_SLEEP_CALLBACK	SMM	0xA3	Enter S3
SMM_S4_SLEEP_CALLBACK	SMM	0xA4	Enter S4
SMM_S5_SLEEP_CALLBACK	SMM	0xA5	Enter S5
SMM_ACPI_DISABLE_START	SMM	0xA8	OS call ACPI disable function
SMM_ACPI_DISABLE_END	SMM	0xA9	ACPI disable function complete

InsydeH2ODDT Debugger POST Code Table

Functionality Name (Include\ PostCode.h)	PostCode	Description
Used by Insyde debugger	0x0D	Waiting for device connect
Used by Insyde debugger	0xD0	Waiting for device connect
Used by Insyde debugger	0xD1	InsydeH2ODDT Ready
Used by Insyde debugger	0xD2	EHCI not found
Used by Insyde debugger	0xD3	Debug port connect low speed device
Used by Insyde debugger	0xD4	DDT Cable become low speed device
Used by Insyde debugger	0xD5	DDT Cable Transmission Error (Get descriptor fail)
Used by Insyde debugger	0xD6	DDT Cable Transmission Error (Set Debug mode fail)
Used by Insyde debugger	0xD7	DDT Cable Transmission Error (Set address fail)

Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine

Jumper and Connector Locations

Mainboard Top View

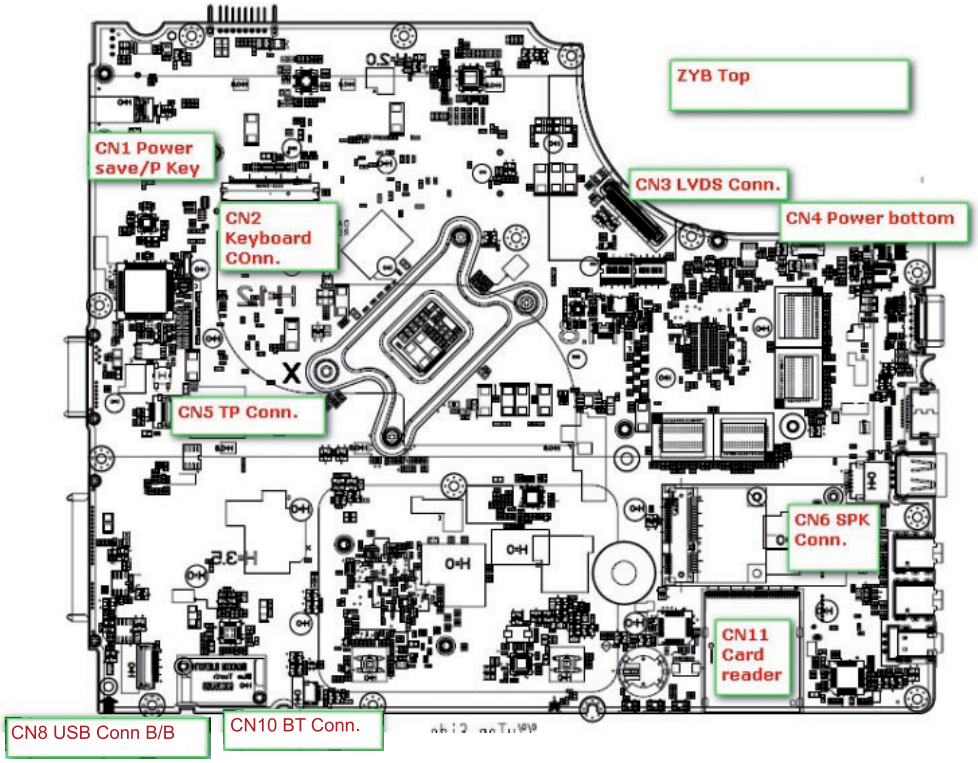

Item	Description	Item	Description
CN1	Power save/P Key	CN2	Keyboard Conn.
CN5	TP Conn.	CN3	LVDS Conn.
CN4	Power Button	CN6	SPK Conn.
CN11	Card Reader	CN10	BT Conn.
CN8	USB Conn. B/B		

Downloaded from www.Manualslib.com manuals search engine

Mainboard Bottom View

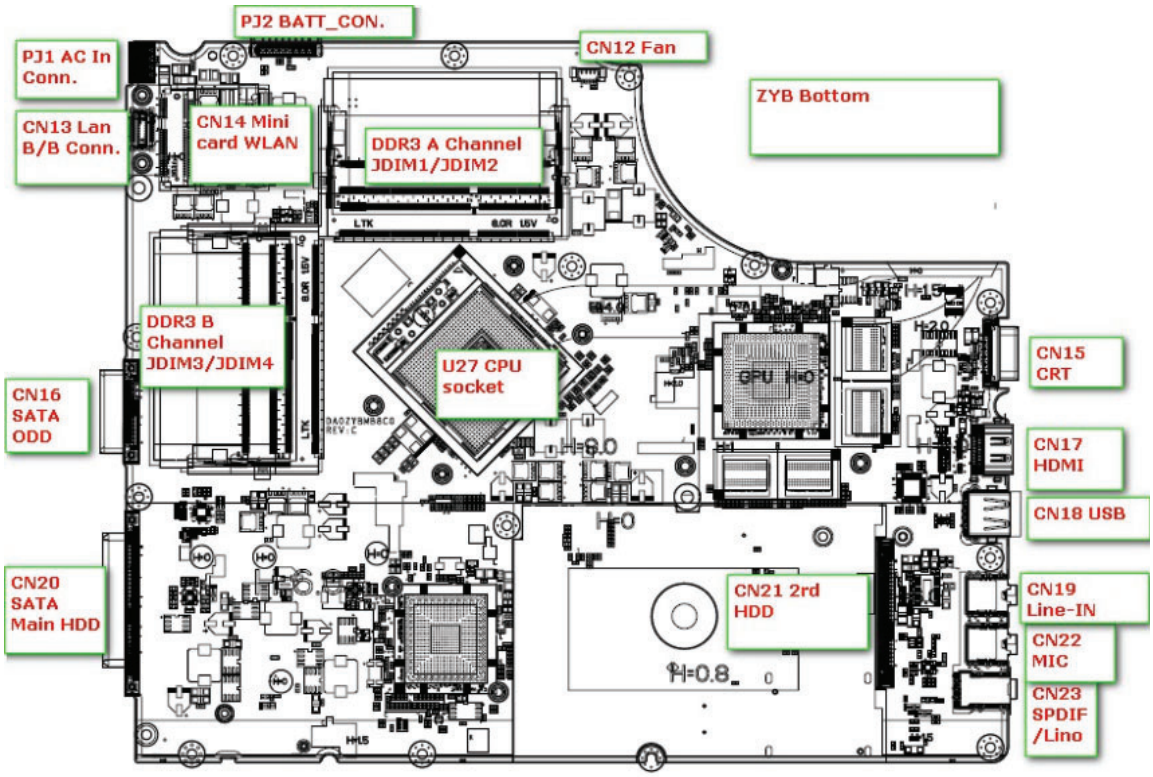

Item	Description	Item	Description
PJ1	AC IN Conn.	CN13	LAN B/B Conn.
CN14	Mini Card WLAN	PJ2	BATT Conn.
DDR3	A Channel JDIM1/JDIM2	CN12	Fan
CN16	SATA ODD	DDR3	B Channel JDIM3/JDIMM4
CN20	SATA Main HDD	U27	CPU Socket
CN21	2nd HDD	CN15	CRT
CN17	HDMI	CN18	USB
CN19	Line-IN	CN22	MIC
CN23	SPDIF/Lino		

Downloaded from www.Manualslib.com manuals search engine

Clearing Password Check and BIOS Recovery

This section provides a procedure for clearing the password and BIOS. The Hardware Open Gap on the main board clears the CMOS of all user settings and restores factory defaults.

Mainboard CMOS Discharge

Discharging the CMOS clears all user settings.

1. Disassemble the notebook and take out the 2nd HDD. See “Removing the 2nd HDD Module” on page 59.
2. Remove the RTC battery. See “Removing the RTC Battery” on page 79.

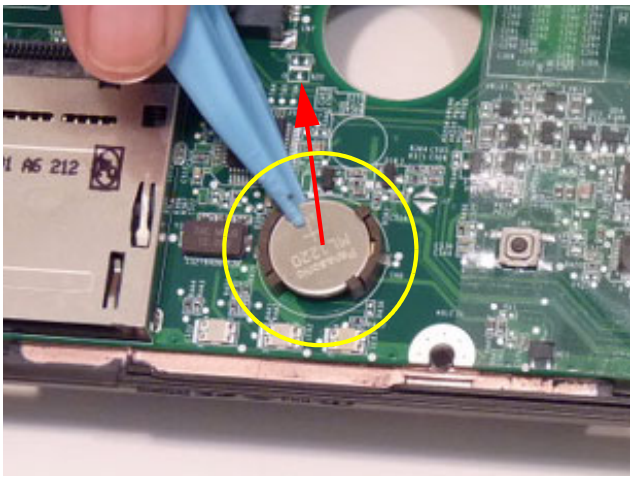

3. Turn the mainboard over and short the G2 pad.

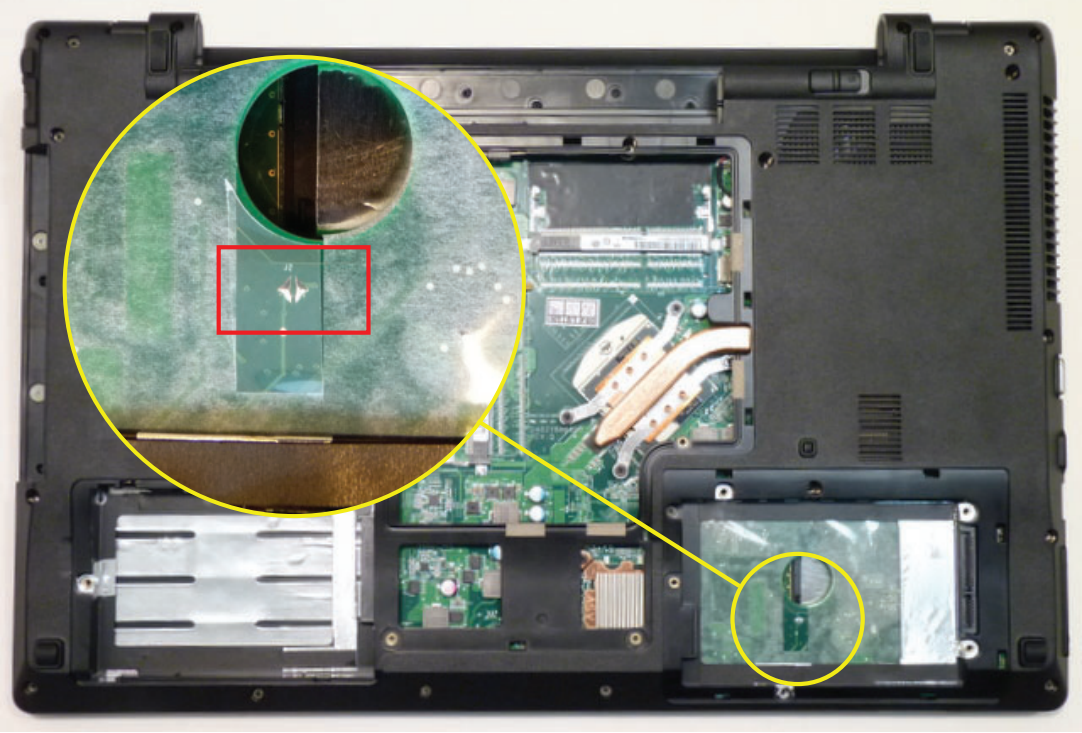

4. Reconnect the RTC battery and reassemble the unit.

Downloaded from www.Manualslib.com manuals search engine

BIOS Recovery by Crisis Disk

BIOS Recovery Boot Block

The BIOS Recovery Boot Block is a special block of BIOS. It is used to boot up the system with minimum BIOS initialization. Users can enable this feature to restore the BIOS firmware to the factory settings if a BIOS flash process fails.

BIOS Recovery Hotkey

The system provides a function hotkey: **Fn+Esc**, to enable the BIOS Recovery process when a system is powered on during BIOS POST. To use this function, it is strongly recommended to have the AC adapter and Battery present. If this function is enabled, the system will force the BIOS to enter a special BIOS block, called Boot Block.

Steps for BIOS Recovery from USB Storage

Before performing this procedure, prepare a Crisis USB key. The Crisis USB key can be made by executing the Crisis Disk program in a functioning system with a Windows 7 OS.

IMPORTANT: The Crisis Disk program will overwrite all data on any drive that you use as a crisis disk.

Follow the steps below:

1. Modify the archive name from " "
2. Save ROM file (file name:) to the root directory of the USB storage.
3. Plug the USB storage into a USB port.
4. Press **Fn + ESC** button then plug in AC.

   The Power button flashes once.
5. Press **Power** button to initiate system CRISIS mode.

   When CRISIS is complete, the system auto restarts with a workable BIOS.
6. Update the latest version BIOS for this machine by the regular BIOS flashing process.

Downloaded from www.Manualslib.com manuals search engine

FRU (Field Replaceable Unit) List

This chapter gives you the FRU (Field Replaceable Unit) listing in global configurations of the computer. Refer to this chapter whenever ordering for parts to repair or for RMA (Return Merchandise Authorization).

Please note that WHEN ORDERING FRU PARTS, you should check the most up-to-date information available on your regional web or channel. For whatever reasons a part number change is made, it will not be noted on the printed Service Guide. For ACER AUTHORIZED SERVICE PROVIDERS, your Acer office may have a DIFFERENT part number code from those given in the FRU list of this printed Service Guide. You MUST use the local FRU list provided by your regional Acer office to order FRU parts for repair and service of customer machines.

NOTE: To scrap or to return the defective parts, you should follow the local government ordinance or regulations on how to dispose it properly, or follow the rules set by your regional Acer office on how to return it.

Downloaded from www.Manualslib.com manuals search engine

Exploded Diagrams

Main Assembly

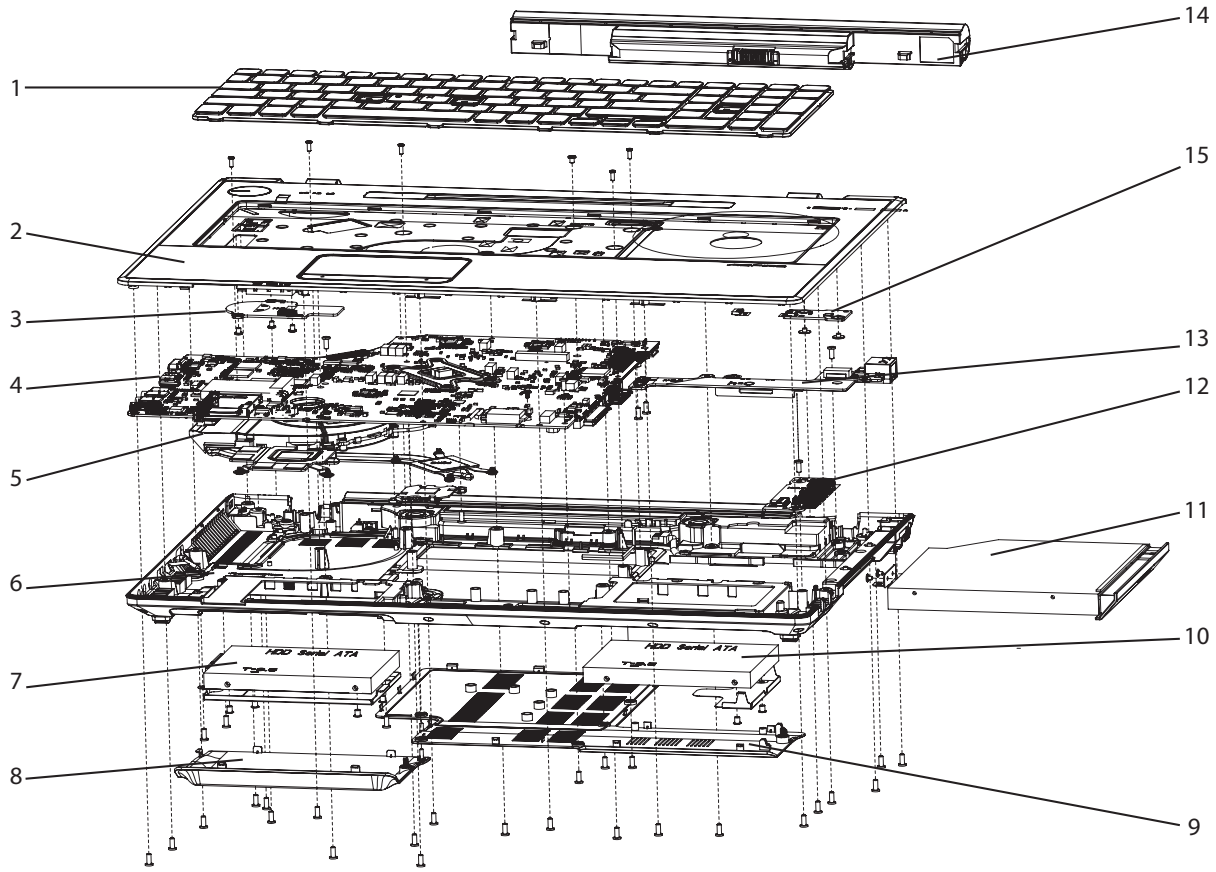

Item	Description	Part Number	Item	Description	Part Number
1	K/B MODULE	KB.I170A.172	9	MAIN HDD DOOR SUB ASSY	42.PUM07.003
2	TOP SUB ASSY	60.PUM07.001	10	HDD	KH.16008.027
3	POWER BOARD ASSY	55.PUM07.001	11	ODD	6M.PUM07.002
4	MAINBOARD	MB.PTZ06.001	12	USB BOARD ASSY	55.PUM07.004
5	THERMAL MODULE ASSY	60.PUM07.007	13	LAN BOARD ASSY	NI.23600.047
6	BASE SUB ASSY	60.PUM07.002	14	BATTERY	BT.00607.122
7	2ND HDD	KH.16008.027	15	SWITCH BOARD ASSY	
8	2ND HDD DOOR SUB ASSY	42.PUM07.004			

NOTE: Part numbers may be different depending on your model. Please refer to the FRU List for a full listing of part numbers.

Downloaded from www.Manualslib.com manuals search engine

LCD Assembly

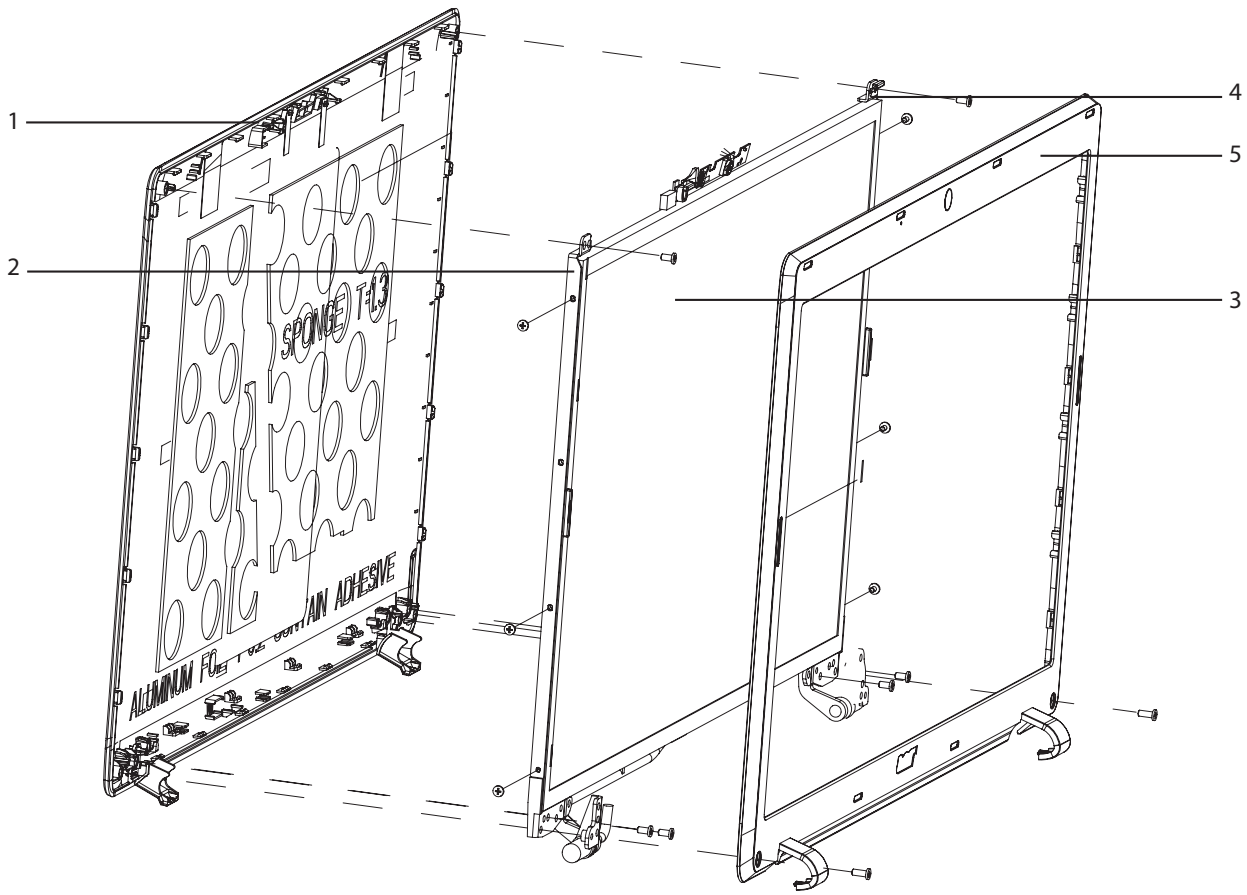

Item	Description	Part Number
1	LCD COVER SUB ASSY	60.PUM07.004
2	HINGE L	33.PUM07.004
3	LCD PANEL	6M.PUM07.001
4	HINGE R	33.PUM07.005
5	LCD BEZEL SUB ASSY	60.PUM07.005

NOTE: Part numbers may be different depending on your model. Please refer to the FRU List for a full listing of part numbers.

Downloaded from www.Manualslib.com manuals search engine

FRU List

CATEGORY	PART NAME	PART NO.
ADAPTER		
	Adapter LITE-ON 65W 19V 1.7x5.5x11 Yellow PA-1650-22AC LV5 LED LF	AP.06503.024
	Adapter DELTA 120W-DE 19V 1.7x5.5x11 Green ADP-120ZB BBGB, LV5+OBL LED LF	AP.12001.009
	Adapter LITE-ON 90W 19V 1.7x5.5x11 Blue PA-1900-34AR, LV5 LED LF	AP.09003.021
BATTERY		
	Battery SIMPLO AS10B Li-Ion 3S2P PANASONIC 6 cell 4400mAh	BT.00607.122
	Battery SIMPLO AS10B Li-Ion 3S2P LGC 6 cell 4400mAh	BT.00607.123
	Battery SIMPLO AS10B Li-Ion 3S2P SAMSUNG 6 cell 4400mAh	BT.00607.124
BOARD		
	Foxconn Bluetooth FOX BRM 2046 BT2.1	BH.21100.004
	Foxconn Wireless LAN Atheros HB95 BGN (HM)	NI.23600.047
	Foxconn Wireless LAN Atheros HB93 2x2 BGN (HM)	NI.23600.062
	Lan Intel WLAN 112BN.HMWG MM#903341	KI.CPH01.001
	POWER BUTTON BOARD	55.PUM07.001
	FUNCTION BOARD	55.PUM07.002
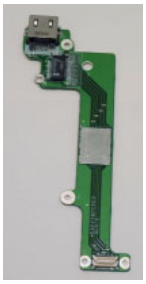	LAN BOARD	55.PUM07.003
	USB BOARD	55.PUM07.004

Downloaded from www.Manualslib.com manuals search engine

CATEGORY	PART NAME	PART NO.
CABLE		
	PWR CORD V943B30001218008 DANISH 3P	27.A03V7.006
	PWR CORD(ISR)1.8M 3PBLK FZ0I0008-038	27.TATV7.005
	PWR CORD V50CB3T3012180QD TW-110V,3P	27.A99V7.002
	POWER CORD(SWI)1.8M 3PBLACK FZ010008-011	27.A99V7.004
	POWER CORD(IT) 1.8M 3PBLACK FZ010008-008	27.A99V7.005
	POWER CORD(S.A) 1.8M 3BLACK FZ010008-006	27.T48V7.001
	POWER CORD US 3PIN ROHS	27.TAXV7.001
	POWER CORD(EU) 1.8M 3PBLACK FM010008-010	27.TATV7.001
	POWER CORD BRAZIL IMETRO 3 PIN	27.S0607.001
	POWER CORD UK 3PIN	27.A03V7.004
	POWER CORD PRC 3P Y536B30001218008	27.TATV7.004
	POWER CORD AU W/LABEL (3 PIN)	27.A50V7.003
	BLUETOOTH CABLE	50.PUM07.001
CASE/COVER/BRACKET ASSEMBLY		
	UPPER CASE(W/FFC*3,TP,TP BD)	60.PUM07.001
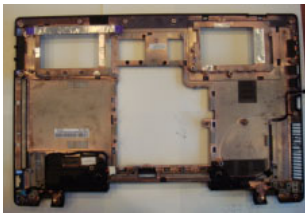	LOWER CASE(W/DC-IN CABLE,USB CABLE,SPK,FOR 120W)	60.PUM07.002
	LOWER CASE(W/DC-IN CABLE,USB CABLE,SPK,FOR 90W)	60.PUM07.003
	MAIN HDD DOOR	42.PUM07.003
	2ND HDD DOOR	42.PUM07.004
	FLAT HDD DOOR FOR 2ND HDD	42.PUM07.005
CPU/PROCESSOR		

Downloaded from www.Manualslib.com manuals search engine

CATEGORY	PART NAME	PART NO.
	CPU Intel Core i5 430M PGA 2.26G ARD, up to SC 2.53G, 3M L3	KC.43001.DMP
	CPU Intel Core i7 720QM 1.6G 6M 1333 45W	KC.72001.QMP
	CPU Intel Core i3 330M PGA 2.13G 35W Arrandale, TJ90, VT, 3M L3	KC.33001.DMP
	CPU Intel Core i7 620M PGA 2.66G 4M	KC.62001.DMP
DVD RW DRIVE		
	ODD SUPER MULTI MODULE ASSY TRAY 8X DL	6M.PUM07.002
	ODD PANASONIC Super-Multi DRIVE 12.7mm Tray DL 8X UJ890A LF W/O bezel SATA (HF + Windows 7)	KU.00807.070
	ODD HLDS Super-Multi DRIVE 12.7mm Tray DL 8X GT30N LF W/O bezel SATA (HF + Windows 7)	KU.0080D.048
	ODD HLDS BD COMBO 12.7mm Tray DL 4X CT21N LF W/O bezel 1.00 SATA (HF + Windows 7)	KO.0040D.004
	ODD BEZEL - SUPER MULTI	42.PUM07.001
	ODD BRACKET	33.PUM07.001
BD COMBO DRIVE		
	ODD BD COMBO MODULE ASSY 4X	6M.PUM07.003
	ODD BEZEL - COMBO	42.PUM07.002
	ODD BRACKET	33.PUM07.001

Downloaded from www.Manualslib.com manuals search engine

CATEGORY	PART NAME	PART NO.
HDD/HARD DISK DRIVE		
	HDD WD 2.5" 5400rpm 160GB WD1600BEVT-22A23T0 , WD, ML320S SATA 8MB LF F/W:01.01A01	KH.16008.027
	HDD SEAGATE 2.5" 5400rpm 250GB ST9250315AS Wyatt SATA LF F/W:0001SDM1	KH.25001.016
	HDD WD 2.5" 5400rpm 250GB WD2500BEVT-22A23T0, WD, ML320S SATA 8MB LF F/W:01.01A01.	KH.25008.025
	HDD BRACKET	33.PUM07.002
	2ND HDD BRACKET	33.PUM07.003
	2ND HDD CONN	20.PUM07.001
KEYBOARD		
	Keyboard ACER AC7T_A10B AC7T Internal 17 Standard 103KS Black US International Texture	KB.I170A.172
	Keyboard ACER AC7T_A10B AC7T Internal 17 Standard 103KS Black Chinese Texture	KB.I170A.151
	Keyboard ACER AC7T_A10B AC7T Internal 17 Standard 103KS Black Greek Texture	KB.I170A.156
	Keyboard ACER AC7T_A10B AC7T Internal 17 Standard 103KS Black Thailand Texture	KB.I170A.169
	Keyboard ACER AC7T_A10B AC7T Internal 17 Standard 104KS Black SLO/CRO Texture	KB.I170A.165
	Keyboard ACER AC7T_A10B AC7T Internal 17 Standard 104KS Black CZ/SK Texture	KB.I170A.150
	Keyboard ACER AC7T_A10B AC7T Internal 17 Standard 104KS Black Hungarian Texture	KB.I170A.157
	Keyboard ACER AC7T_A10B AC7T Internal 17 Standard 104KS Black Brazilian Portuguese Texture	KB.I170A.149
	Keyboard ACER AC7T_A10B AC7T Internal 17 Standard 103KS Black Russian Texture	KB.I170A.164
	Keyboard ACER AC7T_A10B AC7T Internal 17 Standard 104KS Black Turkish Texture	KB.I170A.170
	Keyboard ACER AC7T_A10B AC7T Internal 17 Standard 104KS Black Belgium Texture	KB.I170A.148

Downloaded from www.Manualslib.com manuals search engine

CATEGORY	PART NAME	PART NO.
	Keyboard ACER AC7T_A10B AC7T Internal 17 Standard 104KS Black Sweden Texture	KB.I170A.167
	Keyboard ACER AC7T_A10B AC7T Internal 17 Standard 104KS Black UK Texture	KB.I170A.171
	Keyboard ACER AC7T_A10B AC7T Internal 17 Standard 104KS Black French Texture	KB.I170A.154
	Keyboard ACER AC7T_A10B AC7T Internal 17 Standard 104KS Black German Texture	KB.I170A.155
	Keyboard ACER AC7T_A10B AC7T Internal 17 Standard 104KS Black Italian Texture	KB.I170A.158
	Keyboard ACER AC7T_A10B AC7T Internal 17 Standard 107KS Black Japanese Texture	KB.I170A.159
	Keyboard ACER AC7T_A10B AC7T Internal 17 Standard 104KS Black US w/ Canadian French Texture	KB.I170A.174
	Keyboard ACER AC7T_A10B AC7T Internal 17 Standard 104KS Black Danish Texture	KB.I170A.152
	Keyboard ACER AC7T_A10B AC7T Internal 17 Standard 104KS Black Nordic Texture	KB.I170A.161
	Keyboard ACER AC7T_A10B AC7T Internal 17 Standard 104KS Black Spanish Texture	KB.I170A.166
	Keyboard ACER AC7T_A10B AC7T Internal 17 Standard 103KS Black Arabic Texture	KB.I170A.147
	Keyboard ACER AC7T_A10B AC7T Internal 17 Standard 104KS Black FR/Arabic Texture	KB.I170A.153
	Keyboard ACER AC7T_A10B AC7T Internal 17 Standard 104KS Black Swiss/G Texture	KB.I170A.168
	Keyboard ACER AC7T_A10B AC7T Internal 17 Standard 104KS Black Portuguese Texture	KB.I170A.163
	Keyboard ACER AC7T_A10B AC7T Internal 17 Standard 103KS Black US International w/ Hebrew Texture	KB.I170A.173
	Keyboard ACER AC7T_A10B AC7T Internal 17 Standard 104KS Black Norwegian Texture	KB.I170A.162
	Keyboard ACER AC7T_A10B AC7T Internal 17 Standard 103KS Black Korean Texture	KB.I170A.160
LCD		
	LCD MODULE 17.3 LED WXGA+ GLARE W/MIC ANT*2	6M.PUM07.001
	LED LCD AUO 17.3" WXGA+ Glare B173RW01-V3 LF 220nit 8ms 500:1	LK.17305.002
	LCD COVER(W/MIC,ANT*2)	60.PUM07.004

Downloaded from www.Manualslib.com manuals search engine

CATEGORY	PART NAME	PART NO.
	LCD BEZEL	60.PUM07.005
	LCD CABLE	50.PUM07.002
	LCD BRACKET HINGE - L	33.PUM07.004
	LCD BRACKET HINGE - R	33.PUM07.005
CCD		
	Suyin 1.3M SY9665SN	AM.21400.068
	Chicony 1.3M CH9665SN (CNF9157)	AM.21400.067
	Liteon 1.3M LT9665AL (09P2SF119)	AM.21400.069
	Liteon 1.3M LT6AASP(09P2BF127)	AM.21400.070
MAINBOARD		
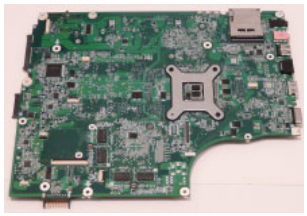	M/B DC UMA HM55 W/CARD READER W/O CPU RAM	MB.PTZ06.001
	M/B DC DIS HM55 BROADWAY_PRO 1G W/ CARD READER W/O CPU RAM	MB.PUP06.001
	M/B DC DIS HM55 MADISON_PRO 1G W/CARD READER W/O CPU RAM	MB.PUN06.001
	M/B DC DIS HM55 PARK_XT 512M W/CARD READER W/O CPU RAM	MB.PUK06.001
	M/B QC DIS HM55 BROADWAY_PRO 1G W/ CARD READER W/O CPU RAM	MB.PUM06.001
	M/B QC DIS HM55 LF MADISON_PRO 1G W/ CARD READER W/O CPU RAM	MB.PUL06.001
	M/B QC DIS HM55 PARK_XT 512M W/CARD READER W/O CPU RAM	MB.PUQ06.001

Downloaded from www.Manualslib.com manuals search engine

CATEGORY	PART NAME	PART NO.
MEMORY		
	Memory HYNIX SO-DIMM DDRIII 1066 1GB HMT112S6BFR6C-G7 N0 LF 64*16 0.055um	KN.1GB0G.025
	Memory SAMSUNG SO-DIMM DDRIII 1066 2GB M471B5673EH1-CF8 LF 128*8 0.055um	KN.2GB0B.012
	Memory ELPIDA SO-DIMM DDRIII 1333 2GB EBJ21UE8BDS0-DJ-F LF 128*8 0.065um	KN.2GB09.007
HEATSINK		
	HEAT SINK	60.PUM07.006
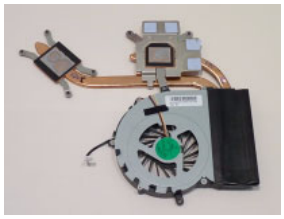	THERMAL MODULE - DIS 45W	60.PUM07.007
	THERMAL MODULE - UMA 45W	60.PUM07.008
SPEAKER		
	SPEAKER SET (L/R)	23.PUM07.001
MISCELLANEOUS		
	BASE RUBBER FRONTS	47.PUM07.001
	BASE RUBBER REAR	47.PUM07.002
	LCD BEZEL RUBBER MIDDLE SIZE (IN TOP SIDE)	47.PUM07.003
	LCD BEZEL RUBBER LONG (IN R/L SIDE)	47.PUM07.004
	LCD BEZEL-MYLAR	47.PUM07.005

Screw Table

SCREW	DESCRIPTION	PART NO.
SCREW M2.5X4-I-NYLOK K	SA1 SCREW M2.5*4.0-I(NYLOK)IRON S.P	86.T23V7.009
SCREW M2.5*6-I(BNI)(NYLOK)	ZB1 SCREW M2.5*6-I(BNI)(NYLOK)S/P	86.A08V7.004
SCREW M2.0*3.0-I(BKAG)(NYLOK) IRON	ZY6 SCREW M2.0*3.0-I(BKAG)(NYLOK) IRON S.P	86.ARE07.002
SCREW M2.5*2-I (NI,NYLOK)IRON	ZR6 SCREW M2.5*2-I (NI,NYLOK)IRON S.P	86.EDM07.002
SCREW M2.0*5-I(NI)(NYLOK)	ZI1S SCREW M2.5X5.0-I-NI-NYLOK S/P	86.T23V7.010
SCREW M3*0.5+3.5I	ZR1 SCREW M3*0.5+3.5I S/P	86.TDY07.003

Downloaded from www.Manualslib.com manuals search engine

Model Definition and Configuration

Acer Aspire 7745G Series

Model	RO	Country	Acer Part No	Description
AS7745G-728G75Bn	WW	WW	S2.PUM 02.002	AS7745G-728G75Bn W7HP64AWW1 MC BROADWAY_PRO1GBCksQ_3D4V3J 2G+2G+2G+2G/500_L+250/BT/6L2.2/5R/ CB_bgn_1.3C_GEk_ES62
AS7745G-728G75Bn	WW	WW	S2.PUM 02.002	AS7745G-728G75Bn W7HP64AWW1 MC BROADWAY_PRO1GBCksQ_3D4V3J 2G+2G+2G+2G/500_L+250/BT/6L2.2/5R/ CB_bgn_1.3C_GEk_ES62
AS7745G-728G64Bn	EMEA	Germany	LX.PUL 02.143	AS7745G-728G64Bn W7HP64ATDE1 MC MADISON_PRO1GBCksQ_3D4V3J 2G+2G+2G+2G/640/BT/6L2.2/5R/ CB_bgn_1.3C_GEk_DE11
AS7745G-728G57Mn	WW	WW	S2.PUL 02.002	AS7745G-728G57Mn W7HP64AWW1 MC MADISON_PRO1GBCksQ_3D4V3J 2G+2G+2G+2G/320+250/BT/6L2.2/5R/ CB_bgn_1.3C_GEk_ES62
AS7745G-728G57Mn	WW	WW	S2.PUL 02.002	AS7745G-728G57Mn W7HP64AWW1 MC MADISON_PRO1GBCksQ_3D4V3J 2G+2G+2G+2G/320+250/BT/6L2.2/5R/ CB_bgn_1.3C_GEk_ES62
AS7745G-728G50Bn	PA	USA	LX.PUL 02.144	AS7745G-728G50Bn W7HP64ATUS1 MC MADISON_PRO1GBCksQ_3D4V3J 2G+2G+2G+2G/500_L/6L2.2/5R/ CB_bgn_1.3C_GEk_FRB1
AS7745G-728G50Bn	PA	USA	LX.PUL 02.145	AS7745G-728G50Bn W7HP64ATUS1 MC MADISON_PRO1GBCksQ_3D4V3J 2G+2G+2G+2G/500_L/BT/6L2.2/5R/ CB_bgn_1.3C_GEk_FRB1
AS7745G-728G1TWn	EMEA	France	LX.PUM 02.003	AS7745G-728G1TWn W7HP64ATFR1 MC BROADWAY_PRO1GBCksQ_3D4V3J 2G+2G+2G+2G/500_L+500_L/BT/9L3.0/5R/ CB_bgn_1.3C_GEk_FR21
AS7745G-728G1TMn	EMEA	Spain	LX.PUL 02.091	AS7745G-728G1TMn W7HP64ATES1 MC MADISON_PRO1GBCksQ_3D4V3J 2G+2G+2G+2G/500_L+500_L/6L2.2/5R/ CB_bgn_1.3C_GEk_ES51
AS7745G-728G1TBn	EMEA	France	LX.PUM 02.004	AS7745G-728G1TBn W7HP64ATFR1 MC BROADWAY_PRO1GBCksQ_3D4V3J 2G+2G+2G+2G/500_L+500_L/BT/9L3.0/5R/ CB_bgn_1.3C_GEk_FR21

Downloaded from www.Manualslib.com manuals search engine

Model	RO	Country	Acer Part No	Description
AS7745G-728G1TBn	EMEA	Switzerland	LX.PUM02.005	AS7745G-728G1TBn W7HP64ATCH1 MC BROADWAY_PRO1GBCksQ_3D4V3J 2G+2G+2G+2G/500_L+500_L/BT/9L3.0/5R/ CB_bgn_1.3C_GEk_IT41
AS7745G-728G1TBi	EMEA	Russia	LX.PUM02.053	AS7745G-728G1TBi W7HP64RUATRU1 MC BROADWAY_PRO1GBCksQ_3D4V3J 2G+2G+2G+2G/500_L+500_L/BT/9L3.0/5R/ CB_bg_1.3C_GEk_RU11
AS7745G-728G1.28TWn	EMEA	Germany	LX.PUM02.055	AS7745G-728G1.28TWn W7HP64ATDE1 MC BROADWAY_PRO1GBCksQ_3D4V3J 2G+2G+2G+2G/640+640/BT/9L3.0/5R/ CB_bgn_1.3C_GEk_DE11
AS7745G-728G1.28TWn	AAP	Japan	LX.PUM02.064	AS7745G-728G1.28TWn W7HP64AJP1 MC BROADWAY_PRO1GBCksQ_3D4V3J 2G+2G+2G+2G/640+640/BT/9L3.0/5R/ CB_bgn_1.3C_GEk_JA11
AS7745G-728G1.28TBn	EMEA	Algeria	LX.PUL02.078	AS7745G-728G1.28TBn EM W7HP64EMATDZ1 MC MADISON_PRO1GBCksQ_3D4V3J 2G+2G+2G+2G/640+640/6L2.2/5R/ CB_bgn_1.3C_GEk_ES81
AS7745G-728G1.28TBn	EMEA	Austria	LX.PUL02.049	AS7745G-728G1.28TBn W7HP64ATAT1 MC MADISON_PRO1GBCksQ_3D4V3J 2G+2G+2G+2G/640+640/6L2.2/5R/ CB_bgn_1.3C_GEk_DE61
AS7745G-728G1.28TBn	EMEA	Baltic	LX.PUL02.050	AS7745G-728G1.28TBn W7HP64ATBC3 MC MADISON_PRO1GBCksQ_3D4V3J 2G+2G+2G+2G/640+640/6L2.2/5R/ CB_bgn_1.3C_GEk_SV21
AS7745G-728G1.28TBn	EMEA	Baltic	LX.PUL02.063	AS7745G-728G1.28TBn W7HP64ATBC4 MC MADISON_PRO1GBCksQ_3D4V3J 2G+2G+2G+2G/640+640/6L2.2/5R/ CB_bgn_1.3C_GEk_LT11
AS7745G-728G1.28TBn	EMEA	Baltic	LX.PUL02.072	AS7745G-728G1.28TBn W7HP64ATBC5 MC MADISON_PRO1GBCksQ_3D4V3J 2G+2G+2G+2G/640+640/6L2.2/5R/ CB_bgn_1.3C_GEk_LT11
AS7745G-728G1.28TBn	EMEA	Belgium	LX.PUL02.074	AS7745G-728G1.28TBn W7HP64ATBE1 MC MADISON_PRO1GBCksQ_3D4V3J 2G+2G+2G+2G/640+640/6L2.2/5R/ CB_bgn_1.3C_GEk_NL11
AS7745G-728G1.28TBn	EMEA	Cyprus	LX.PUL02.065	AS7745G-728G1.28TBn W7HP64ATCY1 MC MADISON_PRO1GBCksQ_3D4V3J 2G+2G+2G+2G/640+640/6L2.2/5R/ CB_bgn_1.3C_GEk_ES61
AS7745G-728G1.28TBn	EMEA	Czech	LX.PUL02.066	AS7745G-728G1.28TBn W7HP64ATCZ2 MC MADISON_PRO1GBCksQ_3D4V3J 2G+2G+2G+2G/640+640/6L2.2/5R/ CB_bgn_1.3C_GEk_SK11
AS7745G-728G1.28TBn	EMEA	Denmark	LX.PUL02.062	AS7745G-728G1.28TBn W7HP64ATDK2 MC MADISON_PRO1GBCksQ_3D4V3J 2G+2G+2G+2G/640+640/6L2.2/5R/ CB_bgn_1.3C_GEk_ENS1

Downloaded from www.Manualslib.com manuals search engine

Model	RO	Country	Acer Part No	Description
AS7745G-728G1.28TBn	EMEA	Eastern Europe	LX.PUL02.047	AS7745G-728G1.28TBn W7HP64ATEU7 MC MADISON_PRO1GBCksQ_3D4V3J 2G+2G+2G+2G/640+640/6L2.2/5R/ CB_bgn_1.3C_GEk_SL11
AS7745G-728G1.28TBn	EMEA	Eastern Europe	LX.PUL02.052	AS7745G-728G1.28TBn W7HP64ATEU4 MC MADISON_PRO1GBCksQ_3D4V3J 2G+2G+2G+2G/640+640/6L2.2/5R/ CB_bgn_1.3C_GEk_SV21
AS7745G-728G1.28TBn	EMEA	Eastern Europe	LX.PUL02.057	AS7745G-728G1.28TBn W7HP64ATEU5 MC MADISON_PRO1GBCksQ_3D4V3J 2G+2G+2G+2G/640+640/6L2.2/5R/ CB_bgn_1.3C_GEk_PL71
AS7745G-728G1.28TBn	EMEA	Eastern Europe	LX.PUL02.058	AS7745G-728G1.28TBn W7HP64ATEU5 MC MADISON_PRO1GBCksQ_3D4V3J 2G+2G+2G+2G/640+640/6L2.2/5R/ CB_bgn_1.3C_GEk_RO11
AS7745G-728G1.28TBn	EMEA	Eastern Europe	LX.PUL02.061	AS7745G-728G1.28TBn W7HP64ATEU7 MC MADISON_PRO1GBCksQ_3D4V3J 2G+2G+2G+2G/640+640/6L2.2/5R/ CB_bgn_1.3C_GEk_ENQ1
AS7745G-728G1.28TBn	EMEA	France	LX.PUL02.046	AS7745G-728G1.28TBn W7HP64ATFR1 MC MADISON_PRO1GBCksQ_3D4V3J 2G+2G+2G+2G/640+640/6L2.2/5R/ CB_bgn_1.3C_GEk_FR21
AS7745G-728G1.28TBn	EMEA	Germany	LX.PUL02.080	AS7745G-728G1.28TBn W7HP64ATDE1 MC MADISON_PRO1GBCksQ_3D4V3J 2G+2G+2G+2G/640+640/6L2.2/5R/ CB_bgn_1.3C_GEk_DE11
AS7745G-728G1.28TBn	EMEA	Greece	LX.PUL02.048	AS7745G-728G1.28TBn W7HP64ATGR1 MC MADISON_PRO1GBCksQ_3D4V3J 2G+2G+2G+2G/640+640/6L2.2/5R/ CB_bgn_1.3C_GEk_EL31
AS7745G-728G1.28TBn	EMEA	Holland	LX.PUL02.075	AS7745G-728G1.28TBn W7HP64ATNL1 MC MADISON_PRO1GBCksQ_3D4V3J 2G+2G+2G+2G/640+640/6L2.2/5R/ CB_bgn_1.3C_GEk_NL11
AS7745G-728G1.28TBn	EMEA	Hungary	LX.PUL02.054	AS7745G-728G1.28TBn W7HP64ATHU1 MC MADISON_PRO1GBCksQ_3D4V3J 2G+2G+2G+2G/640+640/6L2.2/5R/ CB_bgn_1.3C_GEk_HU11
AS7745G-728G1.28TBn	EMEA	Israel	LX.PUL02.053	AS7745G-728G1.28TBn W7HP64ATIL1 MC MADISON_PRO1GBCksQ_3D4V3J 2G+2G+2G+2G/640+640/6L2.2/5R/ CB_bgn_1.3C_GEk_HE11
AS7745G-728G1.28TBn	EMEA	Italy	LX.PUL02.060	AS7745G-728G1.28TBn W7HP64ATIT1 MC MADISON_PRO1GBCksQ_3D4V3J 2G+2G+2G+2G/640+640/6L2.2/5R/ CB_bgn_1.3C_GEk_IT11
AS7745G-728G1.28TBn	EMEA	Latvia	LX.PUL02.055	AS7745G-728G1.28TBn W7HP64ATLV1 MC MADISON_PRO1GBCksQ_3D4V3J 2G+2G+2G+2G/640+640/6L2.2/5R/ CB_bgn_1.3C_GEk_LT11

Downloaded from www.Manualslib.com manuals search engine

Model	RO	Country	Acer Part No	Description
AS7745G-728G1.28TBn	EMEA	Latvia	LX.PUL02.056	AS7745G-728G1.28TBn W7HP64ATLV1 MC MADISON_PRO1GBCksQ_3D4V3J 2G+2G+2G+2G/640+640/6L2.2/5R/ CB_bgn_1.3C_GEk_RU22
AS7745G-728G1.28TBn	EMEA	Luxembourg	LX.PUL02.076	AS7745G-728G1.28TBn W7HP64ATLU3 MC MADISON_PRO1GBCksQ_3D4V3J 2G+2G+2G+2G/640+640/6L2.2/5R/ CB_bgn_1.3C_GEk_IT41
AS7745G-728G1.28TBn	EMEA	Middle East	LX.PUL02.067	AS7745G-728G1.28TBn EM W7HP64EMATME6 MC MADISON_PRO1GBCksQ_3D4V3J 2G+2G+2G+2G/640+640/6L2.2/5R/ CB_bgn_1.3C_GEk_ES61
AS7745G-728G1.28TBn	EMEA	Middle East	LX.PUL02.068	AS7745G-728G1.28TBn EM W7HP64EMATME3 MC MADISON_PRO1GBCksQ_3D4V3J 2G+2G+2G+2G/640+640/6L2.2/5R/ CB_bgn_1.3C_GEk_ES81
AS7745G-728G1.28TBn	EMEA	Middle East	LX.PUL02.070	AS7745G-728G1.28TBn EM W7HP64EMATME2 MC MADISON_PRO1GBCksQ_3D4V3J 2G+2G+2G+2G/640+640/6L2.2/5R/ CB_bgn_1.3C_GEk_AR11
AS7745G-728G1.28TBn	EMEA	Middle East	LX.PUL02.077	AS7745G-728G1.28TBn EM W7HP64EMATME4 MC MADISON_PRO1GBCksQ_3D4V3J 2G+2G+2G+2G/640+640/6L2.2/5R/ CB_bgn_1.3C_GEk_ES61
AS7745G-728G1.28TBn	EMEA	Middle East	LX.PUL02.079	AS7745G-728G1.28TBn EM W7HP64EMATME9 MC MADISON_PRO1GBCksQ_3D4V3J 2G+2G+2G+2G/640+640/6L2.2/5R/ CB_bgn_1.3C_GEk_ES81
AS7745G-728G1.28TBn	EMEA	Middle East	LX.PUL02.083	AS7745G-728G1.28TBn EM W7HP64EMATMEB MC MADISON_PRO1GBCksQ_3D4V3J 2G+2G+2G+2G/640+640/6L2.2/5R/ CB_bgn_1.3C_GEk_ARA1
AS7745G-728G1.28TBn	EMEA	Middle East	LX.PUL02.084	AS7745G-728G1.28TBn EM W7HP64EMATME2 MC MADISON_PRO1GBCksQ_3D4V3J 2G+2G+2G+2G/640+640/6L2.2/5R/ CB_bgn_1.3C_GEk_AR21
AS7745G-728G1.28TBn	EMEA	Middle East	LX.PUL02.086	AS7745G-728G1.28TBn EM W7HP64EMATME2 MC MADISON_PRO1GBCksQ_3D4V3J 2G+2G+2G+2G/640+640/6L2.2/5R/ CB_bgn_1.3C_GEk_ES61
AS7745G-728G1.28TBn	EMEA	Middle East	LX.PUL02.087	AS7745G-728G1.28TBn EM W7HP64EMATME4 MC MADISON_PRO1GBCksQ_3D4V3J 2G+2G+2G+2G/640+640/6L2.2/5R/ CB_bgn_1.3C_GEk_RU61
AS7745G-728G1.28TBn	EMEA	Poland	LX.PUL02.081	AS7745G-728G1.28TBn W7HP64ATPL1 MC MADISON_PRO1GBCksQ_3D4V3J 2G+2G+2G+2G/640+640/6L2.2/5R/ CB_bgn_1.3C_GEk_PL11
AS7745G-728G1.28TBn	EMEA	Portugal	LX.PUL02.064	AS7745G-728G1.28TBn W7HP64ATPT1 MC MADISON_PRO1GBCksQ_3D4V3J 2G+2G+2G+2G/640+640/6L2.2/5R/ CB_bgn_1.3C_GEk_PT11

Downloaded from www.Manualslib.com manuals search engine

Model	RO	Country	Acer Part No	Description
AS7745G-728G1.28TBn	EMEA	Serbia/ Macedonia	LX.PUL02.051	AS7745G-728G1.28TBn W7HP64ATCS1 MC MADISON_PRO1GBCksQ_3D4V3J 2G+2G+2G+2G/640+640/6L2.2/5R/ CB_bgn_1.3C_GEk_SL11
AS7745G-728G1.28TBn	EMEA	South Africa	LX.PUL02.069	AS7745G-728G1.28TBn EM W7HP64EMATZA4 MC MADISON_PRO1GBCksQ_3D4V3J 2G+2G+2G+2G/640+640/6L2.2/5R/ CB_bgn_1.3C_GEk_ES61
AS7745G-728G1.28TBn	EMEA	South Africa	LX.PUL02.082	AS7745G-728G1.28TBn EM W7HP64EMATZA1 MC MADISON_PRO1GBCksQ_3D4V3J 2G+2G+2G+2G/640+640/6L2.2/5R/ CB_bgn_1.3C_GEk_ES81
AS7745G-728G1.28TBn	EMEA	South Africa	LX.PUL02.088	AS7745G-728G1.28TBn EM W7HP64EMATZA2 MC MADISON_PRO1GBCksQ_3D4V3J 2G+2G+2G+2G/640+640/6L2.2/5R/ CB_bgn_1.3C_GEk_ES61
AS7745G-728G1.28TBn	EMEA	Spain	LX.PUL02.059	AS7745G-728G1.28TBn W7HP64ATES1 MC MADISON_PRO1GBCksQ_3D4V3J 2G+2G+2G+2G/640+640/6L2.2/5R/ CB_bgn_1.3C_GEk_ES51
AS7745G-728G1.28TBn	EMEA	Switzerland	LX.PUL02.073	AS7745G-728G1.28TBn W7HP64ATCH1 MC MADISON_PRO1GBCksQ_3D4V3J 2G+2G+2G+2G/640+640/6L2.2/5R/ CB_bgn_1.3C_GEk_IT41
AS7745G-728G1.28TBn	EMEA	Turkey	LX.PUL02.085	AS7745G-728G1.28TBn EM W7HP64EMATTR1 MC MADISON_PRO1GBCksQ_3D4V3J 2G+2G+2G+2G/640+640/6L2.2/5R/ CB_bgn_1.3C_GEk_TR31
AS7745G-728G1.28TBn	EMEA	UK	LX.PUL02.071	AS7745G-728G1.28TBn W7HP64ATGB1 MC MADISON_PRO1GBCksQ_3D4V3J 2G+2G+2G+2G/640+640/6L2.2/5R/ CB_bgn_1.3C_GEk_EN11
AS7745G-728G1.28TBn	EMEA	Ukraine	LX.PUL02.090	AS7745G-728G1.28TBn W7HP64RUATUK1 MC MADISON_PRO1GBCksQ_3D4V3J 2G+2G+2G+2G/640+640/6L2.2/5R/ CB_bgn_1.3C_GEk_RU61
AS7745G-728G1.28TBi	EMEA	Russia	LX.PUL02.089	AS7745G-728G1.28TBi W7HP64RUATRU1 MC MADISON_PRO1GBCksQ_3D4V3J 2G+2G+2G+2G/640+640/6L2.2/5R/ CB_bg_1.3C_GEk_RU11
AS7745G-726G64Mn	EMEA	Czech	LX.PUM02.062	AS7745G-726G64Mn W7HP64ATCZ2 MC BROADWAY_PRO1GBCksQ_3D4V3J 2G+2G+2G/ 640/BT/9L3.0/5R/CB_bgn_1.3C_GEk_SK11
AS7745G-726G1TMn	EMEA	Belgium	LX.PUL02.139	AS7745G-726G1TMn W7HP64ATBE1 MC MADISON_PRO1GBCksQ_3D4V3J 2G+2G+2G/ 500_L+500_L/BT/6L2.2/5R/ CB_bgn_1.3C_GEk_NL11
AS7745G-726G1TMn	EMEA	Belgium	LX.PUM02.059	AS7745G-726G1TMn W7HP64ATBE1 MC BROADWAY_PRO1GBCksQ_3D4V3J 2G+2G+2G/ 500_L+500_L/BT/9L3.0/5R/ CB_bgn_1.3C_GEk_NL11

Downloaded from www.Manualslib.com manuals search engine

Model	RO	Country	Acer Part No	Description
AS7745G-726G1TMn	EMEA	France	LX.PUM02.002	AS7745G-726G1TMn W7HP64ATFR1 MC BROADWAY_PRO1GBCksQ_3D4V3J 2G+2G+2G/500_L+500_L/9L3.0/5R/CB_bgn_1.3C_GEk_FR21
AS7745G-726G1TMn	EMEA	Holland	LX.PUL02.141	AS7745G-726G1TMn W7HP64ATNL1 MC MADISON_PRO1GBCksQ_3D4V3J 2G+2G+2G/500_L+500_L/BT/6L2.2/5R/CB_bgn_1.3C_GEk_NL11
AS7745G-726G1TMn	EMEA	Holland	LX.PUM02.061	AS7745G-726G1TMn W7HP64ATNL1 MC BROADWAY_PRO1GBCksQ_3D4V3J 2G+2G+2G/500_L+500_L/BT/9L3.0/5R/CB_bgn_1.3C_GEk_NL11
AS7745G-726G1TMn	EMEA	Luxembourg	LX.PUL02.140	AS7745G-726G1TMn W7HP64ATLU3 MC MADISON_PRO1GBCksQ_3D4V3J 2G+2G+2G/500_L+500_L/BT/6L2.2/5R/CB_bgn_1.3C_GEk_IT41
AS7745G-726G1TMn	EMEA	Luxembourg	LX.PUM02.060	AS7745G-726G1TMn W7HP64ATLU3 MC BROADWAY_PRO1GBCksQ_3D4V3J 2G+2G+2G/500_L+500_L/BT/9L3.0/5R/CB_bgn_1.3C_GEk_IT41
AS7745G-726G1TBn	EMEA	UK	LX.PUM02.063	AS7745G-726G1TBn W7HP64ATGB1 MC BROADWAY_PRO1GBCksQ_3D4V3J 2G+2G+2G/500_L+500_L/BT/9L3.0/5R/CB_bgn_1.3C_GEk_EN11
AS7745G-724G64Mn	EMEA	Algeria	LX.PUL02.035	AS7745G-724G64Mn EM W7HP64EMATDZ1 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/640/6L2.2/5R/CB_bgn_1.3C_GEk_ES81
AS7745G-724G64Mn	EMEA	Austria	LX.PUL02.004	AS7745G-724G64Mn W7HP64ATAT1 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/640/6L2.2/5R/CB_bgn_1.3C_GEk_DE61
AS7745G-724G64Mn	EMEA	Baltic	LX.PUL02.005	AS7745G-724G64Mn W7HP64ATBC3 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/640/6L2.2/5R/CB_bgn_1.3C_GEk_SV21
AS7745G-724G64Mn	EMEA	Baltic	LX.PUL02.008	AS7745G-724G64Mn W7HP64ATBC4 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/640/6L2.2/5R/CB_bgn_1.3C_GEk_LT11
AS7745G-724G64Mn	EMEA	Baltic	LX.PUL02.023	AS7745G-724G64Mn W7HP64ATBC5 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/640/6L2.2/5R/CB_bgn_1.3C_GEk_LT11
AS7745G-724G64Mn	EMEA	Belgium	LX.PUL02.025	AS7745G-724G64Mn W7HP64ATBE1 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/640/6L2.2/5R/CB_bgn_1.3C_GEk_NL11
AS7745G-724G64Mn	EMEA	Cyprus	LX.PUL02.010	AS7745G-724G64Mn W7HP64ATCY1 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/640/6L2.2/5R/CB_bgn_1.3C_GEk_ES61
AS7745G-724G64Mn	EMEA	Czech	LX.PUL02.011	AS7745G-724G64Mn W7HP64ATCZ2 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/640/6L2.2/5R/CB_bgn_1.3C_GEk_SK11
AS7745G-724G64Mn	EMEA	Denmark	LX.PUL02.007	AS7745G-724G64Mn W7HP64ATDK2 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/640/6L2.2/5R/CB_bgn_1.3C_GEk_ENS1

Downloaded from www.Manualslib.com manuals search engine

Model	RO	Country	Acer Part No	Description
AS7745G-724G64Mn	EMEA	Eastern Europe	LX.PUL02.002	AS7745G-724G64Mn W7HP64ATEU7 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/640/6L2.2/5R/CB_bgn_1.3C_GEk_SL11
AS7745G-724G64Mn	EMEA	Eastern Europe	LX.PUL02.016	AS7745G-724G64Mn W7HP64ATEU5 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/640/6L2.2/5R/CB_bgn_1.3C_GEk_PL71
AS7745G-724G64Mn	EMEA	Eastern Europe	LX.PUL02.017	AS7745G-724G64Mn W7HP64ATEU4 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/640/6L2.2/5R/CB_bgn_1.3C_GEk_SV21
AS7745G-724G64Mn	EMEA	Eastern Europe	LX.PUL02.020	AS7745G-724G64Mn W7HP64ATEU7 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/640/6L2.2/5R/CB_bgn_1.3C_GEk_ENQ1
AS7745G-724G64Mn	EMEA	Eastern Europe	LX.PUL02.021	AS7745G-724G64Mn W7HP64ATEU5 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/640/6L2.2/5R/CB_bgn_1.3C_GEk_RO11
AS7745G-724G64Mn	EMEA	France	LX.PUL02.001	AS7745G-724G64Mn W7HP64ATFR1 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/640/6L2.2/5R/CB_bgn_1.3C_GEk_FR21
AS7745G-724G64Mn	EMEA	Germany	LX.PUL02.028	AS7745G-724G64Mn W7HP64ATDE1 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/640/6L2.2/5R/CB_bgn_1.3C_GEk_DE11
AS7745G-724G64Mn	EMEA	Greece	LX.PUL02.003	AS7745G-724G64Mn W7HP64ATGR1 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/640/6L2.2/5R/CB_bgn_1.3C_GEk_EL31
AS7745G-724G64Mn	EMEA	Holland	LX.PUL02.026	AS7745G-724G64Mn W7HP64ATNL1 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/640/6L2.2/5R/CB_bgn_1.3C_GEk_NL11
AS7745G-724G64Mn	EMEA	Hungary	LX.PUL02.013	AS7745G-724G64Mn W7HP64ATHU1 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/640/6L2.2/5R/CB_bgn_1.3C_GEk_HU11
AS7745G-724G64Mn	EMEA	Israel	LX.PUL02.012	AS7745G-724G64Mn W7HP64ATIL1 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/640/6L2.2/5R/CB_bgn_1.3C_GEk_HE11
AS7745G-724G64Mn	EMEA	Italy	LX.PUL02.019	AS7745G-724G64Mn W7HP64ATIT1 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/640/6L2.2/5R/CB_bgn_1.3C_GEk_IT11
AS7745G-724G64Mn	EMEA	Latvia	LX.PUL02.014	AS7745G-724G64Mn W7HP64ATLV1 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/640/6L2.2/5R/CB_bgn_1.3C_GEk_LT11
AS7745G-724G64Mn	EMEA	Latvia	LX.PUL02.015	AS7745G-724G64Mn W7HP64ATLV1 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/640/6L2.2/5R/CB_bgn_1.3C_GEk_RU22
AS7745G-724G64Mn	EMEA	Luxembourg	LX.PUL02.027	AS7745G-724G64Mn W7HP64ATLU3 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/640/6L2.2/5R/CB_bgn_1.3C_GEk_IT41
AS7745G-724G64Mn	EMEA	Middle East	LX.PUL02.030	AS7745G-724G64Mn EM W7HP64EMATME6 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/640/6L2.2/5R/CB_bgn_1.3C_GEk_ES61
AS7745G-724G64Mn	EMEA	Middle East	LX.PUL02.031	AS7745G-724G64Mn EM W7HP64EMATME3 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/640/6L2.2/5R/CB_bgn_1.3C_GEk_ES81

Downloaded from www.Manualslib.com manuals search engine

Model	RO	Country	Acer Part No	Description
AS7745G-724G64Mn	EMEA	Middle East	LX.PUL02.033	AS7745G-724G64Mn EM W7HP64EMATME2 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/640/6L2.2/5R/CB_bgn_1.3C_GEk_AR11
AS7745G-724G64Mn	EMEA	Middle East	LX.PUL02.034	AS7745G-724G64Mn EM W7HP64EMATME4 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/640/6L2.2/5R/CB_bgn_1.3C_GEk_ES61
AS7745G-724G64Mn	EMEA	Middle East	LX.PUL02.036	AS7745G-724G64Mn EM W7HP64EMATME9 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/640/6L2.2/5R/CB_bgn_1.3C_GEk_ES81
AS7745G-724G64Mn	EMEA	Middle East	LX.PUL02.038	AS7745G-724G64Mn EM W7HP64EMATMEB MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/640/6L2.2/5R/CB_bgn_1.3C_GEk_ARA1
AS7745G-724G64Mn	EMEA	Middle East	LX.PUL02.039	AS7745G-724G64Mn EM W7HP64EMATME2 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/640/6L2.2/5R/CB_bgn_1.3C_GEk_AR21
AS7745G-724G64Mn	EMEA	Middle East	LX.PUL02.041	AS7745G-724G64Mn EM W7HP64EMATME2 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/640/6L2.2/5R/CB_bgn_1.3C_GEk_ES61
AS7745G-724G64Mn	EMEA	Middle East	LX.PUL02.042	AS7745G-724G64Mn EM W7HP64EMATME4 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/640/6L2.2/5R/CB_bgn_1.3C_GEk_RU61
AS7745G-724G64Mn	EMEA	Poland	LX.PUL02.029	AS7745G-724G64Mn W7HP64ATPL1 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/640/6L2.2/5R/CB_bgn_1.3C_GEk_PL11
AS7745G-724G64Mn	EMEA	Portugal	LX.PUL02.009	AS7745G-724G64Mn W7HP64ATPT1 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/640/6L2.2/5R/CB_bgn_1.3C_GEk_PT11
AS7745G-724G64Mn	EMEA	Serbia/ Macedonia	LX.PUL02.006	AS7745G-724G64Mn W7HP64ATCS1 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/640/6L2.2/5R/CB_bgn_1.3C_GEk_SL11
AS7745G-724G64Mn	EMEA	South Africa	LX.PUL02.032	AS7745G-724G64Mn EM W7HP64EMATZA4 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/640/6L2.2/5R/CB_bgn_1.3C_GEk_ES61
AS7745G-724G64Mn	EMEA	South Africa	LX.PUL02.037	AS7745G-724G64Mn EM W7HP64EMATZA1 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/640/6L2.2/5R/CB_bgn_1.3C_GEk_ES81
AS7745G-724G64Mn	EMEA	South Africa	LX.PUL02.043	AS7745G-724G64Mn EM W7HP64EMATZA2 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/640/6L2.2/5R/CB_bgn_1.3C_GEk_ES61
AS7745G-724G64Mn	EMEA	Spain	LX.PUL02.018	AS7745G-724G64Mn W7HP64ATES1 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/640/6L2.2/5R/CB_bgn_1.3C_GEk_ES51
AS7745G-724G64Mn	EMEA	Switzerland	LX.PUL02.024	AS7745G-724G64Mn W7HP64ATCH1 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/640/6L2.2/5R/CB_bgn_1.3C_GEk_IT41
AS7745G-724G64Mn	EMEA	Turkey	LX.PUL02.040	AS7745G-724G64Mn EM W7HP64EMATTR1 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/640/6L2.2/5R/CB_bgn_1.3C_GEk_TR31
AS7745G-724G64Mn	EMEA	UK	LX.PUL02.022	AS7745G-724G64Mn W7HP64ATGB1 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/640/6L2.2/5R/CB_bgn_1.3C_GEk_EN11

Downloaded from www.Manualslib.com manuals search engine

Model	RO	Country	Acer Part No	Description
AS7745G-724G64Mn	EMEA	Ukraine	LX.PUL02.045	AS7745G-724G64Mn W7HP64RUATUK1 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/640/6L2.2/5R/CB_bgn_1.3C_GEk_RU61
AS7745G-724G64Mi	EMEA	Russia	LX.PUL02.044	AS7745G-724G64Mi W7HP64RUATRU1 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/640/6L2.2/5R/CB_bg_1.3C_GEk_RU11
AS7745G-724G64Bn	EMEA	Germany	LX.PUM02.006	AS7745G-724G64Bn W7HP64ATDE1 MC BROADWAY_PRO1GBCksQ_3D4V3J 2*2G/640/6L2.2/5R/CB_bgn_1.3C_GEk_DE11
AS7745G-724G64Bn	EMEA	Germany	LX.PUM02.054	AS7745G-724G64Bn W7HP64ATDE1 MC BROADWAY_PRO1GBCksQ_3D4V3J 2*2G/640/9L3.0/5R/CB_bgn_1.3C_GEk_DE119 C
AS7745G-724G50Mn	EMEA	Algeria	LX.PUL02.128	AS7745G-724G50Mn EM W7HP64EMATDZ1 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/500_L/6L2.2/5R/CB_bgn_1.3C_GEk_ES81
AS7745G-724G50Mn	EMEA	Austria	LX.PUL02.094	AS7745G-724G50Mn W7HP64ATAT1 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/500_L/6L2.2/5R/CB_bgn_1.3C_GEk_DE61
AS7745G-724G50Mn	EMEA	Baltic	LX.PUL02.103	AS7745G-724G50Mn W7HP64ATBC3 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/500_L/6L2.2/5R/CB_bgn_1.3C_GEk_SV21
AS7745G-724G50Mn	EMEA	Baltic	LX.PUL02.106	AS7745G-724G50Mn W7HP64ATBC4 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/500_L/6L2.2/5R/CB_bgn_1.3C_GEk_LT11
AS7745G-724G50Mn	EMEA	Baltic	LX.PUL02.119	AS7745G-724G50Mn W7HP64ATBC5 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/500_L/6L2.2/5R/CB_bgn_1.3C_GEk_LT11
AS7745G-724G50Mn	EMEA	Belgium	LX.PUL02.117	AS7745G-724G50Mn W7HP64ATBE1 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/500_L/6L2.2/5R/CB_bgn_1.3C_GEk_NL11
AS7745G-724G50Mn	EMEA	Cyprus	LX.PUL02.104	AS7745G-724G50Mn W7HP64ATCY1 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/500_L/6L2.2/5R/CB_bgn_1.3C_GEk_ES61
AS7745G-724G50Mn	EMEA	Czech	LX.PUL02.109	AS7745G-724G50Mn W7HP64ATCZ2 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/500_L/6L2.2/5R/CB_bgn_1.3C_GEk_SK11
AS7745G-724G50Mn	EMEA	Denmark	LX.PUL02.098	AS7745G-724G50Mn W7HP64ATDK2 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/500_L/6L2.2/5R/CB_bgn_1.3C_GEk_ENS1
AS7745G-724G50Mn	EMEA	Eastern Europe	LX.PUL02.092	AS7745G-724G50Mn W7HP64ATEU7 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/500_L/6L2.2/5R/CB_bgn_1.3C_GEk_SL11
AS7745G-724G50Mn	EMEA	Eastern Europe	LX.PUL02.096	AS7745G-724G50Mn W7HP64ATEU4 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/500_L/6L2.2/5R/CB_bgn_1.3C_GEk_SV21
AS7745G-724G50Mn	EMEA	Eastern Europe	LX.PUL02.097	AS7745G-724G50Mn W7HP64ATEU7 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/500_L/6L2.2/5R/CB_bgn_1.3C_GEk_ENQ1
AS7745G-724G50Mn	EMEA	Eastern Europe	LX.PUL02.110	AS7745G-724G50Mn W7HP64ATEU5 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/500_L/6L2.2/5R/CB_bgn_1.3C_GEk_PL71

Downloaded from www.Manualslib.com manuals search engine

Model	RO	Country	Acer Part No	Description
AS7745G-724G50Mn	EMEA	Eastern Europe	LX.PUL02.111	AS7745G-724G50Mn W7HP64ATEU5 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/500_L/6L2.2/5R/CB_bgn_1.3C_GEk_RO11
AS7745G-724G50Mn	EMEA	France	LX.PUL02.093	AS7745G-724G50Mn W7HP64ATFR1 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/500_L/6L2.2/5R/CB_bgn_1.3C_GEk_FR21
AS7745G-724G50Mn	EMEA	France	LX.PUM02.001	AS7745G-724G50Mn W7HP64ATFR1 MC BROADWAY_PRO1GBCksQ_3D4V3J 2*2G/500_L/9L3.0/5R/CB_bgn_1.3C_GEk_FR21
AS7745G-724G50Mn	EMEA	Germany	LX.PUL02.121	AS7745G-724G50Mn W7HP64ATDE1 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/500_L/6L2.2/5R/CB_bgn_1.3C_GEk_DE11
AS7745G-724G50Mn	EMEA	Greece	LX.PUL02.095	AS7745G-724G50Mn W7HP64ATGR1 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/500_L/6L2.2/5R/CB_bgn_1.3C_GEk_EL31
AS7745G-724G50Mn	EMEA	Holland	LX.PUL02.118	AS7745G-724G50Mn W7HP64ATNL1 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/500_L/6L2.2/5R/CB_bgn_1.3C_GEk_NL11
AS7745G-724G50Mn	EMEA	Hungary	LX.PUL02.108	AS7745G-724G50Mn W7HP64ATHU1 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/500_L/6L2.2/5R/CB_bgn_1.3C_GEk_HU11
AS7745G-724G50Mn	EMEA	Israel	LX.PUL02.107	AS7745G-724G50Mn W7HP64ATIL1 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/500_L/6L2.2/5R/CB_bgn_1.3C_GEk_HE11
AS7745G-724G50Mn	EMEA	Italy	LX.PUL02.101	AS7745G-724G50Mn W7HP64ATIT1 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/500_L/6L2.2/5R/CB_bgn_1.3C_GEk_IT11
AS7745G-724G50Mn	EMEA	Latvia	LX.PUL02.113	AS7745G-724G50Mn W7HP64ATLV1 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/500_L/6L2.2/5R/CB_bgn_1.3C_GEk_RU22
AS7745G-724G50Mn	EMEA	Latvia	LX.PUL02.114	AS7745G-724G50Mn W7HP64ATLV1 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/500_L/6L2.2/5R/CB_bgn_1.3C_GEk_LT11
AS7745G-724G50Mn	EMEA	Luxembourg	LX.PUL02.115	AS7745G-724G50Mn W7HP64ATLU3 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/500_L/6L2.2/5R/CB_bgn_1.3C_GEk_IT41
AS7745G-724G50Mn	EMEA	Middle East	LX.PUL02.123	AS7745G-724G50Mn EM W7HP64EMATME6 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/500_L/6L2.2/5R/CB_bgn_1.3C_GEk_ES61
AS7745G-724G50Mn	EMEA	Middle East	LX.PUL02.124	AS7745G-724G50Mn EM W7HP64EMATME3 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/500_L/6L2.2/5R/CB_bgn_1.3C_GEk_ES81
AS7745G-724G50Mn	EMEA	Middle East	LX.PUL02.125	AS7745G-724G50Mn EM W7HP64EMATME2 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/500_L/6L2.2/5R/CB_bgn_1.3C_GEk_AR11
AS7745G-724G50Mn	EMEA	Middle East	LX.PUL02.126	AS7745G-724G50Mn EM W7HP64EMATME4 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/500_L/6L2.2/5R/CB_bgn_1.3C_GEk_ES61
AS7745G-724G50Mn	EMEA	Middle East	LX.PUL02.129	AS7745G-724G50Mn EM W7HP64EMATME9 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/500_L/6L2.2/5R/CB_bgn_1.3C_GEk_ES81

Downloaded from www.Manualslib.com manuals search engine

Model	RO	Country	Acer Part No	Description
AS7745G-724G50Mn	EMEA	Middle East	LX.PUL02.131	AS7745G-724G50Mn EM W7HP64EMATME2 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/500_L/6L2.2/5R/CB_bgn_1.3C_GEk_AR21
AS7745G-724G50Mn	EMEA	Middle East	LX.PUL02.132	AS7745G-724G50Mn EM W7HP64EMATMEB MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/500_L/6L2.2/5R/CB_bgn_1.3C_GEk_ARA1
AS7745G-724G50Mn	EMEA	Middle East	LX.PUL02.135	AS7745G-724G50Mn EM W7HP64EMATME2 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/500_L/6L2.2/5R/CB_bgn_1.3C_GEk_ES61
AS7745G-724G50Mn	EMEA	Middle East	LX.PUL02.136	AS7745G-724G50Mn EM W7HP64EMATME4 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/500_L/6L2.2/5R/CB_bgn_1.3C_GEk_RU61
AS7745G-724G50Mn	EMEA	Poland	LX.PUL02.120	AS7745G-724G50Mn W7HP64ATPL1 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/500_L/6L2.2/5R/CB_bgn_1.3C_GEk_PL11
AS7745G-724G50Mn	EMEA	Portugal	LX.PUL02.105	AS7745G-724G50Mn W7HP64ATPT1 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/500_L/6L2.2/5R/CB_bgn_1.3C_GEk_PT11
AS7745G-724G50Mn	EMEA	Serbia/ Macedonia	LX.PUL02.102	AS7745G-724G50Mn W7HP64ATCS1 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/500_L/6L2.2/5R/CB_bgn_1.3C_GEk_SL11
AS7745G-724G50Mn	EMEA	South Africa	LX.PUL02.122	AS7745G-724G50Mn EM W7HP64EMATZA4 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/500_L/6L2.2/5R/CB_bgn_1.3C_GEk_ES61
AS7745G-724G50Mn	EMEA	South Africa	LX.PUL02.127	AS7745G-724G50Mn EM W7HP64EMATZA1 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/500_L/6L2.2/5R/CB_bgn_1.3C_GEk_ES81
AS7745G-724G50Mn	EMEA	South Africa	LX.PUL02.130	AS7745G-724G50Mn EM W7HP64EMATZA5 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/500_L/6L2.2/5R/CB_bgn_1.3C_GEk_ES61
AS7745G-724G50Mn	EMEA	South Africa	LX.PUL02.134	AS7745G-724G50Mn EM W7HP64EMATZA2 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/500_L/6L2.2/5R/CB_bgn_1.3C_GEk_ES61
AS7745G-724G50Mn	EMEA	Spain	LX.PUL02.099	AS7745G-724G50Mn W7HP64ATES1 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/500_L/6L2.2/5R/CB_bgn_1.3C_GEk_ES51
AS7745G-724G50Mn	EMEA	Switzerland	LX.PUL02.116	AS7745G-724G50Mn W7HP64ATCH1 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/500_L/6L2.2/5R/CB_bgn_1.3C_GEk_IT41
AS7745G-724G50Mn	EMEA	Turkey	LX.PUL02.133	AS7745G-724G50Mn EM W7HP64EMATTR1 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/500_L/6L2.2/5R/CB_bgn_1.3C_GEk_TR31
AS7745G-724G50Mn	EMEA	UK	LX.PUL02.112	AS7745G-724G50Mn W7HP64ATGB1 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/500_L/6L2.2/5R/CB_bgn_1.3C_GEk_EN11
AS7745G-724G50Mn	EMEA	Ukraine	LX.PUL02.138	AS7745G-724G50Mn W7HP64RUATUK1 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/500_L/6L2.2/5R/CB_bgn_1.3C_GEk_RU61
AS7745G-724G50Mn	PA	USA	LX.PUL02.146	AS7745G-724G50Mn W7HP64ATUS1 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/500_L/BT/6L2.2/5R/CB_bgn_1.3C_GEk_FRB1

Downloaded from www.Manualslib.com manuals search engine

Model	RO	Country	Acer Part No	Description
AS7745G-724G50Mi	EMEA	Russia	LX.PUL 02.137	AS7745G-724G50Mi W7HP64RUATRU1 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/500_L/ 6L2.2/5R/CB_bg_1.3C_GEk_RU11
AS7745G-724G50Bn	EMEA	Germany	LX.PUL 02.142	AS7745G-724G50Bn W7HP64ATDE1 MC MADISON_PRO1GBCksQ_3D4V3J 2*2G/500_L/ 6L2.2/5R/CB_bgn_1.3C_GEk_DE11
AS7745G-724G48Bn	WW	WW	S2.PUM 02.003	AS7745G-724G48Bn W7HP64AWW1 MC BROADWAY_PRO1GBCksQ_3D4V3J 2*2G/ 320+160/BT/6L2.2/5R/CB_bgn_1.3C_GEk_ES62
AS7745G-724G48Bn	WW	WW	S2.PUM 02.003	AS7745G-724G48Bn W7HP64AWW1 MC BROADWAY_PRO1GBCksQ_3D4V3J 2*2G/ 320+160/BT/6L2.2/5R/CB_bgn_1.3C_GEk_ES62
AS7745G-724G1TBn	EMEA	Algeria	LX.PUM 02.044	AS7745G-724G1TBn EM W7HP64EMATDZ1 MC BROADWAY_PRO1GBCksQ_3D4V3J 2*2G/ 500_L+500_L/9L3.0/5R/CB_bgn_1.3C_GEk_ES81
AS7745G-724G1TBn	EMEA	Austria	LX.PUM 02.009	AS7745G-724G1TBn W7HP64ATAT1 MC BROADWAY_PRO1GBCksQ_3D4V3J 2*2G/ 500_L+500_L/9L3.0/5R/CB_bgn_1.3C_GEk_DE61
AS7745G-724G1TBn	EMEA	Baltic	LX.PUM 02.017	AS7745G-724G1TBn W7HP64ATBC3 MC BROADWAY_PRO1GBCksQ_3D4V3J 2*2G/ 500_L+500_L/9L3.0/5R/CB_bgn_1.3C_GEk_SV21
AS7745G-724G1TBn	EMEA	Baltic	LX.PUM 02.022	AS7745G-724G1TBn W7HP64ATBC4 MC BROADWAY_PRO1GBCksQ_3D4V3J 2*2G/ 500_L+500_L/9L3.0/5R/CB_bgn_1.3C_GEk_LT11
AS7745G-724G1TBn	EMEA	Baltic	LX.PUM 02.035	AS7745G-724G1TBn W7HP64ATBC5 MC BROADWAY_PRO1GBCksQ_3D4V3J 2*2G/ 500_L+500_L/9L3.0/5R/CB_bgn_1.3C_GEk_LT11
AS7745G-724G1TBn	EMEA	Belgium	LX.PUM 02.033	AS7745G-724G1TBn W7HP64ATBE1 MC BROADWAY_PRO1GBCksQ_3D4V3J 2*2G/ 500_L+500_L/9L3.0/5R/CB_bgn_1.3C_GEk_NL11
AS7745G-724G1TBn	EMEA	Cyprus	LX.PUM 02.020	AS7745G-724G1TBn W7HP64ATCY1 MC BROADWAY_PRO1GBCksQ_3D4V3J 2*2G/ 500_L+500_L/9L3.0/5R/CB_bgn_1.3C_GEk_ES61
AS7745G-724G1TBn	EMEA	Czech	LX.PUM 02.025	AS7745G-724G1TBn W7HP64ATCZ2 MC BROADWAY_PRO1GBCksQ_3D4V3J 2*2G/ 500_L+500_L/9L3.0/5R/CB_bgn_1.3C_GEk_SK11
AS7745G-724G1TBn	EMEA	Denmark	LX.PUM 02.013	AS7745G-724G1TBn W7HP64ATDK2 MC BROADWAY_PRO1GBCksQ_3D4V3J 2*2G/ 500_L+500_L/9L3.0/5R/CB_bgn_1.3C_GEk_ENS1
AS7745G-724G1TBn	EMEA	Eastern Europe	LX.PUM 02.007	AS7745G-724G1TBn W7HP64ATEU7 MC BROADWAY_PRO1GBCksQ_3D4V3J 2*2G/ 500_L+500_L/9L3.0/5R/CB_bgn_1.3C_GEk_SL11
AS7745G-724G1TBn	EMEA	Eastern Europe	LX.PUM 02.011	AS7745G-724G1TBn W7HP64ATEU4 MC BROADWAY_PRO1GBCksQ_3D4V3J 2*2G/ 500_L+500_L/9L3.0/5R/CB_bgn_1.3C_GEk_SV21
AS7745G-724G1TBn	EMEA	Eastern Europe	LX.PUM 02.012	AS7745G-724G1TBn W7HP64ATEU7 MC BROADWAY_PRO1GBCksQ_3D4V3J 2*2G/ 500_L+500_L/9L3.0/5R/ CB_bgn_1.3C_GEk_ENQ1
AS7745G-724G1TBn	EMEA	Eastern Europe	LX.PUM 02.026	AS7745G-724G1TBn W7HP64ATEU5 MC BROADWAY_PRO1GBCksQ_3D4V3J 2*2G/ 500_L+500_L/9L3.0/5R/CB_bgn_1.3C_GEk_PL71

Downloaded from www.Manualslib.com manuals search engine

Model	RO	Country	Acer Part No	Description
AS7745G-724G1TBn	EMEA	Eastern Europe	LX.PUM02.027	AS7745G-724G1TBn W7HP64ATEU5 MC BROADWAY_PRO1GBCksQ_3D4V3J 2*2G/500_L+500_L/9L3.0/5R/CB_bgn_1.3C_GEk_RO11
AS7745G-724G1TBn	EMEA	France	LX.PUM02.008	AS7745G-724G1TBn W7HP64ATFR1 MC BROADWAY_PRO1GBCksQ_3D4V3J 2*2G/500_L+500_L/9L3.0/5R/CB_bgn_1.3C_GEk_FR21
AS7745G-724G1TBn	EMEA	Germany	LX.PUM02.037	AS7745G-724G1TBn W7HP64ATDE1 MC BROADWAY_PRO1GBCksQ_3D4V3J 2*2G/500_L+500_L/9L3.0/5R/CB_bgn_1.3C_GEk_DE11
AS7745G-724G1TBn	EMEA	Greece	LX.PUM02.010	AS7745G-724G1TBn W7HP64ATGR1 MC BROADWAY_PRO1GBCksQ_3D4V3J 2*2G/500_L+500_L/9L3.0/5R/CB_bgn_1.3C_GEk_EL31
AS7745G-724G1TBn	EMEA	Holland	LX.PUM02.034	AS7745G-724G1TBn W7HP64ATNL1 MC BROADWAY_PRO1GBCksQ_3D4V3J 2*2G/500_L+500_L/9L3.0/5R/CB_bgn_1.3C_GEk_NL11
AS7745G-724G1TBn	EMEA	Hungary	LX.PUM02.024	AS7745G-724G1TBn W7HP64ATHU1 MC BROADWAY_PRO1GBCksQ_3D4V3J 2*2G/500_L+500_L/9L3.0/5R/CB_bgn_1.3C_GEk_HU11
AS7745G-724G1TBn	EMEA	Israel	LX.PUM02.023	AS7745G-724G1TBn W7HP64ATIL1 MC BROADWAY_PRO1GBCksQ_3D4V3J 2*2G/500_L+500_L/9L3.0/5R/CB_bgn_1.3C_GEk_HE11
AS7745G-724G1TBn	EMEA	Italy	LX.PUM02.015	AS7745G-724G1TBn W7HP64ATIT1 MC BROADWAY_PRO1GBCksQ_3D4V3J 2*2G/500_L+500_L/9L3.0/5R/CB_bgn_1.3C_GEk_IT11
AS7745G-724G1TBn	EMEA	Latvia	LX.PUM02.029	AS7745G-724G1TBn W7HP64ATLV1 MC BROADWAY_PRO1GBCksQ_3D4V3J 2*2G/500_L+500_L/9L3.0/5R/CB_bgn_1.3C_GEk_RU22
AS7745G-724G1TBn	EMEA	Latvia	LX.PUM02.030	AS7745G-724G1TBn W7HP64ATLV1 MC BROADWAY_PRO1GBCksQ_3D4V3J 2*2G/500_L+500_L/9L3.0/5R/CB_bgn_1.3C_GEk_LT11
AS7745G-724G1TBn	EMEA	Luxembourg	LX.PUM02.031	AS7745G-724G1TBn W7HP64ATLU3 MC BROADWAY_PRO1GBCksQ_3D4V3J 2*2G/500_L+500_L/9L3.0/5R/CB_bgn_1.3C_GEk_IT41
AS7745G-724G1TBn	EMEA	Middle East	LX.PUM02.039	AS7745G-724G1TBn EM W7HP64EMATME6 MC BROADWAY_PRO1GBCksQ_3D4V3J 2*2G/500_L+500_L/9L3.0/5R/CB_bgn_1.3C_GEk_ES61
AS7745G-724G1TBn	EMEA	Middle East	LX.PUM02.040	AS7745G-724G1TBn EM W7HP64EMATME3 MC BROADWAY_PRO1GBCksQ_3D4V3J 2*2G/500_L+500_L/9L3.0/5R/CB_bgn_1.3C_GEk_ES81
AS7745G-724G1TBn	EMEA	Middle East	LX.PUM02.041	AS7745G-724G1TBn EM W7HP64EMATME2 MC BROADWAY_PRO1GBCksQ_3D4V3J 2*2G/500_L+500_L/9L3.0/5R/CB_bgn_1.3C_GEk_AR11
AS7745G-724G1TBn	EMEA	Middle East	LX.PUM02.042	AS7745G-724G1TBn EM W7HP64EMATME4 MC BROADWAY_PRO1GBCksQ_3D4V3J 2*2G/500_L+500_L/9L3.0/5R/CB_bgn_1.3C_GEk_ES61
AS7745G-724G1TBn	EMEA	Middle East	LX.PUM02.045	AS7745G-724G1TBn EM W7HP64EMATME9 MC BROADWAY_PRO1GBCksQ_3D4V3J 2*2G/500_L+500_L/9L3.0/5R/CB_bgn_1.3C_GEk_ES81
AS7745G-724G1TBn	EMEA	Middle East	LX.PUM02.047	AS7745G-724G1TBn EM W7HP64EMATME2 MC BROADWAY_PRO1GBCksQ_3D4V3J 2*2G/500_L+500_L/9L3.0/5R/CB_bgn_1.3C_GEk_AR21

Downloaded from www.Manualslib.com manuals search engine

Model	RO	Country	Acer Part No	Description
AS7745G-724G1TBn	EMEA	Middle East	LX.PUM02.048	AS7745G-724G1TBn EM W7HP64EMATMEB MC BROADWAY_PRO1GBCksQ_3D4V3J 2*2G/ 500_L+500_L/9L3.0/5R/CB_bgn_1.3C_GEk_ARA1
AS7745G-724G1TBn	EMEA	Middle East	LX.PUM02.051	AS7745G-724G1TBn EM W7HP64EMATME2 MC BROADWAY_PRO1GBCksQ_3D4V3J 2*2G/ 500_L+500_L/9L3.0/5R/CB_bgn_1.3C_GEk_ES61
AS7745G-724G1TBn	EMEA	Middle East	LX.PUM02.052	AS7745G-724G1TBn EM W7HP64EMATME4 MC BROADWAY_PRO1GBCksQ_3D4V3J 2*2G/ 500_L+500_L/9L3.0/5R/CB_bgn_1.3C_GEk_RU61
AS7745G-724G1TBn	EMEA	Poland	LX.PUM02.036	AS7745G-724G1TBn W7HP64ATPL1 MC BROADWAY_PRO1GBCksQ_3D4V3J 2*2G/ 500_L+500_L/9L3.0/5R/CB_bgn_1.3C_GEk_PL11
AS7745G-724G1TBn	EMEA	Portugal	LX.PUM02.021	AS7745G-724G1TBn W7HP64ATPT1 MC BROADWAY_PRO1GBCksQ_3D4V3J 2*2G/ 500_L+500_L/9L3.0/5R/CB_bgn_1.3C_GEk_PT11
AS7745G-724G1TBn	EMEA	Serbia/ Macedonia	LX.PUM02.016	AS7745G-724G1TBn W7HP64ATCS1 MC BROADWAY_PRO1GBCksQ_3D4V3J 2*2G/ 500_L+500_L/9L3.0/5R/CB_bgn_1.3C_GEk_SL11
AS7745G-724G1TBn	EMEA	South Africa	LX.PUM02.038	AS7745G-724G1TBn EM W7HP64EMATZA4 MC BROADWAY_PRO1GBCksQ_3D4V3J 2*2G/ 500_L+500_L/9L3.0/5R/CB_bgn_1.3C_GEk_ES61
AS7745G-724G1TBn	EMEA	South Africa	LX.PUM02.043	AS7745G-724G1TBn EM W7HP64EMATZA1 MC BROADWAY_PRO1GBCksQ_3D4V3J 2*2G/ 500_L+500_L/9L3.0/5R/CB_bgn_1.3C_GEk_ES81
AS7745G-724G1TBn	EMEA	South Africa	LX.PUM02.046	AS7745G-724G1TBn EM W7HP64EMATZA5 MC BROADWAY_PRO1GBCksQ_3D4V3J 2*2G/ 500_L+500_L/9L3.0/5R/CB_bgn_1.3C_GEk_ES61
AS7745G-724G1TBn	EMEA	South Africa	LX.PUM02.050	AS7745G-724G1TBn EM W7HP64EMATZA2 MC BROADWAY_PRO1GBCksQ_3D4V3J 2*2G/ 500_L+500_L/9L3.0/5R/CB_bgn_1.3C_GEk_ES61
AS7745G-724G1TBn	EMEA	Spain	LX.PUM02.014	AS7745G-724G1TBn W7HP64ATES1 MC BROADWAY_PRO1GBCksQ_3D4V3J 2*2G/ 500_L+500_L/9L3.0/5R/CB_bgn_1.3C_GEk_ES51
AS7745G-724G1TBn	EMEA	Switzerland	LX.PUM02.032	AS7745G-724G1TBn W7HP64ATCH1 MC BROADWAY_PRO1GBCksQ_3D4V3J 2*2G/ 500_L+500_L/9L3.0/5R/CB_bgn_1.3C_GEk_IT41
AS7745G-724G1TBn	EMEA	Turkey	LX.PUM02.049	AS7745G-724G1TBn EM W7HP64EMATTR1 MC BROADWAY_PRO1GBCksQ_3D4V3J 2*2G/ 500_L+500_L/9L3.0/5R/CB_bgn_1.3C_GEk_TR31
AS7745G-724G1TBn	EMEA	UK	LX.PUM02.028	AS7745G-724G1TBn W7HP64ATGB1 MC BROADWAY_PRO1GBCksQ_3D4V3J 2*2G/ 500_L+500_L/9L3.0/5R/CB_bgn_1.3C_GEk_EN11
AS7745G-724G1TBn	EMEA	Ukraine	LX.PUM02.019	AS7745G-724G1TBn W7HP64RUATUK1 MC BROADWAY_PRO1GBCksQ_3D4V3J 2*2G/ 500_L+500_L/9L3.0/5R/CB_bgn_1.3C_GEk_RU61
AS7745G-724G1TBi	EMEA	Russia	LX.PUM02.018	AS7745G-724G1TBi W7HP64RUATRU1 MC BROADWAY_PRO1GBCksQ_3D4V3J 2*2G/ 500_L+500_L/9L3.0/5R/CB_bg_1.3C_GEk_RU11
AS7745G-722G75Bn	WW	GCTWN	S2.PUM02.001	AS7745G-722G75Bn W7HP64AWW1 MC BROADWAY_PRO1GBCksQ_3D4V3J 1*2G/ 500_L+250/BT/6L2.2/5R/ CB_bgn_1.3C_GEk_ES61

Downloaded from www.Manualslib.com manuals search engine

Model	RO	Country	Acer Part No	Description
AS7745G-722G75Bn	WW	GCTWN	S2.PUM 02.001	AS7745G-722G75Bn W7HP64AWW1 MC BROADWAY_PRO1GBCksQ_3D4V3J 1*2G/ 500_L+250/BT/6L2.2/5R/ CB_bgn_1.3C_GEk_ES61
AS7745G-722G57Mn	WW	GCTWN	S2.PUL 02.001	AS7745G-722G57Mn W7HP64AWW1 MC MADISON_PRO1GBCksQ_3D4V3J 1*2G/ 320+250/BT/6L2.2/5R/CB_bgn_1.3C_GEk_ES61
AS7745G-722G57Mn	WW	GCTWN	S2.PUL 02.001	AS7745G-722G57Mn W7HP64AWW1 MC MADISON_PRO1GBCksQ_3D4V3J 1*2G/ 320+250/BT/6L2.2/5R/CB_bgn_1.3C_GEk_ES61
AS7745G-72161.28TBn	EMEA	Belgium	LX.PUM 02.058	AS7745G-72161.28TBn W7HP64ATBE1 MC BROADWAY_PRO1GBCksQ_3D4V3J 4G+4G+4G+4G/640+640/BT/9L3.0/5R/ CB_bgn_1.3C_GEk_NL11
AS7745G-72161.28TBn	EMEA	Holland	LX.PUM 02.057	AS7745G-72161.28TBn W7HP64ATNL1 MC BROADWAY_PRO1GBCksQ_3D4V3J 4G+4G+4G+4G/640+640/BT/9L3.0/5R/ CB_bgn_1.3C_GEk_NL11
AS7745G-72161.28TBn	EMEA	Luxembourg	LX.PUM 02.056	AS7745G-72161.28TBn W7HP64ATLU3 MC BROADWAY_PRO1GBCksQ_3D4V3J 4G+4G+4G+4G/640+640/BT/9L3.0/5R/ CB_bgn_1.3C_GEk_IT41
AS7745G-624G50Mn	EMEA	France	LX.PUN 02.101	AS7745G-624G50Mn W7HP64ATFR1 MC MADISON_PRO1GBCks_3V3J 2*2G/500_L/6L2.2/ 5R/CB_bgn_1.3C_GEk_FR21
AS7745G-624G16Mn	WW	WW	S2.PUP 02.001	AS7745G-624G16Mn W7HP64AWW1 MC BROADWAY_PRO1GBCks_3V3J 2*2G/160/6L2.2/ 5R/CB_bgn_1.3C_GEk_ES62
AS7745G-624G16Mn	WW	WW	S2.PUP 02.001	AS7745G-624G16Mn W7HP64AWW1 MC BROADWAY_PRO1GBCks_3V3J 2*2G/160/6L2.2/ 5R/CB_bgn_1.3C_GEk_ES62
AS7745G-542G16Mn	WW	GCTWN	S2.PUN 02.001	AS7745G-542G16Mn W7HP64AWW1 MC MADISON_PRO1GBCks_3V3J 1*2G/160/6L2.2/ 5R/CB_bgn_1.3C_GEk_ES61
AS7745G-542G16Mn	WW	GCTWN	S2.PUN 02.001	AS7745G-542G16Mn W7HP64AWW1 MC MADISON_PRO1GBCks_3V3J 1*2G/160/6L2.2/ 5R/CB_bgn_1.3C_GEk_ES61
AS7745G-542G16Mn	WW	WW	S2.PUN 02.002	AS7745G-542G16Mn W7HP64AWW1 MC MADISON_PRO1GBCks_3V3J 1*2G/160/6L2.2/ 5R/CB_bgn_1.3C_GEk_ES62
AS7745G-542G16Mn	WW	WW	S2.PUN 02.002	AS7745G-542G16Mn W7HP64AWW1 MC MADISON_PRO1GBCks_3V3J 1*2G/160/6L2.2/ 5R/CB_bgn_1.3C_GEk_ES62
AS7745G-526G64Bn	EMEA	Germany	LX.PUN 02.208	AS7745G-526G64Bn W7HP64ATDE1 MC MADISON_PRO1GBCks_3V3J 4G+2G/640/BT/ 6L2.2/5R/CB_bgn_1.3C_GEk_DE11
AS7745G-524G64Bn	EMEA	Germany	LX.PUN 02.209	AS7745G-524G64Bn W7HP64ATDE1 MC MADISON_PRO1GBCks_3V3J 2*2G/640/BT/ 6L2.2/5R/CB_bgn_1.3C_GEk_DE11
AS7745G-524G50Mn	EMEA	Turkey	LX.PUN 02.217	AS7745G-524G50Mn EM W7HP64EMATTR1 MC MADISON_PRO1GBCks_3V3J 2*2G/500_L/BT/ 6L2.2/5R/CB_bgn_1.3C_GEk_TR31

Downloaded from www.Manualslib.com manuals search engine

Model	RO	Country	Acer Part No	Description
AS7745G-523G32Mn	EMEA	Turkey	LX.PUN01.003	AS7745G-523G32Mn EM W7HB64EMATTR1 MC MADISON_PRO1GBCks_3V3J 2G+1G/320/BT/6L2.2/5R/CB_bgn_1.3C_GEk_TR31
AS7745G-438G64Mn	EMEA	Spain	LX.PUN02.096	AS7745G-438G64Mn W7HP64ATES1 MC MADISON_PRO1GBCks_3V3J 2*4G/640/6L2.2/5R/CB_bgn_1.3C_GEk_ES51
AS7745G-438G64Mn	EMEA	Switzerland	LX.PUN02.214	AS7745G-438G64Mn W7HP64ATCH1 MC MADISON_PRO1GBCks_3V3J 2*4G/640/6L2.2/5R/CB_bgn_1.3C_GEk_IT41
AS7745G-438G50Mn	EMEA	Switzerland	LX.PUN02.215	AS7745G-438G50Mn W7HP64ATCH1 MC MADISON_PRO1GBCks_3V3J 2*4G/500_L/6L2.2/5R/CB_bgn_1.3C_GEk_IT41
AS7745G-438G1TBn	EMEA	Switzerland	LX.PUN02.212	AS7745G-438G1TBn W7HP64ATCH1 MC MADISON_PRO1GBCks_3V3J 2*4G/500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_IT41
AS7745G-436G64Mn	EMEA	Spain	LX.PUN02.097	AS7745G-436G64Mn W7HP64ATES1 MC MADISON_PRO1GBCks_3V3J 4G+2G/640/6L2.2/5R/CB_bgn_1.3C_GEk_ES51
AS7745G-436G64Bn	EMEA	Germany	LX.PUN02.211	AS7745G-436G64Bn W7HP64ATDE1 MC MADISON_PRO1GBCks_3V3J 4G+2G/640/BT/6L2.2/5R/CB_bgn_1.3C_GEk_DE11
AS7745G-436G1.28TBn	EMEA	Belgium	LX.PUN02.206	AS7745G-436G1.28TBn W7HP64ATBE1 MC MADISON_PRO1GBCks_3V3J 4G+2G/640+640/BT/6L2.2/5R/CB_bgn_1.3C_GEk_NL11
AS7745G-436G1.28TBn	EMEA	Holland	LX.PUN02.205	AS7745G-436G1.28TBn W7HP64ATNL1 MC MADISON_PRO1GBCks_3V3J 4G+2G/640+640/BT/6L2.2/5R/CB_bgn_1.3C_GEk_NL11
AS7745G-436G1.28TBn	EMEA	Luxemburg	LX.PUN02.204	AS7745G-436G1.28TBn W7HP64ATLU3 MC MADISON_PRO1GBCks_3V3J 4G+2G/640+640/BT/6L2.2/5R/CB_bgn_1.3C_GEk_IT41
AS7745G-434G82Mn	EMEA	Belgium	LX.PUN02.203	AS7745G-434G82Mn W7HP64ATBE1 MC MADISON_PRO1GBCks_3V3J 2*2G/500_L+320/6L2.2/5R/CB_bgn_1.3C_GEk_NL11
AS7745G-434G82Mn	EMEA	Holland	LX.PUN02.202	AS7745G-434G82Mn W7HP64ATNL1 MC MADISON_PRO1GBCks_3V3J 2*2G/500_L+320/6L2.2/5R/CB_bgn_1.3C_GEk_NL11
AS7745G-434G82Mn	EMEA	Luxemburg	LX.PUN02.201	AS7745G-434G82Mn W7HP64ATLU3 MC MADISON_PRO1GBCks_3V3J 2*2G/500_L+320/6L2.2/5R/CB_bgn_1.3C_GEk_IT41
AS7745G-434G82Bn	EMEA	Algeria	LX.PUN02.185	AS7745G-434G82Bn EM W7HP64EMATDZ1 MC MADISON_PRO1GBCks_3V3J 2*2G/500_L+320/6L2.2/5R/CB_bgn_1.3C_GEk_ES81
AS7745G-434G82Bn	EMEA	Austria	LX.PUN02.150	AS7745G-434G82Bn W7HP64ATAT1 MC MADISON_PRO1GBCks_3V3J 2*2G/500_L+320/6L2.2/5R/CB_bgn_1.3C_GEk_DE61
AS7745G-434G82Bn	EMEA	Baltic	LX.PUN02.162	AS7745G-434G82Bn W7HP64ATBC3 MC MADISON_PRO1GBCks_3V3J 2*2G/500_L+320/6L2.2/5R/CB_bgn_1.3C_GEk_SV21
AS7745G-434G82Bn	EMEA	Baltic	LX.PUN02.165	AS7745G-434G82Bn W7HP64ATBC4 MC MADISON_PRO1GBCks_3V3J 2*2G/500_L+320/6L2.2/5R/CB_bgn_1.3C_GEk_LT11

Downloaded from www.Manualslib.com manuals search engine

Model	RO	Country	Acer Part No	Description
AS7745G-434G82Bn	EMEA	Baltic	LX.PUN02.176	AS7745G-434G82Bn W7HP64ATBC5 MC MADISON_PRO1GBCks_3V3J 2*2G/500_L+320/6L2.2/5R/CB_bgn_1.3C_GEk_LT11
AS7745G-434G82Bn	EMEA	Belgium	LX.PUN02.174	AS7745G-434G82Bn W7HP64ATBE1 MC MADISON_PRO1GBCks_3V3J 2*2G/500_L+320/6L2.2/5R/CB_bgn_1.3C_GEk_NL11
AS7745G-434G82Bn	EMEA	Cyprus	LX.PUN02.163	AS7745G-434G82Bn W7HP64ATCY1 MC MADISON_PRO1GBCks_3V3J 2*2G/500_L+320/6L2.2/5R/CB_bgn_1.3C_GEk_ES61
AS7745G-434G82Bn	EMEA	Czech	LX.PUN02.168	AS7745G-434G82Bn W7HP64ATCZ2 MC MADISON_PRO1GBCks_3V3J 2*2G/500_L+320/6L2.2/5R/CB_bgn_1.3C_GEk_SK11
AS7745G-434G82Bn	EMEA	Denmark	LX.PUN02.158	AS7745G-434G82Bn W7HP64ATDK2 MC MADISON_PRO1GBCks_3V3J 2*2G/500_L+320/6L2.2/5R/CB_bgn_1.3C_GEk_ENS1
AS7745G-434G82Bn	EMEA	Eastern Europe	LX.PUN02.148	AS7745G-434G82Bn W7HP64ATEU7 MC MADISON_PRO1GBCks_3V3J 2*2G/500_L+320/6L2.2/5R/CB_bgn_1.3C_GEk_SL11
AS7745G-434G82Bn	EMEA	Eastern Europe	LX.PUN02.153	AS7745G-434G82Bn W7HP64ATEU5 MC MADISON_PRO1GBCks_3V3J 2*2G/500_L+320/6L2.2/5R/CB_bgn_1.3C_GEk_PL71
AS7745G-434G82Bn	EMEA	Eastern Europe	LX.PUN02.154	AS7745G-434G82Bn W7HP64ATEU5 MC MADISON_PRO1GBCks_3V3J 2*2G/500_L+320/6L2.2/5R/CB_bgn_1.3C_GEk_RO11
AS7745G-434G82Bn	EMEA	Eastern Europe	LX.PUN02.156	AS7745G-434G82Bn W7HP64ATEU4 MC MADISON_PRO1GBCks_3V3J 2*2G/500_L+320/6L2.2/5R/CB_bgn_1.3C_GEk_SV21
AS7745G-434G82Bn	EMEA	Eastern Europe	LX.PUN02.157	AS7745G-434G82Bn W7HP64ATEU7 MC MADISON_PRO1GBCks_3V3J 2*2G/500_L+320/6L2.2/5R/CB_bgn_1.3C_GEk_ENQ1
AS7745G-434G82Bn	EMEA	France	LX.PUN02.149	AS7745G-434G82Bn W7HP64ATFR1 MC MADISON_PRO1GBCks_3V3J 2*2G/500_L+320/6L2.2/5R/CB_bgn_1.3C_GEk_FR21
AS7745G-434G82Bn	EMEA	Germany	LX.PUN02.178	AS7745G-434G82Bn W7HP64ATDE1 MC MADISON_PRO1GBCks_3V3J 2*2G/500_L+320/6L2.2/5R/CB_bgn_1.3C_GEk_DE11
AS7745G-434G82Bn	EMEA	Greece	LX.PUN02.155	AS7745G-434G82Bn W7HP64ATGR1 MC MADISON_PRO1GBCks_3V3J 2*2G/500_L+320/6L2.2/5R/CB_bgn_1.3C_GEk_EL31
AS7745G-434G82Bn	EMEA	Holland	LX.PUN02.175	AS7745G-434G82Bn W7HP64ATNL1 MC MADISON_PRO1GBCks_3V3J 2*2G/500_L+320/6L2.2/5R/CB_bgn_1.3C_GEk_NL11
AS7745G-434G82Bn	EMEA	Hungary	LX.PUN02.167	AS7745G-434G82Bn W7HP64ATHU1 MC MADISON_PRO1GBCks_3V3J 2*2G/500_L+320/6L2.2/5R/CB_bgn_1.3C_GEk_HU11
AS7745G-434G82Bn	EMEA	Israel	LX.PUN02.166	AS7745G-434G82Bn W7HP64ATIL1 MC MADISON_PRO1GBCks_3V3J 2*2G/500_L+320/6L2.2/5R/CB_bgn_1.3C_GEk_HE11
AS7745G-434G82Bn	EMEA	Italy	LX.PUN02.160	AS7745G-434G82Bn W7HP64ATIT1 MC MADISON_PRO1GBCks_3V3J 2*2G/500_L+320/6L2.2/5R/CB_bgn_1.3C_GEk_IT11

Downloaded from www.Manualslib.com manuals search engine

Model	RO	Country	Acer Part No	Description
AS7745G-434G82Bn	EMEA	Latvia	LX.PUN02.170	AS7745G-434G82Bn W7HP64ATLV1 MC MADISON_PRO1GBCks_3V3J 2*2G/500_L+320/6L2.2/5R/CB_bgn_1.3C_GEk_RU22
AS7745G-434G82Bn	EMEA	Latvia	LX.PUN02.171	AS7745G-434G82Bn W7HP64ATLV1 MC MADISON_PRO1GBCks_3V3J 2*2G/500_L+320/6L2.2/5R/CB_bgn_1.3C_GEk_LT11
AS7745G-434G82Bn	EMEA	Luxembourg	LX.PUN02.172	AS7745G-434G82Bn W7HP64ATLU3 MC MADISON_PRO1GBCks_3V3J 2*2G/500_L+320/6L2.2/5R/CB_bgn_1.3C_GEk_IT41
AS7745G-434G82Bn	EMEA	Middle East	LX.PUN02.180	AS7745G-434G82Bn EM W7HP64EMATME6 MC MADISON_PRO1GBCks_3V3J 2*2G/500_L+320/6L2.2/5R/CB_bgn_1.3C_GEk_ES61
AS7745G-434G82Bn	EMEA	Middle East	LX.PUN02.181	AS7745G-434G82Bn EM W7HP64EMATME3 MC MADISON_PRO1GBCks_3V3J 2*2G/500_L+320/6L2.2/5R/CB_bgn_1.3C_GEk_ES81
AS7745G-434G82Bn	EMEA	Middle East	LX.PUN02.182	AS7745G-434G82Bn EM W7HP64EMATME2 MC MADISON_PRO1GBCks_3V3J 2*2G/500_L+320/6L2.2/5R/CB_bgn_1.3C_GEk_AR11
AS7745G-434G82Bn	EMEA	Middle East	LX.PUN02.183	AS7745G-434G82Bn EM W7HP64EMATME4 MC MADISON_PRO1GBCks_3V3J 2*2G/500_L+320/6L2.2/5R/CB_bgn_1.3C_GEk_ES61
AS7745G-434G82Bn	EMEA	Middle East	LX.PUN02.186	AS7745G-434G82Bn EM W7HP64EMATME9 MC MADISON_PRO1GBCks_3V3J 2*2G/500_L+320/6L2.2/5R/CB_bgn_1.3C_GEk_ES81
AS7745G-434G82Bn	EMEA	Middle East	LX.PUN02.188	AS7745G-434G82Bn EM W7HP64EMATME2 MC MADISON_PRO1GBCks_3V3J 2*2G/500_L+320/6L2.2/5R/CB_bgn_1.3C_GEk_AR21
AS7745G-434G82Bn	EMEA	Middle East	LX.PUN02.189	AS7745G-434G82Bn EM W7HP64EMATMEB MC MADISON_PRO1GBCks_3V3J 2*2G/500_L+320/6L2.2/5R/CB_bgn_1.3C_GEk_ARA1
AS7745G-434G82Bn	EMEA	Middle East	LX.PUN02.192	AS7745G-434G82Bn EM W7HP64EMATME2 MC MADISON_PRO1GBCks_3V3J 2*2G/500_L+320/6L2.2/5R/CB_bgn_1.3C_GEk_ES61
AS7745G-434G82Bn	EMEA	Middle East	LX.PUN02.193	AS7745G-434G82Bn EM W7HP64EMATME4 MC MADISON_PRO1GBCks_3V3J 2*2G/500_L+320/6L2.2/5R/CB_bgn_1.3C_GEk_RU61
AS7745G-434G82Bn	EMEA	Poland	LX.PUN02.177	AS7745G-434G82Bn W7HP64ATPL1 MC MADISON_PRO1GBCks_3V3J 2*2G/500_L+320/6L2.2/5R/CB_bgn_1.3C_GEk_PL11
AS7745G-434G82Bn	EMEA	Portugal	LX.PUN02.164	AS7745G-434G82Bn W7HP64ATPT1 MC MADISON_PRO1GBCks_3V3J 2*2G/500_L+320/6L2.2/5R/CB_bgn_1.3C_GEk_PT11
AS7745G-434G82Bn	EMEA	Serbia/ Macedonia	LX.PUN02.161	AS7745G-434G82Bn W7HP64ATCS1 MC MADISON_PRO1GBCks_3V3J 2*2G/500_L+320/6L2.2/5R/CB_bgn_1.3C_GEk_SL11
AS7745G-434G82Bn	EMEA	South Africa	LX.PUN02.179	AS7745G-434G82Bn EM W7HP64EMATZA4 MC MADISON_PRO1GBCks_3V3J 2*2G/500_L+320/6L2.2/5R/CB_bgn_1.3C_GEk_ES61
AS7745G-434G82Bn	EMEA	South Africa	LX.PUN02.184	AS7745G-434G82Bn EM W7HP64EMATZA1 MC MADISON_PRO1GBCks_3V3J 2*2G/500_L+320/6L2.2/5R/CB_bgn_1.3C_GEk_ES81

Downloaded from www.Manualslib.com manuals search engine

Model	RO	Country	Acer Part No	Description
AS7745G-434G82Bn	EMEA	South Africa	LX.PUN02.187	AS7745G-434G82Bn EM W7HP64EMATZA5 MC MADISON_PRO1GBCks_3V3J 2*2G/500_L+320/6L2.2/5R/CB_bgn_1.3C_GEk_ES61
AS7745G-434G82Bn	EMEA	South Africa	LX.PUN02.191	AS7745G-434G82Bn EM W7HP64EMATZA2 MC MADISON_PRO1GBCks_3V3J 2*2G/500_L+320/6L2.2/5R/CB_bgn_1.3C_GEk_ES61
AS7745G-434G82Bn	EMEA	Spain	LX.PUN02.159	AS7745G-434G82Bn W7HP64ATES1 MC MADISON_PRO1GBCks_3V3J 2*2G/500_L+320/6L2.2/5R/CB_bgn_1.3C_GEk_ES51
AS7745G-434G82Bn	EMEA	Switzerland	LX.PUN02.173	AS7745G-434G82Bn W7HP64ATCH1 MC MADISON_PRO1GBCks_3V3J 2*2G/500_L+320/6L2.2/5R/CB_bgn_1.3C_GEk_IT41
AS7745G-434G82Bn	EMEA	Turkey	LX.PUN02.190	AS7745G-434G82Bn EM W7HP64EMATTR1 MC MADISON_PRO1GBCks_3V3J 2*2G/500_L+320/6L2.2/5R/CB_bgn_1.3C_GEk_TR31
AS7745G-434G82Bn	EMEA	UK	LX.PUN02.169	AS7745G-434G82Bn W7HP64ATGB1 MC MADISON_PRO1GBCks_3V3J 2*2G/500_L+320/6L2.2/5R/CB_bgn_1.3C_GEk_EN11
AS7745G-434G82Bn	EMEA	Ukraine	LX.PUN02.152	AS7745G-434G82Bn W7HP64RUATUK1 MC MADISON_PRO1GBCks_3V3J 2*2G/500_L+320/6L2.2/5R/CB_bgn_1.3C_GEk_RU61
AS7745G-434G82Bi	EMEA	Russia	LX.PUN02.151	AS7745G-434G82Bi W7HP64RUATRU1 MC MADISON_PRO1GBCks_3V3J 2*2G/500_L+320/6L2.2/5R/CB_bg_1.3C_GEk_RU11
AS7745G-434G64Mn	EMEA	Algeria	LX.PUN02.137	AS7745G-434G64Mn EM W7HP64EMATDZ1 MC MADISON_PRO1GBCks_3V3J 2*2G/640/6L2.2/5R/CB_bgn_1.3C_GEk_ES81
AS7745G-434G64Mn	EMEA	Austria	LX.PUN02.104	AS7745G-434G64Mn W7HP64ATAT1 MC MADISON_PRO1GBCks_3V3J 2*2G/640/6L2.2/5R/CB_bgn_1.3C_GEk_DE61
AS7745G-434G64Mn	EMEA	Baltic	LX.PUN02.112	AS7745G-434G64Mn W7HP64ATBC3 MC MADISON_PRO1GBCks_3V3J 2*2G/640/6L2.2/5R/CB_bgn_1.3C_GEk_SV21
AS7745G-434G64Mn	EMEA	Baltic	LX.PUN02.115	AS7745G-434G64Mn W7HP64ATBC4 MC MADISON_PRO1GBCks_3V3J 2*2G/640/6L2.2/5R/CB_bgn_1.3C_GEk_LT11
AS7745G-434G64Mn	EMEA	Baltic	LX.PUN02.128	AS7745G-434G64Mn W7HP64ATBC5 MC MADISON_PRO1GBCks_3V3J 2*2G/640/6L2.2/5R/CB_bgn_1.3C_GEk_LT11
AS7745G-434G64Mn	EMEA	Belgium	LX.PUN02.126	AS7745G-434G64Mn W7HP64ATBE1 MC MADISON_PRO1GBCks_3V3J 2*2G/640/6L2.2/5R/CB_bgn_1.3C_GEk_NL11
AS7745G-434G64Mn	EMEA	Cyprus	LX.PUN02.113	AS7745G-434G64Mn W7HP64ATCY1 MC MADISON_PRO1GBCks_3V3J 2*2G/640/6L2.2/5R/CB_bgn_1.3C_GEk_ES61
AS7745G-434G64Mn	EMEA	Czech	LX.PUK02.002	AS7745G-434G64Mn W7HP64ATCZ2 MC PARK_XT512Cks_3V3J 2*2G/640/BT/6L2.2/5R/CB_bgn_1.3C_GEk_SK11
AS7745G-434G64Mn	EMEA	Czech	LX.PUN02.118	AS7745G-434G64Mn W7HP64ATCZ2 MC MADISON_PRO1GBCks_3V3J 2*2G/640/6L2.2/5R/CB_bgn_1.3C_GEk_SK11

Downloaded from www.Manualslib.com manuals search engine

Model	RO	Country	Acer Part No	Description
AS7745G-434G64Mn	EMEA	Czech	LX.PUN02.213	AS7745G-434G64Mn W7HP64ATCZ2 MC MADISON_PRO1GBCks_3V3J 2*2G/640/BT/6L2.2/5R/CB_bgn_1.3C_GEk_SK11
AS7745G-434G64Mn	EMEA	Czech	LX.PUP02.086	AS7745G-434G64Mn W7HP64ATCZ2 MC BROADWAY_PRO1GBCks_3V3J 2*2G/640/BT/9L3.0/5R/CB_bgn_1.3C_GEk_SK11
AS7745G-434G64Mn	EMEA	Denmark	LX.PUN02.108	AS7745G-434G64Mn W7HP64ATDK2 MC MADISON_PRO1GBCks_3V3J 2*2G/640/6L2.2/5R/CB_bgn_1.3C_GEk_ENS1
AS7745G-434G64Mn	EMEA	Eastern Europe	LX.PUN02.102	AS7745G-434G64Mn W7HP64ATEU7 MC MADISON_PRO1GBCks_3V3J 2*2G/640/6L2.2/5R/CB_bgn_1.3C_GEk_SL11
AS7745G-434G64Mn	EMEA	Eastern Europe	LX.PUN02.106	AS7745G-434G64Mn W7HP64ATEU4 MC MADISON_PRO1GBCks_3V3J 2*2G/640/6L2.2/5R/CB_bgn_1.3C_GEk_SV21
AS7745G-434G64Mn	EMEA	Eastern Europe	LX.PUN02.107	AS7745G-434G64Mn W7HP64ATEU7 MC MADISON_PRO1GBCks_3V3J 2*2G/640/6L2.2/5R/CB_bgn_1.3C_GEk_ENQ1
AS7745G-434G64Mn	EMEA	Eastern Europe	LX.PUN02.119	AS7745G-434G64Mn W7HP64ATEU5 MC MADISON_PRO1GBCks_3V3J 2*2G/640/6L2.2/5R/CB_bgn_1.3C_GEk_PL71
AS7745G-434G64Mn	EMEA	Eastern Europe	LX.PUN02.120	AS7745G-434G64Mn W7HP64ATEU5 MC MADISON_PRO1GBCks_3V3J 2*2G/640/6L2.2/5R/CB_bgn_1.3C_GEk_RO11
AS7745G-434G64Mn	EMEA	France	LX.PUN02.103	AS7745G-434G64Mn W7HP64ATFR1 MC MADISON_PRO1GBCks_3V3J 2*2G/640/6L2.2/5R/CB_bgn_1.3C_GEk_FR21
AS7745G-434G64Mn	EMEA	Germany	LX.PUN02.130	AS7745G-434G64Mn W7HP64ATDE1 MC MADISON_PRO1GBCks_3V3J 2*2G/640/6L2.2/5R/CB_bgn_1.3C_GEk_DE11
AS7745G-434G64Mn	EMEA	Greece	LX.PUN02.105	AS7745G-434G64Mn W7HP64ATGR1 MC MADISON_PRO1GBCks_3V3J 2*2G/640/6L2.2/5R/CB_bgn_1.3C_GEk_EL31
AS7745G-434G64Mn	EMEA	Holland	LX.PUN02.127	AS7745G-434G64Mn W7HP64ATNL1 MC MADISON_PRO1GBCks_3V3J 2*2G/640/6L2.2/5R/CB_bgn_1.3C_GEk_NL11
AS7745G-434G64Mn	EMEA	Hungary	LX.PUN02.117	AS7745G-434G64Mn W7HP64ATHU1 MC MADISON_PRO1GBCks_3V3J 2*2G/640/6L2.2/5R/CB_bgn_1.3C_GEk_HU11
AS7745G-434G64Mn	EMEA	Israel	LX.PUN02.116	AS7745G-434G64Mn W7HP64ATIL1 MC MADISON_PRO1GBCks_3V3J 2*2G/640/6L2.2/5R/CB_bgn_1.3C_GEk_HE11
AS7745G-434G64Mn	EMEA	Italy	LX.PUN02.110	AS7745G-434G64Mn W7HP64ATIT1 MC MADISON_PRO1GBCks_3V3J 2*2G/640/6L2.2/5R/CB_bgn_1.3C_GEk_IT11
AS7745G-434G64Mn	EMEA	Latvia	LX.PUN02.122	AS7745G-434G64Mn W7HP64ATLV1 MC MADISON_PRO1GBCks_3V3J 2*2G/640/6L2.2/5R/CB_bgn_1.3C_GEk_RU22
AS7745G-434G64Mn	EMEA	Latvia	LX.PUN02.123	AS7745G-434G64Mn W7HP64ATLV1 MC MADISON_PRO1GBCks_3V3J 2*2G/640/6L2.2/5R/CB_bgn_1.3C_GEk_LT11

Downloaded from www.Manualslib.com manuals search engine

Model	RO	Country	Acer Part No	Description
AS7745G-434G64Mn	EMEA	Luxembourg	LX.PUN02.124	AS7745G-434G64Mn W7HP64ATLU3 MC MADISON_PRO1GBCks_3V3J 2*2G/640/6L2.2/ 5R/CB_bgn_1.3C_GEk_IT41
AS7745G-434G64Mn	EMEA	Middle East	LX.PUN02.132	AS7745G-434G64Mn EM W7HP64EMATME6 MC MADISON_PRO1GBCks_3V3J 2*2G/640/6L2.2/ 5R/CB_bgn_1.3C_GEk_ES61
AS7745G-434G64Mn	EMEA	Middle East	LX.PUN02.133	AS7745G-434G64Mn EM W7HP64EMATME3 MC MADISON_PRO1GBCks_3V3J 2*2G/640/6L2.2/ 5R/CB_bgn_1.3C_GEk_ES81
AS7745G-434G64Mn	EMEA	Middle East	LX.PUN02.134	AS7745G-434G64Mn EM W7HP64EMATME2 MC MADISON_PRO1GBCks_3V3J 2*2G/640/6L2.2/ 5R/CB_bgn_1.3C_GEk_AR11
AS7745G-434G64Mn	EMEA	Middle East	LX.PUN02.135	AS7745G-434G64Mn EM W7HP64EMATME4 MC MADISON_PRO1GBCks_3V3J 2*2G/640/6L2.2/ 5R/CB_bgn_1.3C_GEk_ES61
AS7745G-434G64Mn	EMEA	Middle East	LX.PUN02.138	AS7745G-434G64Mn EM W7HP64EMATME9 MC MADISON_PRO1GBCks_3V3J 2*2G/640/6L2.2/ 5R/CB_bgn_1.3C_GEk_ES81
AS7745G-434G64Mn	EMEA	Middle East	LX.PUN02.140	AS7745G-434G64Mn EM W7HP64EMATME2 MC MADISON_PRO1GBCks_3V3J 2*2G/640/6L2.2/ 5R/CB_bgn_1.3C_GEk_AR21
AS7745G-434G64Mn	EMEA	Middle East	LX.PUN02.141	AS7745G-434G64Mn EM W7HP64EMATMEB MC MADISON_PRO1GBCks_3V3J 2*2G/640/6L2.2/ 5R/CB_bgn_1.3C_GEk_ARA1
AS7745G-434G64Mn	EMEA	Middle East	LX.PUN02.144	AS7745G-434G64Mn EM W7HP64EMATME2 MC MADISON_PRO1GBCks_3V3J 2*2G/640/6L2.2/ 5R/CB_bgn_1.3C_GEk_ES61
AS7745G-434G64Mn	EMEA	Middle East	LX.PUN02.145	AS7745G-434G64Mn EM W7HP64EMATME4 MC MADISON_PRO1GBCks_3V3J 2*2G/640/6L2.2/ 5R/CB_bgn_1.3C_GEk_RU61
AS7745G-434G64Mn	EMEA	Poland	LX.PUN02.129	AS7745G-434G64Mn W7HP64ATPL1 MC MADISON_PRO1GBCks_3V3J 2*2G/640/6L2.2/ 5R/CB_bgn_1.3C_GEk_PL11
AS7745G-434G64Mn	EMEA	Portugal	LX.PUN02.114	AS7745G-434G64Mn W7HP64ATPT1 MC MADISON_PRO1GBCks_3V3J 2*2G/640/6L2.2/ 5R/CB_bgn_1.3C_GEk_PT11
AS7745G-434G64Mn	EMEA	Serbia/ Macedonia	LX.PUN02.111	AS7745G-434G64Mn W7HP64ATCS1 MC MADISON_PRO1GBCks_3V3J 2*2G/640/6L2.2/ 5R/CB_bgn_1.3C_GEk_SL11
AS7745G-434G64Mn	EMEA	South Africa	LX.PUN02.131	AS7745G-434G64Mn EM W7HP64EMATZA4 MC MADISON_PRO1GBCks_3V3J 2*2G/640/6L2.2/ 5R/CB_bgn_1.3C_GEk_ES61
AS7745G-434G64Mn	EMEA	South Africa	LX.PUN02.136	AS7745G-434G64Mn EM W7HP64EMATZA1 MC MADISON_PRO1GBCks_3V3J 2*2G/640/6L2.2/ 5R/CB_bgn_1.3C_GEk_ES81
AS7745G-434G64Mn	EMEA	South Africa	LX.PUN02.139	AS7745G-434G64Mn EM W7HP64EMATZA5 MC MADISON_PRO1GBCks_3V3J 2*2G/640/6L2.2/ 5R/CB_bgn_1.3C_GEk_ES61
AS7745G-434G64Mn	EMEA	South Africa	LX.PUN02.143	AS7745G-434G64Mn EM W7HP64EMATZA2 MC MADISON_PRO1GBCks_3V3J 2*2G/640/6L2.2/ 5R/CB_bgn_1.3C_GEk_ES61

Downloaded from www.Manualslib.com manuals search engine

Model	RO	Country	Acer Part No	Description
AS7745G-434G64Mn	EMEA	South Africa	LX.PUN02.196	AS7745G-434G64Mn EM W7HP64EMATZA2 MC MADISON_PRO1GBCks_3V3J 2*2G/640/BT/6L2.2/5R/CB_bgn_1.3C_GEk_ES61
AS7745G-434G64Mn	EMEA	Spain	LX.PUN02.109	AS7745G-434G64Mn W7HP64ATES1 MC MADISON_PRO1GBCks_3V3J 2*2G/640/6L2.2/5R/CB_bgn_1.3C_GEk_ES51
AS7745G-434G64Mn	EMEA	Switzerland	LX.PUN02.125	AS7745G-434G64Mn W7HP64ATCH1 MC MADISON_PRO1GBCks_3V3J 2*2G/640/6L2.2/5R/CB_bgn_1.3C_GEk_IT41
AS7745G-434G64Mn	EMEA	Turkey	LX.PUN02.142	AS7745G-434G64Mn EM W7HP64EMATTR1 MC MADISON_PRO1GBCks_3V3J 2*2G/640/6L2.2/5R/CB_bgn_1.3C_GEk_TR31
AS7745G-434G64Mn	EMEA	UK	LX.PUN02.121	AS7745G-434G64Mn W7HP64ATGB1 MC MADISON_PRO1GBCks_3V3J 2*2G/640/6L2.2/5R/CB_bgn_1.3C_GEk_EN11
AS7745G-434G64Mn	EMEA	Ukraine	LX.PUN02.147	AS7745G-434G64Mn W7HP64RUATUK1 MC MADISON_PRO1GBCks_3V3J 2*2G/640/6L2.2/5R/CB_bgn_1.3C_GEk_RU61
AS7745G-434G64Mi	EMEA	Russia	LX.PUN02.146	AS7745G-434G64Mi W7HP64RUATRU1 MC MADISON_PRO1GBCks_3V3J 2*2G/640/6L2.2/5R/CB_bg_1.3C_GEk_RU11
AS7745G-434G64Mi	EMEA	Russia	LX.PUN02.194	AS7745G-434G64Mi W7HP64RUATRU1 MC MADISON_PRO1GBCks_3V3J 2*2G/640/BT/6L2.2/5R/CB_bg_1.3C_GEk_RU11
AS7745G-434G64Bn	EMEA	Germany	LX.PUN02.195	AS7745G-434G64Bn W7HP64ATDE1 MC MADISON_PRO1GBCks_3V3J 2*2G/640/BT/6L2.2/5R/CB_bgn_1.3C_GEk_DE11
AS7745G-434G64Bn	EMEA	Germany	LX.PUN02.207	AS7745G-434G64Bn W7HP64ATDE1 MC MADISON_PRO1GBCks_3V3J 2*2G/640/6L2.2/5R/CB_bgn_1.3C_GEk_DE11
AS7745G-434G57Mn	WW	WW	S2.PUN02.003	AS7745G-434G57Mn W7HP64AWW1 MC MADISON_PRO1GBCks_3V3J 2*2G/250+320/6L2.2/5R/CB_bgn_1.3C_GEk_ES62
AS7745G-434G57Mn	WW	WW	S2.PUN02.003	AS7745G-434G57Mn W7HP64AWW1 MC MADISON_PRO1GBCks_3V3J 2*2G/250+320/6L2.2/5R/CB_bgn_1.3C_GEk_ES62
AS7745G-434G50Mn	EMEA	Spain	LX.PUN02.098	AS7745G-434G50Mn W7HP64ATES1 MC MADISON_PRO1GBCks_3V3J 2*2G/500_L/6L2.2/5R/CB_bgn_1.3C_GEk_ES51
AS7745G-434G50Mn	EMEA	Turkey	LX.PUN02.216	AS7745G-434G50Mn EM W7HP64EMATTR1 MC MADISON_PRO1GBCks_3V3J 2*2G/500_L/BT/6L2.2/5R/CB_bgn_1.3C_GEk_TR31
AS7745G-434G50Mn	EMEA	UK	LX.PUK02.005	AS7745G-434G50Mn W7HP64ATGB1 MC PARK_XT512Cks_3V3J 2*2G/500_L/6L2.2/5R/CB_bgn_1.3C_GEk_EN11
AS7745G-434G50Bn	EMEA	Germany	LX.PUN02.210	AS7745G-434G50Bn W7HP64ATDE1 MC MADISON_PRO1GBCks_3V3J 2*2G/500_L/6L2.2/5R/CB_bgn_1.3C_GEk_DE11
AS7745G-434G50Bn	EMEA	Germany	LX.PUP02.084	AS7745G-434G50Bn W7HP64ATDE1 MC BROADWAY_PRO1GBCks_3V3J 2*2G/500_L/9L3.0/5R/CB_bgn_1.3C_GEk_DE11

Downloaded from www.Manualslib.com manuals search engine

Model	RO	Country	Acer Part No	Description
AS7745G-434G32Mn	EMEA	Algeria	LX.PUN02.039	AS7745G-434G32Mn EM W7HP64EMATDZ1 MC MADISON_PRO1GBCks_3V3J 2*2G/320/6L2.2/5R/CB_bgn_1.3C_GEk_ES81
AS7745G-434G32Mn	EMEA	Austria	LX.PUN02.018	AS7745G-434G32Mn W7HP64ATAT1 MC MADISON_PRO1GBCks_3V3J 2*2G/320/6L2.2/5R/CB_bgn_1.3C_GEk_DE61
AS7745G-434G32Mn	EMEA	Baltic	LX.PUN02.013	AS7745G-434G32Mn W7HP64ATBC3 MC MADISON_PRO1GBCks_3V3J 2*2G/320/6L2.2/5R/CB_bgn_1.3C_GEk_SV21
AS7745G-434G32Mn	EMEA	Baltic	LX.PUN02.016	AS7745G-434G32Mn W7HP64ATBC4 MC MADISON_PRO1GBCks_3V3J 2*2G/320/6L2.2/5R/CB_bgn_1.3C_GEk_LT11
AS7745G-434G32Mn	EMEA	Baltic	LX.PUN02.030	AS7745G-434G32Mn W7HP64ATBC5 MC MADISON_PRO1GBCks_3V3J 2*2G/320/6L2.2/5R/CB_bgn_1.3C_GEk_LT11
AS7745G-434G32Mn	EMEA	Belgium	LX.PUN02.027	AS7745G-434G32Mn W7HP64ATBE1 MC MADISON_PRO1GBCks_3V3J 2*2G/320/6L2.2/5R/CB_bgn_1.3C_GEk_NL11
AS7745G-434G32Mn	EMEA	Cyprus	LX.PUN02.015	AS7745G-434G32Mn W7HP64ATCY1 MC MADISON_PRO1GBCks_3V3J 2*2G/320/6L2.2/5R/CB_bgn_1.3C_GEk_ES61
AS7745G-434G32Mn	EMEA	Czech	LX.PUN02.020	AS7745G-434G32Mn W7HP64ATCZ2 MC MADISON_PRO1GBCks_3V3J 2*2G/320/6L2.2/5R/CB_bgn_1.3C_GEk_SK11
AS7745G-434G32Mn	EMEA	Denmark	LX.PUN02.011	AS7745G-434G32Mn W7HP64ATDK2 MC MADISON_PRO1GBCks_3V3J 2*2G/320/6L2.2/5R/CB_bgn_1.3C_GEk_ENS1
AS7745G-434G32Mn	EMEA	Denmark	LX.PUN02.094	AS7745G-434G32Mn W7HP64ATDK2 MC MADISON_PRO1GBCks_3V3J 2*2G/320/BT/6L2.2/5R/CB_bgn_1.3C_GEk_ENS1
AS7745G-434G32Mn	EMEA	Eastern Europe	LX.PUN02.005	AS7745G-434G32Mn W7HP64ATEU7 MC MADISON_PRO1GBCks_3V3J 2*2G/320/6L2.2/5R/CB_bgn_1.3C_GEk_SL11
AS7745G-434G32Mn	EMEA	Eastern Europe	LX.PUN02.009	AS7745G-434G32Mn W7HP64ATEU4 MC MADISON_PRO1GBCks_3V3J 2*2G/320/6L2.2/5R/CB_bgn_1.3C_GEk_SV21
AS7745G-434G32Mn	EMEA	Eastern Europe	LX.PUN02.010	AS7745G-434G32Mn W7HP64ATEU7 MC MADISON_PRO1GBCks_3V3J 2*2G/320/6L2.2/5R/CB_bgn_1.3C_GEk_ENQ1
AS7745G-434G32Mn	EMEA	Eastern Europe	LX.PUN02.022	AS7745G-434G32Mn W7HP64ATEU5 MC MADISON_PRO1GBCks_3V3J 2*2G/320/6L2.2/5R/CB_bgn_1.3C_GEk_PL71
AS7745G-434G32Mn	EMEA	Eastern Europe	LX.PUN02.023	AS7745G-434G32Mn W7HP64ATEU5 MC MADISON_PRO1GBCks_3V3J 2*2G/320/6L2.2/5R/CB_bgn_1.3C_GEk_RO11
AS7745G-434G32Mn	EMEA	France	LX.PUN02.004	AS7745G-434G32Mn W7HP64ATFR1 MC MADISON_PRO1GBCks_3V3J 2*2G/320/6L2.2/5R/CB_bgn_1.3C_GEk_FR21
AS7745G-434G32Mn	EMEA	Germany	LX.PUN02.031	AS7745G-434G32Mn W7HP64ATDE1 MC MADISON_PRO1GBCks_3V3J 2*2G/320/6L2.2/5R/CB_bgn_1.3C_GEk_DE11

Downloaded from www.Manualslib.com manuals search engine

Model	RO	Country	Acer Part No	Description
AS7745G-434G32Mn	EMEA	Greece	LX.PUN02.006	AS7745G-434G32Mn W7HP64ATGR1 MC MADISON_PRO1GBCks_3V3J 2*2G/320/6L2.2/ 5R/CB_bgn_1.3C_GEk_EL31
AS7745G-434G32Mn	EMEA	Holland	LX.PUN02.028	AS7745G-434G32Mn W7HP64ATNL1 MC MADISON_PRO1GBCks_3V3J 2*2G/320/6L2.2/ 5R/CB_bgn_1.3C_GEk_NL11
AS7745G-434G32Mn	EMEA	Hungary	LX.PUN02.019	AS7745G-434G32Mn W7HP64ATHU1 MC MADISON_PRO1GBCks_3V3J 2*2G/320/6L2.2/ 5R/CB_bgn_1.3C_GEk_HU11
AS7745G-434G32Mn	EMEA	Israel	LX.PUN02.017	AS7745G-434G32Mn W7HP64ATIL1 MC MADISON_PRO1GBCks_3V3J 2*2G/320/6L2.2/ 5R/CB_bgn_1.3C_GEk_HE11
AS7745G-434G32Mn	EMEA	Italy	LX.PUN02.008	AS7745G-434G32Mn W7HP64ATIT1 MC MADISON_PRO1GBCks_3V3J 2*2G/320/6L2.2/ 5R/CB_bgn_1.3C_GEk_IT11
AS7745G-434G32Mn	EMEA	Latvia	LX.PUN02.024	AS7745G-434G32Mn W7HP64ATLV1 MC MADISON_PRO1GBCks_3V3J 2*2G/320/6L2.2/ 5R/CB_bgn_1.3C_GEk_RU22
AS7745G-434G32Mn	EMEA	Latvia	LX.PUN02.025	AS7745G-434G32Mn W7HP64ATLV1 MC MADISON_PRO1GBCks_3V3J 2*2G/320/6L2.2/ 5R/CB_bgn_1.3C_GEk_LT11
AS7745G-434G32Mn	EMEA	Luxemburg	LX.PUN02.029	AS7745G-434G32Mn W7HP64ATLU3 MC MADISON_PRO1GBCks_3V3J 2*2G/320/6L2.2/ 5R/CB_bgn_1.3C_GEk_IT41
AS7745G-434G32Mn	EMEA	Middle East	LX.PUN02.034	AS7745G-434G32Mn EM W7HP64EMATME6 MC MADISON_PRO1GBCks_3V3J 2*2G/320/6L2.2/ 5R/CB_bgn_1.3C_GEk_ES61
AS7745G-434G32Mn	EMEA	Middle East	LX.PUN02.035	AS7745G-434G32Mn EM W7HP64EMATME3 MC MADISON_PRO1GBCks_3V3J 2*2G/320/6L2.2/ 5R/CB_bgn_1.3C_GEk_ES81
AS7745G-434G32Mn	EMEA	Middle East	LX.PUN02.036	AS7745G-434G32Mn EM W7HP64EMATME2 MC MADISON_PRO1GBCks_3V3J 2*2G/320/6L2.2/ 5R/CB_bgn_1.3C_GEk_AR11
AS7745G-434G32Mn	EMEA	Middle East	LX.PUN02.037	AS7745G-434G32Mn EM W7HP64EMATME4 MC MADISON_PRO1GBCks_3V3J 2*2G/320/6L2.2/ 5R/CB_bgn_1.3C_GEk_ES61
AS7745G-434G32Mn	EMEA	Middle East	LX.PUN02.040	AS7745G-434G32Mn EM W7HP64EMATME9 MC MADISON_PRO1GBCks_3V3J 2*2G/320/6L2.2/ 5R/CB_bgn_1.3C_GEk_ES81
AS7745G-434G32Mn	EMEA	Middle East	LX.PUN02.041	AS7745G-434G32Mn EM W7HP64EMATME2 MC MADISON_PRO1GBCks_3V3J 2*2G/320/6L2.2/ 5R/CB_bgn_1.3C_GEk_AR21
AS7745G-434G32Mn	EMEA	Middle East	LX.PUN02.042	AS7745G-434G32Mn EM W7HP64EMATMEB MC MADISON_PRO1GBCks_3V3J 2*2G/320/6L2.2/ 5R/CB_bgn_1.3C_GEk_ARA1
AS7745G-434G32Mn	EMEA	Middle East	LX.PUN02.045	AS7745G-434G32Mn EM W7HP64EMATME4 MC MADISON_PRO1GBCks_3V3J 2*2G/320/6L2.2/ 5R/CB_bgn_1.3C_GEk_RU61
AS7745G-434G32Mn	EMEA	Middle East	LX.PUN02.055	AS7745G-434G32Mn EM W7HP64EMATME2 MC MADISON_PRO1GBCks_3V3J 2*2G/320/6L2.2/ 5R/CB_bgn_1.3C_GEk_ES61

Downloaded from www.Manualslib.com manuals search engine

Model	RO	Country	Acer Part No	Description
AS7745G-434G32Mn	EMEA	Poland	LX.PUN02.032	AS7745G-434G32Mn W7HP64ATPL1 MC MADISON_PRO1GBCks_3V3J 2*2G/320/6L2.2/5R/CB_bgn_1.3C_GEk_PL11
AS7745G-434G32Mn	EMEA	Portugal	LX.PUN02.014	AS7745G-434G32Mn W7HP64ATPT1 MC MADISON_PRO1GBCks_3V3J 2*2G/320/6L2.2/5R/CB_bgn_1.3C_GEk_PT11
AS7745G-434G32Mn	EMEA	Serbia/ Macedonia	LX.PUN02.012	AS7745G-434G32Mn W7HP64ATCS1 MC MADISON_PRO1GBCks_3V3J 2*2G/320/6L2.2/5R/CB_bgn_1.3C_GEk_SL11
AS7745G-434G32Mn	EMEA	South Africa	LX.PUN02.033	AS7745G-434G32Mn EM W7HP64EMATZA4 MC MADISON_PRO1GBCks_3V3J 2*2G/320/6L2.2/5R/CB_bgn_1.3C_GEk_ES61
AS7745G-434G32Mn	EMEA	South Africa	LX.PUN02.038	AS7745G-434G32Mn EM W7HP64EMATZA1 MC MADISON_PRO1GBCks_3V3J 2*2G/320/6L2.2/5R/CB_bgn_1.3C_GEk_ES81
AS7745G-434G32Mn	EMEA	South Africa	LX.PUN02.044	AS7745G-434G32Mn EM W7HP64EMATZA2 MC MADISON_PRO1GBCks_3V3J 2*2G/320/6L2.2/5R/CB_bgn_1.3C_GEk_ES61
AS7745G-434G32Mn	EMEA	Spain	LX.PUN02.007	AS7745G-434G32Mn W7HP64ATES1 MC MADISON_PRO1GBCks_3V3J 2*2G/320/6L2.2/5R/CB_bgn_1.3C_GEk_ES51
AS7745G-434G32Mn	EMEA	Switzerland	LX.PUN02.026	AS7745G-434G32Mn W7HP64ATCH1 MC MADISON_PRO1GBCks_3V3J 2*2G/320/6L2.2/5R/CB_bgn_1.3C_GEk_IT41
AS7745G-434G32Mn	EMEA	Turkey	LX.PUN02.043	AS7745G-434G32Mn EM W7HP64EMATTR1 MC MADISON_PRO1GBCks_3V3J 2*2G/320/6L2.2/5R/CB_bgn_1.3C_GEk_TR31
AS7745G-434G32Mn	EMEA	UK	LX.PUN02.021	AS7745G-434G32Mn W7HP64ATGB1 MC MADISON_PRO1GBCks_3V3J 2*2G/320/6L2.2/5R/CB_bgn_1.3C_GEk_EN11
AS7745G-434G32Mn	EMEA	Ukraine	LX.PUN02.047	AS7745G-434G32Mn W7HP64RUATUK1 MC MADISON_PRO1GBCks_3V3J 2*2G/320/6L2.2/5R/CB_bgn_1.3C_GEk_RU61
AS7745G-434G32Mi	EMEA	Russia	LX.PUK01.001	AS7745G-434G32Mi W7HB64RUATRU1 MC PARK_XT512Cks_3V3J 2*2G/320/BT/6L2.2/5R/CB_bg_1.3C_GEk_RU11
AS7745G-434G32Mi	EMEA	Russia	LX.PUN01.001	AS7745G-434G32Mi W7HB64RUATRU1 MC MADISON_PRO1GBCks_3V3J 2*2G/160+160/BT/6L2.2/5R/CB_bg_1.3C_GEk_RU11
AS7745G-434G32Mi	EMEA	Russia	LX.PUN02.046	AS7745G-434G32Mi W7HP64RUATRU1 MC MADISON_PRO1GBCks_3V3J 2*2G/320/6L2.2/5R/CB_bg_1.3C_GEk_RU11
AS7745G-434G1TMn	EMEA	Algeria	LX.PUN02.084	AS7745G-434G1TMn EM W7HP64EMATDZ1 MC MADISON_PRO1GBCks_3V3J 2*2G/500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_ES81
AS7745G-434G1TMn	EMEA	Algeria	LX.PUP02.003	AS7745G-434G1TMn EM W7HP64EMATDZ1 MC BROADWAY_PRO1GBCks_3V3J 2*2G/500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_ES81
AS7745G-434G1TMn	EMEA	Austria	LX.PUN02.050	AS7745G-434G1TMn W7HP64ATAT1 MC MADISON_PRO1GBCks_3V3J 2*2G/500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_DE61

Downloaded from www.Manualslib.com manuals search engine

Model	RO	Country	Acer Part No	Description
AS7745G-434G1TMn	EMEA	Austria	LX.PUP 02.053	AS7745G-434G1TMn W7HP64ATAT1 MC BROADWAY_PRO1GBCks_3V3J 2*2G/ 500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_DE61
AS7745G-434G1TMn	EMEA	Baltic	LX.PUN 02.059	AS7745G-434G1TMn W7HP64ATBC3 MC MADISON_PRO1GBCks_3V3J 2*2G/ 500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_SV21
AS7745G-434G1TMn	EMEA	Baltic	LX.PUN 02.062	AS7745G-434G1TMn W7HP64ATBC4 MC MADISON_PRO1GBCks_3V3J 2*2G/ 500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_LT11
AS7745G-434G1TMn	EMEA	Baltic	LX.PUN 02.075	AS7745G-434G1TMn W7HP64ATBC5 MC MADISON_PRO1GBCks_3V3J 2*2G/ 500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_LT11
AS7745G-434G1TMn	EMEA	Baltic	LX.PUP 02.061	AS7745G-434G1TMn W7HP64ATBC3 MC BROADWAY_PRO1GBCks_3V3J 2*2G/ 500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_SV21
AS7745G-434G1TMn	EMEA	Baltic	LX.PUP 02.064	AS7745G-434G1TMn W7HP64ATBC4 MC BROADWAY_PRO1GBCks_3V3J 2*2G/ 500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_LT11
AS7745G-434G1TMn	EMEA	Baltic	LX.PUP 02.077	AS7745G-434G1TMn W7HP64ATBC5 MC BROADWAY_PRO1GBCks_3V3J 2*2G/ 500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_LT11
AS7745G-434G1TMn	EMEA	Belgium	LX.PUN 02.072	AS7745G-434G1TMn W7HP64ATBE1 MC MADISON_PRO1GBCks_3V3J 2*2G/ 500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_NL11
AS7745G-434G1TMn	EMEA	Belgium	LX.PUP 02.075	AS7745G-434G1TMn W7HP64ATBE1 MC BROADWAY_PRO1GBCks_3V3J 2*2G/ 500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_NL11
AS7745G-434G1TMn	EMEA	Cyprus	LX.PUN 02.061	AS7745G-434G1TMn W7HP64ATCY1 MC MADISON_PRO1GBCks_3V3J 2*2G/ 500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_ES61
AS7745G-434G1TMn	EMEA	Cyprus	LX.PUP 02.062	AS7745G-434G1TMn W7HP64ATCY1 MC BROADWAY_PRO1GBCks_3V3J 2*2G/ 500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_ES61
AS7745G-434G1TMn	EMEA	Czech	LX.PUN 02.065	AS7745G-434G1TMn W7HP64ATCZ2 MC MADISON_PRO1GBCks_3V3J 2*2G/ 500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_SK11
AS7745G-434G1TMn	EMEA	Czech	LX.PUP 02.067	AS7745G-434G1TMn W7HP64ATCZ2 MC BROADWAY_PRO1GBCks_3V3J 2*2G/ 500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_SK11
AS7745G-434G1TMn	EMEA	Denmark	LX.PUN 02.057	AS7745G-434G1TMn W7HP64ATDK2 MC MADISON_PRO1GBCks_3V3J 2*2G/ 500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_ENS1
AS7745G-434G1TMn	EMEA	Denmark	LX.PUP 02.057	AS7745G-434G1TMn W7HP64ATDK2 MC BROADWAY_PRO1GBCks_3V3J 2*2G/ 500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_ENS1
AS7745G-434G1TMn	EMEA	Eastern Europe	LX.PUN 02.002	AS7745G-434G1TMn W7HP64ATEU5 MC MADISON_PRO1GBCks_3V3J 2*2G/ 500_L+500_L/BT/6L2.2/5R/ CB_bgn_1.3C_GEk_RO11

Downloaded from www.Manualslib.com manuals search engine

Model	RO	Country	Acer Part No	Description
AS7745G-434G1TMn	EMEA	Eastern Europe	LX.PUN 02.003	AS7745G-434G1TMn W7HP64ATEU7 MC MADISON_PRO1GBCks_3V3J 2*2G/ 500_L+500_L/BT/6L2.2/5R/ CB_bgn_1.3C_GEk_SL11
AS7745G-434G1TMn	EMEA	Eastern Europe	LX.PUN 02.049	AS7745G-434G1TMn W7HP64ATEU7 MC MADISON_PRO1GBCks_3V3J 2*2G/ 500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_SL11
AS7745G-434G1TMn	EMEA	Eastern Europe	LX.PUN 02.054	AS7745G-434G1TMn W7HP64ATEU4 MC MADISON_PRO1GBCks_3V3J 2*2G/ 500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_SV21
AS7745G-434G1TMn	EMEA	Eastern Europe	LX.PUN 02.056	AS7745G-434G1TMn W7HP64ATEU7 MC MADISON_PRO1GBCks_3V3J 2*2G/ 500_L+500_L/6L2.2/5R/ CB_bgn_1.3C_GEk_ENQ1
AS7745G-434G1TMn	EMEA	Eastern Europe	LX.PUN 02.067	AS7745G-434G1TMn W7HP64ATEU5 MC MADISON_PRO1GBCks_3V3J 2*2G/ 500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_PL71
AS7745G-434G1TMn	EMEA	Eastern Europe	LX.PUN 02.068	AS7745G-434G1TMn W7HP64ATEU5 MC MADISON_PRO1GBCks_3V3J 2*2G/ 500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_RO11
AS7745G-434G1TMn	EMEA	Eastern Europe	LX.PUP 02.036	AS7745G-434G1TMn W7HP64ATEU7 MC BROADWAY_PRO1GBCks_3V3J 2*2G/ 500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_SL11
AS7745G-434G1TMn	EMEA	Eastern Europe	LX.PUP 02.055	AS7745G-434G1TMn W7HP64ATEU4 MC BROADWAY_PRO1GBCks_3V3J 2*2G/ 500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_SV21
AS7745G-434G1TMn	EMEA	Eastern Europe	LX.PUP 02.056	AS7745G-434G1TMn W7HP64ATEU7 MC BROADWAY_PRO1GBCks_3V3J 2*2G/ 500_L+500_L/6L2.2/5R/ CB_bgn_1.3C_GEk_ENQ1
AS7745G-434G1TMn	EMEA	Eastern Europe	LX.PUP 02.068	AS7745G-434G1TMn W7HP64ATEU5 MC BROADWAY_PRO1GBCks_3V3J 2*2G/ 500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_PL71
AS7745G-434G1TMn	EMEA	Eastern Europe	LX.PUP 02.069	AS7745G-434G1TMn W7HP64ATEU5 MC BROADWAY_PRO1GBCks_3V3J 2*2G/ 500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_RO11
AS7745G-434G1TMn	EMEA	France	LX.PUN 02.048	AS7745G-434G1TMn W7HP64ATFR1 MC MADISON_PRO1GBCks_3V3J 2*2G/ 500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_FR21
AS7745G-434G1TMn	EMEA	France	LX.PUP 02.048	AS7745G-434G1TMn W7HP64ATFR1 MC BROADWAY_PRO1GBCks_3V3J 2*2G/ 500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_FR21
AS7745G-434G1TMn	EMEA	Germany	LX.PUN 02.076	AS7745G-434G1TMn W7HP64ATDE1 MC MADISON_PRO1GBCks_3V3J 2*2G/ 500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_DE11
AS7745G-434G1TMn	EMEA	Germany	LX.PUP 02.079	AS7745G-434G1TMn W7HP64ATDE1 MC BROADWAY_PRO1GBCks_3V3J 2*2G/ 500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_DE11
AS7745G-434G1TMn	EMEA	Greece	LX.PUN 02.051	AS7745G-434G1TMn W7HP64ATGR1 MC MADISON_PRO1GBCks_3V3J 2*2G/ 500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_EL31

Downloaded from www.Manualslib.com manuals search engine

Model	RO	Country	Acer Part No	Description
AS7745G-434G1TMn	EMEA	Greece	LX.PUP02.054	AS7745G-434G1TMn W7HP64ATGR1 MC BROADWAY_PRO1GBCks_3V3J 2*2G/500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_EL31
AS7745G-434G1TMn	EMEA	Holland	LX.PUN02.073	AS7745G-434G1TMn W7HP64ATNL1 MC MADISON_PRO1GBCks_3V3J 2*2G/500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_NL11
AS7745G-434G1TMn	EMEA	Holland	LX.PUP02.076	AS7745G-434G1TMn W7HP64ATNL1 MC BROADWAY_PRO1GBCks_3V3J 2*2G/500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_NL11
AS7745G-434G1TMn	EMEA	Hungary	LX.PUN02.064	AS7745G-434G1TMn W7HP64ATHU1 MC MADISON_PRO1GBCks_3V3J 2*2G/500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_HU11
AS7745G-434G1TMn	EMEA	Hungary	LX.PUP02.066	AS7745G-434G1TMn W7HP64ATHU1 MC BROADWAY_PRO1GBCks_3V3J 2*2G/500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_HU11
AS7745G-434G1TMn	EMEA	Israel	LX.PUN02.063	AS7745G-434G1TMn W7HP64ATIL1 MC MADISON_PRO1GBCks_3V3J 2*2G/500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_HE11
AS7745G-434G1TMn	EMEA	Israel	LX.PUP02.065	AS7745G-434G1TMn W7HP64ATIL1 MC BROADWAY_PRO1GBCks_3V3J 2*2G/500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_HE11
AS7745G-434G1TMn	EMEA	Italy	LX.PUN02.053	AS7745G-434G1TMn W7HP64ATIT1 MC MADISON_PRO1GBCks_3V3J 2*2G/500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_IT11
AS7745G-434G1TMn	EMEA	Italy	LX.PUP02.059	AS7745G-434G1TMn W7HP64ATIT1 MC BROADWAY_PRO1GBCks_3V3J 2*2G/500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_IT11
AS7745G-434G1TMn	EMEA	Latvia	LX.PUN02.069	AS7745G-434G1TMn W7HP64ATLV1 MC MADISON_PRO1GBCks_3V3J 2*2G/500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_RU22
AS7745G-434G1TMn	EMEA	Latvia	LX.PUN02.070	AS7745G-434G1TMn W7HP64ATLV1 MC MADISON_PRO1GBCks_3V3J 2*2G/500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_LT11
AS7745G-434G1TMn	EMEA	Latvia	LX.PUP02.071	AS7745G-434G1TMn W7HP64ATLV1 MC BROADWAY_PRO1GBCks_3V3J 2*2G/500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_RU22
AS7745G-434G1TMn	EMEA	Latvia	LX.PUP02.072	AS7745G-434G1TMn W7HP64ATLV1 MC BROADWAY_PRO1GBCks_3V3J 2*2G/500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_LT11
AS7745G-434G1TMn	EMEA	Luxembourg	LX.PUN02.074	AS7745G-434G1TMn W7HP64ATLU3 MC MADISON_PRO1GBCks_3V3J 2*2G/500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_IT41
AS7745G-434G1TMn	EMEA	Luxembourg	LX.PUP02.073	AS7745G-434G1TMn W7HP64ATLU3 MC BROADWAY_PRO1GBCks_3V3J 2*2G/500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_IT41
AS7745G-434G1TMn	EMEA	Middle East	LX.PUN02.079	AS7745G-434G1TMn EM W7HP64EMATME6 MC MADISON_PRO1GBCks_3V3J 2*2G/500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_ES61
AS7745G-434G1TMn	EMEA	Middle East	LX.PUN02.080	AS7745G-434G1TMn EM W7HP64EMATME3 MC MADISON_PRO1GBCks_3V3J 2*2G/500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_ES81

Downloaded from www.Manualslib.com manuals search engine

Model	RO	Country	Acer Part No	Description
AS7745G-434G1TMn	EMEA	Middle East	LX.PUN 02.081	AS7745G-434G1TMn EM W7HP64EMATME2 MC MADISON_PRO1GBCks_3V3J 2*2G/ 500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_AR11
AS7745G-434G1TMn	EMEA	Middle East	LX.PUN 02.082	AS7745G-434G1TMn EM W7HP64EMATME4 MC MADISON_PRO1GBCks_3V3J 2*2G/ 500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_ES61
AS7745G-434G1TMn	EMEA	Middle East	LX.PUN 02.085	AS7745G-434G1TMn EM W7HP64EMATME9 MC MADISON_PRO1GBCks_3V3J 2*2G/ 500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_ES81
AS7745G-434G1TMn	EMEA	Middle East	LX.PUN 02.086	AS7745G-434G1TMn EM W7HP64EMATME2 MC MADISON_PRO1GBCks_3V3J 2*2G/ 500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_AR21
AS7745G-434G1TMn	EMEA	Middle East	LX.PUN 02.087	AS7745G-434G1TMn EM W7HP64EMATMEB MC MADISON_PRO1GBCks_3V3J 2*2G/ 500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_ARA1
AS7745G-434G1TMn	EMEA	Middle East	LX.PUN 02.090	AS7745G-434G1TMn EM W7HP64EMATME2 MC MADISON_PRO1GBCks_3V3J 2*2G/ 500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_ES61
AS7745G-434G1TMn	EMEA	Middle East	LX.PUN 02.091	AS7745G-434G1TMn EM W7HP64EMATME4 MC MADISON_PRO1GBCks_3V3J 2*2G/ 500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_RU61
AS7745G-434G1TMn	EMEA	Middle East	LX.PUP 02.001	AS7745G-434G1TMn EM W7HP64EMATME4 MC BROADWAY_PRO1GBCks_3V3J 2*2G/ 500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_ES61
AS7745G-434G1TMn	EMEA	Middle East	LX.PUP 02.004	AS7745G-434G1TMn EM W7HP64EMATME9 MC BROADWAY_PRO1GBCks_3V3J 2*2G/ 500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_ES81
AS7745G-434G1TMn	EMEA	Middle East	LX.PUP 02.006	AS7745G-434G1TMn EM W7HP64EMATME2 MC BROADWAY_PRO1GBCks_3V3J 2*2G/ 500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_AR21
AS7745G-434G1TMn	EMEA	Middle East	LX.PUP 02.007	AS7745G-434G1TMn EM W7HP64EMATMEB MC BROADWAY_PRO1GBCks_3V3J 2*2G/ 500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_ARA1
AS7745G-434G1TMn	EMEA	Middle East	LX.PUP 02.010	AS7745G-434G1TMn EM W7HP64EMATME2 MC BROADWAY_PRO1GBCks_3V3J 2*2G/ 500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_ES61
AS7745G-434G1TMn	EMEA	Middle East	LX.PUP 02.011	AS7745G-434G1TMn EM W7HP64EMATME4 MC BROADWAY_PRO1GBCks_3V3J 2*2G/ 500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_RU61
AS7745G-434G1TMn	EMEA	Middle East	LX.PUP 02.081	AS7745G-434G1TMn EM W7HP64EMATME6 MC BROADWAY_PRO1GBCks_3V3J 2*2G/ 500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_ES61
AS7745G-434G1TMn	EMEA	Middle East	LX.PUP 02.082	AS7745G-434G1TMn EM W7HP64EMATME3 MC BROADWAY_PRO1GBCks_3V3J 2*2G/ 500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_ES81
AS7745G-434G1TMn	EMEA	Middle East	LX.PUP 02.083	AS7745G-434G1TMn EM W7HP64EMATME2 MC BROADWAY_PRO1GBCks_3V3J 2*2G/ 500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_AR11
AS7745G-434G1TMn	EMEA	Poland	LX.PUN 02.077	AS7745G-434G1TMn W7HP64ATPL1 MC MADISON_PRO1GBCks_3V3J 2*2G/ 500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_PL11

Downloaded from www.Manualslib.com manuals search engine

Model	RO	Country	Acer Part No	Description
AS7745G-434G1TMn	EMEA	Poland	LX.PUP02.078	AS7745G-434G1TMn W7HP64ATPL1 MC BROADWAY_PRO1GBCks_3V3J 2*2G/ 500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_PL11
AS7745G-434G1TMn	EMEA	Portugal	LX.PUN02.060	AS7745G-434G1TMn W7HP64ATPT1 MC MADISON_PRO1GBCks_3V3J 2*2G/ 500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_PT11
AS7745G-434G1TMn	EMEA	Portugal	LX.PUP02.063	AS7745G-434G1TMn W7HP64ATPT1 MC BROADWAY_PRO1GBCks_3V3J 2*2G/ 500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_PT11
AS7745G-434G1TMn	EMEA	Serbia/ Macedonia	LX.PUN02.058	AS7745G-434G1TMn W7HP64ATCS1 MC MADISON_PRO1GBCks_3V3J 2*2G/ 500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_SL11
AS7745G-434G1TMn	EMEA	Serbia/ Macedonia	LX.PUP02.060	AS7745G-434G1TMn W7HP64ATCS1 MC BROADWAY_PRO1GBCks_3V3J 2*2G/ 500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_SL11
AS7745G-434G1TMn	EMEA	South Africa	LX.PUN02.078	AS7745G-434G1TMn EM W7HP64EMATZA4 MC MADISON_PRO1GBCks_3V3J 2*2G/ 500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_ES61
AS7745G-434G1TMn	EMEA	South Africa	LX.PUN02.083	AS7745G-434G1TMn EM W7HP64EMATZA1 MC MADISON_PRO1GBCks_3V3J 2*2G/ 500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_ES81
AS7745G-434G1TMn	EMEA	South Africa	LX.PUN02.089	AS7745G-434G1TMn EM W7HP64EMATZA2 MC MADISON_PRO1GBCks_3V3J 2*2G/ 500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_ES61
AS7745G-434G1TMn	EMEA	South Africa	LX.PUP02.002	AS7745G-434G1TMn EM W7HP64EMATZA1 MC BROADWAY_PRO1GBCks_3V3J 2*2G/ 500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_ES81
AS7745G-434G1TMn	EMEA	South Africa	LX.PUP02.005	AS7745G-434G1TMn EM W7HP64EMATZA5 MC BROADWAY_PRO1GBCks_3V3J 2*2G/ 500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_ES61
AS7745G-434G1TMn	EMEA	South Africa	LX.PUP02.009	AS7745G-434G1TMn EM W7HP64EMATZA2 MC BROADWAY_PRO1GBCks_3V3J 2*2G/ 500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_ES61
AS7745G-434G1TMn	EMEA	South Africa	LX.PUP02.080	AS7745G-434G1TMn EM W7HP64EMATZA4 MC BROADWAY_PRO1GBCks_3V3J 2*2G/ 500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_ES61
AS7745G-434G1TMn	EMEA	Spain	LX.PUN02.052	AS7745G-434G1TMn W7HP64ATES1 MC MADISON_PRO1GBCks_3V3J 2*2G/ 500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_ES51
AS7745G-434G1TMn	EMEA	Spain	LX.PUP02.058	AS7745G-434G1TMn W7HP64ATES1 MC BROADWAY_PRO1GBCks_3V3J 2*2G/ 500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_ES51
AS7745G-434G1TMn	EMEA	Switzerland	LX.PUN02.071	AS7745G-434G1TMn W7HP64ATCH1 MC MADISON_PRO1GBCks_3V3J 2*2G/ 500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_IT41
AS7745G-434G1TMn	EMEA	Switzerland	LX.PUP02.074	AS7745G-434G1TMn W7HP64ATCH1 MC BROADWAY_PRO1GBCks_3V3J 2*2G/ 500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_IT41
AS7745G-434G1TMn	EMEA	Turkey	LX.PUN02.088	AS7745G-434G1TMn EM W7HP64EMATTR1 MC MADISON_PRO1GBCks_3V3J 2*2G/ 500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_TR31

Downloaded from www.Manualslib.com manuals search engine

Model	RO	Country	Acer Part No	Description
AS7745G-434G1TMn	EMEA	Turkey	LX.PUP02.008	AS7745G-434G1TMn EM W7HP64EMATTR1 MC BROADWAY_PRO1GBCks_3V3J 2*2G/500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_TR31
AS7745G-434G1TMn	EMEA	UK	LX.PUN02.066	AS7745G-434G1TMn W7HP64ATGB1 MC MADISON_PRO1GBCks_3V3J 2*2G/500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_EN11
AS7745G-434G1TMn	EMEA	UK	LX.PUP02.070	AS7745G-434G1TMn W7HP64ATGB1 MC BROADWAY_PRO1GBCks_3V3J 2*2G/500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_EN11
AS7745G-434G1TMn	EMEA	Ukraine	LX.PUN02.093	AS7745G-434G1TMn W7HP64RUATUK1 MC MADISON_PRO1GBCks_3V3J 2*2G/500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_RU61
AS7745G-434G1TMn	EMEA	Ukraine	LX.PUP02.013	AS7745G-434G1TMn W7HP64RUATUK1 MC BROADWAY_PRO1GBCks_3V3J 2*2G/500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_RU61
AS7745G-434G1TMi	EMEA	Russia	LX.PUN02.092	AS7745G-434G1TMi W7HP64RUATRU1 MC MADISON_PRO1GBCks_3V3J 2*2G/500_L+500_L/6L2.2/5R/CB_bg_1.3C_GEk_RU11
AS7745G-434G1TMi	EMEA	Russia	LX.PUP02.012	AS7745G-434G1TMi W7HP64RUATRU1 MC BROADWAY_PRO1GBCks_3V3J 2*2G/500_L+500_L/6L2.2/5R/CB_bg_1.3C_GEk_RU11
AS7745G-434G1.28TMn	EMEA	Belgium	LX.PUN02.199	AS7745G-434G1.28TMn W7HP64ATBE1 MC MADISON_PRO1GBCks_3V3J 2*2G/640+640/6L2.2/5R/CB_bgn_1.3C_GEk_NL11
AS7745G-434G1.28TMn	EMEA	Holland	LX.PUN02.198	AS7745G-434G1.28TMn W7HP64ATNL1 MC MADISON_PRO1GBCks_3V3J 2*2G/640+640/6L2.2/5R/CB_bgn_1.3C_GEk_NL11
AS7745G-434G1.28TMn	EMEA	Luxembourg	LX.PUN02.197	AS7745G-434G1.28TMn W7HP64ATLU3 MC MADISON_PRO1GBCks_3V3J 2*2G/640+640/6L2.2/5R/CB_bgn_1.3C_GEk_IT41
AS7745G-434G1.28TMn	EMEA	Spain	LX.PUN02.099	AS7745G-434G1.28TMn W7HP64ATES1 MC MADISON_PRO1GBCks_3V3J 2*2G/640+640/6L2.2/5R/CB_bgn_1.3C_GEk_ES51
AS7745G-433G32Mn	EMEA	Turkey	LX.PUN01.002	AS7745G-433G32Mn EM W7HB64EMATTR1 MC MADISON_PRO1GBCks_3V3J 2G+1G/320/BT/6L2.2/5R/CB_bgn_1.3C_GEk_TR31
AS7745G-336G1TMn	EMEA	Denmark	LX.PUP02.085	AS7745G-336G1TMn W7HP64ATDK2 MC BROADWAY_PRO1GBCks_3V3J 2G+4G/500_L+500_L/9L3.0/5R/CB_bgn_1.3C_GEk_ENS1
AS7745G-334G50Mn	EMEA	Turkey	LX.PUK02.003	AS7745G-334G50Mn EM W7HP64EMATTR1 MC PARK_XT512Cks_3V3J 2*2G/500_L/6L2.2/5R/CB_bgn_1.3C_GEk_TR31
AS7745G-334G1TMn	EMEA	France	LX.PUN02.095	AS7745G-334G1TMn W7HP64ATFR1 MC MADISON_PRO1GBCks_3V3J 2*2G/500_L+500_L/6L2.2/5R/CB_bgn_1.3C_GEk_FR21
AS7745G-333G48Mn	EMEA	Turkey	LX.PUK01.002	AS7745G-333G48Mn EM W7HB64EMATTR1 MC PARK_XT512Cks_3V3J 2G+1G/160+320/BT/6L2.2/5R/CB_bgn_1.3C_GEk_TR31
AS7745G-333G32Mn	EMEA	Turkey	LX.PUK01.003	AS7745G-333G32Mn EM W7HB64EMATTR1 MC PARK_XT512Cks_3V3J 2G+1G/320/6L2.2/5R/CB_bgn_1.3C_GEk_TR31

Downloaded from www.Manualslib.com manuals search engine

Model	RO	Country	Acer Part No	Description
AS7745G-332G32Mn	WW	WW	S2.PUK02.003	AS7745G-332G32Mn W7HP64AWW1 MC PARK_XT512Cks_3V3J 2*1G/160+160/BT/6L2.2/5R/CB_bgn_1.3C_GEk_ES62
AS7745G-332G32Mn	WW	WW	S2.PUK02.003	AS7745G-332G32Mn W7HP64AWW1 MC PARK_XT512Cks_3V3J 2*1G/160+160/BT/6L2.2/5R/CB_bgn_1.3C_GEk_ES62
AS7745G-332G16Mn	WW	GCTWN	S2.PUK02.001	AS7745G-332G16Mn W7HP64AWW1 MC PARK_XT512Cks_3V3J 1*2G/160/6L2.2/5R/CB_bgn_1.3C_GEk_ES61
AS7745G-332G16Mn	WW	GCTWN	S2.PUK02.001	AS7745G-332G16Mn W7HP64AWW1 MC PARK_XT512Cks_3V3J 1*2G/160/6L2.2/5R/CB_bgn_1.3C_GEk_ES61
AS7745G-332G16Mn	EMEA	South Africa	LX.PUK02.001	AS7745G-332G16Mn EM W7HP64EMATZA2 MC PARK_XT512Cks_3V3J 1*2G/160/6L2.2/5R/CB_bgn_1.3C_GEk_ES61
AS7745G-332G16Mn	EMEA	South Africa	LX.PUN02.001	AS7745G-332G16Mn EM W7HP64EMATZA2 MC MADISON_PRO1GBCks_3V3J 1*2G/160/6L2.2/5R/CB_bgn_1.3C_GEk_ES61
AS7745G-332G16Mn	WW	WW	S2.PUK02.002	AS7745G-332G16Mn W7HP64AWW1 MC PARK_XT512Cks_3V3J 1*2G/160/6L2.2/5R/CB_bgn_1.3C_GEk_ES62
AS7745G-332G16Mn	WW	WW	S2.PUK02.002	AS7745G-332G16Mn W7HP64AWW1 MC PARK_XT512Cks_3V3J 1*2G/160/6L2.2/5R/CB_bgn_1.3C_GEk_ES62

Model	Country	Acer Part No	BOM Name	CPU
AS7745G-728G75Bn	WW	S2.PUM02.002	AS7745G_BROADWAY_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-728G75Bn	WW	S2.PUM02.002	AS7745G_BROADWAY_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-728G64Bn	Germany	LX.PUL02.143	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-728G57Mn	WW	S2.PUL02.002	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-728G57Mn	WW	S2.PUL02.002	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-728G50Bn	USA	LX.PUL02.144	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-728G50Bn	USA	LX.PUL02.145	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-728G1TWn	France	LX.PUM02.003	AS7745G_BROADWAY_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-728G1TMn	Spain	LX.PUL02.091	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-728G1TBn	France	LX.PUM02.004	AS7745G_BROADWAY_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-728G1TBn	Switzerland	LX.PUM02.005	AS7745G_BROADWAY_PRO1GBCksQ_3D4V3J	Ci7720QM

Downloaded from www.Manualslib.com manuals search engine

Model	Country	Acer Part No	BOM Name	CPU
AS7745G-728G1TBi	Russia	LX.PUM02.053	AS7745G_BROADWAY_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-728G1.28TWn	Germany	LX.PUM02.055	AS7745G_BROADWAY_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-728G1.28TWn	Japan	LX.PUM02.064	AS7745G_BROADWAY_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-728G1.28TBn	Algeria	LX.PUL02.078	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-728G1.28TBn	Austria	LX.PUL02.049	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-728G1.28TBn	Baltic	LX.PUL02.050	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-728G1.28TBn	Baltic	LX.PUL02.063	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-728G1.28TBn	Baltic	LX.PUL02.072	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-728G1.28TBn	Belgium	LX.PUL02.074	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-728G1.28TBn	Cyprus	LX.PUL02.065	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-728G1.28TBn	Czech	LX.PUL02.066	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-728G1.28TBn	Denmark	LX.PUL02.062	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-728G1.28TBn	Eastern Europe	LX.PUL02.047	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-728G1.28TBn	Eastern Europe	LX.PUL02.052	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-728G1.28TBn	Eastern Europe	LX.PUL02.057	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-728G1.28TBn	Eastern Europe	LX.PUL02.058	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-728G1.28TBn	Eastern Europe	LX.PUL02.061	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM

Downloaded from www.Manualslib.com manuals search engine

Model	Country	Acer Part No	BOM Name	CPU
AS7745G-728G1.28TBn	France	LX.PUL02.046	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-728G1.28TBn	Germany	LX.PUL02.080	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-728G1.28TBn	Greece	LX.PUL02.048	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-728G1.28TBn	Holland	LX.PUL02.075	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-728G1.28TBn	Hungary	LX.PUL02.054	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-728G1.28TBn	Israel	LX.PUL02.053	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-728G1.28TBn	Italy	LX.PUL02.060	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-728G1.28TBn	Latvia	LX.PUL02.055	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-728G1.28TBn	Latvia	LX.PUL02.056	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-728G1.28TBn	Luxembourg	LX.PUL02.076	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-728G1.28TBn	Middle East	LX.PUL02.067	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-728G1.28TBn	Middle East	LX.PUL02.068	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-728G1.28TBn	Middle East	LX.PUL02.070	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-728G1.28TBn	Middle East	LX.PUL02.077	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-728G1.28TBn	Middle East	LX.PUL02.079	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-728G1.28TBn	Middle East	LX.PUL02.083	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-728G1.28TBn	Middle East	LX.PUL02.084	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM

Downloaded from www.Manualslib.com manuals search engine

Model	Country	Acer Part No	BOM Name	CPU
AS7745G-728G1.28TBn	Middle East	LX.PUL02.086	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-728G1.28TBn	Middle East	LX.PUL02.087	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-728G1.28TBn	Poland	LX.PUL02.081	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-728G1.28TBn	Portugal	LX.PUL02.064	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-728G1.28TBn	Serbia/ Macedonia	LX.PUL02.051	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-728G1.28TBn	South Africa	LX.PUL02.069	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-728G1.28TBn	South Africa	LX.PUL02.082	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-728G1.28TBn	South Africa	LX.PUL02.088	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-728G1.28TBn	Spain	LX.PUL02.059	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-728G1.28TBn	Switzerland	LX.PUL02.073	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-728G1.28TBn	Turkey	LX.PUL02.085	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-728G1.28TBn	UK	LX.PUL02.071	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-728G1.28TBn	Ukraine	LX.PUL02.090	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-728G1.28TBi	Russia	LX.PUL02.089	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-726G64Mn	Czech	LX.PUM02.062	AS7745G_BROADWAY_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-726G1TMn	Belgium	LX.PUL02.139	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-726G1TMn	Belgium	LX.PUM02.059	AS7745G_BROADWAY_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-726G1TMn	France	LX.PUM02.002	AS7745G_BROADWAY_PRO1GBCksQ_3D4V3J	Ci7720QM

Downloaded from www.Manualslib.com manuals search engine

Model	Country	Acer Part No	BOM Name	CPU
AS7745G-726G1TMn	Holland	LX.PUL02.141	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-726G1TMn	Holland	LX.PUM02.061	AS7745G_BROADWAY_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-726G1TMn	Luxembourg	LX.PUL02.140	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-726G1TMn	Luxembourg	LX.PUM02.060	AS7745G_BROADWAY_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-726G1TBn	UK	LX.PUM02.063	AS7745G_BROADWAY_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G64Mn	Algeria	LX.PUL02.035	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G64Mn	Austria	LX.PUL02.004	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G64Mn	Baltic	LX.PUL02.005	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G64Mn	Baltic	LX.PUL02.008	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G64Mn	Baltic	LX.PUL02.023	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G64Mn	Belgium	LX.PUL02.025	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G64Mn	Cyprus	LX.PUL02.010	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G64Mn	Czech	LX.PUL02.011	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G64Mn	Denmark	LX.PUL02.007	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G64Mn	Eastern Europe	LX.PUL02.002	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G64Mn	Eastern Europe	LX.PUL02.016	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G64Mn	Eastern Europe	LX.PUL02.017	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G64Mn	Eastern Europe	LX.PUL02.020	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G64Mn	Eastern Europe	LX.PUL02.021	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G64Mn	France	LX.PUL02.001	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G64Mn	Germany	LX.PUL02.028	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G64Mn	Greece	LX.PUL02.003	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G64Mn	Holland	LX.PUL02.026	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G64Mn	Hungary	LX.PUL02.013	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM

Downloaded from www.Manualslib.com manuals search engine

Model	Country	Acer Part No	BOM Name	CPU
AS7745G-724G64Mn	Israel	LX.PUL02.012	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G64Mn	Italy	LX.PUL02.019	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G64Mn	Latvia	LX.PUL02.014	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G64Mn	Latvia	LX.PUL02.015	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G64Mn	Luxembourg	LX.PUL02.027	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G64Mn	Middle East	LX.PUL02.030	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G64Mn	Middle East	LX.PUL02.031	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G64Mn	Middle East	LX.PUL02.033	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G64Mn	Middle East	LX.PUL02.034	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G64Mn	Middle East	LX.PUL02.036	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G64Mn	Middle East	LX.PUL02.038	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G64Mn	Middle East	LX.PUL02.039	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G64Mn	Middle East	LX.PUL02.041	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G64Mn	Middle East	LX.PUL02.042	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G64Mn	Poland	LX.PUL02.029	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G64Mn	Portugal	LX.PUL02.009	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G64Mn	Serbia/ Macedonia	LX.PUL02.006	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G64Mn	South Africa	LX.PUL02.032	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G64Mn	South Africa	LX.PUL02.037	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G64Mn	South Africa	LX.PUL02.043	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G64Mn	Spain	LX.PUL02.018	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G64Mn	Switzerland	LX.PUL02.024	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G64Mn	Turkey	LX.PUL02.040	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G64Mn	UK	LX.PUL02.022	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM

Downloaded from www.Manualslib.com manuals search engine

Model	Country	Acer Part No	BOM Name	CPU
AS7745G-724G64Mn	Ukraine	LX.PUL02.045	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G64Mi	Russia	LX.PUL02.044	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G64Bn	Germany	LX.PUM02.006	AS7745G_BROADWAY_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G64Bn	Germany	LX.PUM02.054	AS7745G_BROADWAY_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G50Mn	Algeria	LX.PUL02.128	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G50Mn	Austria	LX.PUL02.094	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G50Mn	Baltic	LX.PUL02.103	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G50Mn	Baltic	LX.PUL02.106	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G50Mn	Baltic	LX.PUL02.119	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G50Mn	Belgium	LX.PUL02.117	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G50Mn	Cyprus	LX.PUL02.104	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G50Mn	Czech	LX.PUL02.109	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G50Mn	Denmark	LX.PUL02.098	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G50Mn	Eastern Europe	LX.PUL02.092	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G50Mn	Eastern Europe	LX.PUL02.096	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G50Mn	Eastern Europe	LX.PUL02.097	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G50Mn	Eastern Europe	LX.PUL02.110	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G50Mn	Eastern Europe	LX.PUL02.111	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G50Mn	France	LX.PUL02.093	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G50Mn	France	LX.PUM02.001	AS7745G_BROADWAY_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G50Mn	Germany	LX.PUL02.121	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G50Mn	Greece	LX.PUL02.095	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G50Mn	Holland	LX.PUL02.118	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G50Mn	Hungary	LX.PUL02.108	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM

Downloaded from www.Manualslib.com manuals search engine

Model	Country	Acer Part No	BOM Name	CPU
AS7745G-724G50Mn	Israel	LX.PUL02.107	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G50Mn	Italy	LX.PUL02.101	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G50Mn	Latvia	LX.PUL02.113	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G50Mn	Latvia	LX.PUL02.114	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G50Mn	Luxembourg	LX.PUL02.115	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G50Mn	Middle East	LX.PUL02.123	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G50Mn	Middle East	LX.PUL02.124	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G50Mn	Middle East	LX.PUL02.125	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G50Mn	Middle East	LX.PUL02.126	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G50Mn	Middle East	LX.PUL02.129	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G50Mn	Middle East	LX.PUL02.131	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G50Mn	Middle East	LX.PUL02.132	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G50Mn	Middle East	LX.PUL02.135	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G50Mn	Middle East	LX.PUL02.136	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G50Mn	Poland	LX.PUL02.120	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G50Mn	Portugal	LX.PUL02.105	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G50Mn	Serbia/ Macedonia	LX.PUL02.102	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G50Mn	South Africa	LX.PUL02.122	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G50Mn	South Africa	LX.PUL02.127	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G50Mn	South Africa	LX.PUL02.130	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G50Mn	South Africa	LX.PUL02.134	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G50Mn	Spain	LX.PUL02.099	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G50Mn	Switzerland	LX.PUL02.116	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G50Mn	Turkey	LX.PUL02.133	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM

Downloaded from www.Manualslib.com manuals search engine

Model	Country	Acer Part No	BOM Name	CPU
AS7745G-724G50Mn	UK	LX.PUL02.112	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G50Mn	Ukraine	LX.PUL02.138	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G50Mn	USA	LX.PUL02.146	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G50Mi	Russia	LX.PUL02.137	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G50Bn	Germany	LX.PUL02.142	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G48Bn	WW	S2.PUM02.003	AS7745G_BROADWAY_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G48Bn	WW	S2.PUM02.003	AS7745G_BROADWAY_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G1TBn	Algeria	LX.PUM02.044	AS7745G_BROADWAY_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G1TBn	Austria	LX.PUM02.009	AS7745G_BROADWAY_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G1TBn	Baltic	LX.PUM02.017	AS7745G_BROADWAY_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G1TBn	Baltic	LX.PUM02.022	AS7745G_BROADWAY_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G1TBn	Baltic	LX.PUM02.035	AS7745G_BROADWAY_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G1TBn	Belgium	LX.PUM02.033	AS7745G_BROADWAY_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G1TBn	Cyprus	LX.PUM02.020	AS7745G_BROADWAY_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G1TBn	Czech	LX.PUM02.025	AS7745G_BROADWAY_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G1TBn	Denmark	LX.PUM02.013	AS7745G_BROADWAY_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G1TBn	Eastern Europe	LX.PUM02.007	AS7745G_BROADWAY_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G1TBn	Eastern Europe	LX.PUM02.011	AS7745G_BROADWAY_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G1TBn	Eastern Europe	LX.PUM02.012	AS7745G_BROADWAY_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G1TBn	Eastern Europe	LX.PUM02.026	AS7745G_BROADWAY_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G1TBn	Eastern Europe	LX.PUM02.027	AS7745G_BROADWAY_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G1TBn	France	LX.PUM02.008	AS7745G_BROADWAY_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G1TBn	Germany	LX.PUM02.037	AS7745G_BROADWAY_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G1TBn	Greece	LX.PUM02.010	AS7745G_BROADWAY_PRO1GBCksQ_3D4V3J	Ci7720QM

Downloaded from www.Manualslib.com manuals search engine

Model	Country	Acer Part No	BOM Name	CPU
AS7745G-724G1TBn	Holland	LX.PUM02.034	AS7745G_BROADWAY_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G1TBn	Hungary	LX.PUM02.024	AS7745G_BROADWAY_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G1TBn	Israel	LX.PUM02.023	AS7745G_BROADWAY_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G1TBn	Italy	LX.PUM02.015	AS7745G_BROADWAY_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G1TBn	Latvia	LX.PUM02.029	AS7745G_BROADWAY_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G1TBn	Latvia	LX.PUM02.030	AS7745G_BROADWAY_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G1TBn	Luxembourg	LX.PUM02.031	AS7745G_BROADWAY_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G1TBn	Middle East	LX.PUM02.039	AS7745G_BROADWAY_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G1TBn	Middle East	LX.PUM02.040	AS7745G_BROADWAY_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G1TBn	Middle East	LX.PUM02.041	AS7745G_BROADWAY_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G1TBn	Middle East	LX.PUM02.042	AS7745G_BROADWAY_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G1TBn	Middle East	LX.PUM02.045	AS7745G_BROADWAY_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G1TBn	Middle East	LX.PUM02.047	AS7745G_BROADWAY_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G1TBn	Middle East	LX.PUM02.048	AS7745G_BROADWAY_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G1TBn	Middle East	LX.PUM02.051	AS7745G_BROADWAY_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G1TBn	Middle East	LX.PUM02.052	AS7745G_BROADWAY_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G1TBn	Poland	LX.PUM02.036	AS7745G_BROADWAY_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G1TBn	Portugal	LX.PUM02.021	AS7745G_BROADWAY_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G1TBn	Serbia/ Macedonia	LX.PUM02.016	AS7745G_BROADWAY_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G1TBn	South Africa	LX.PUM02.038	AS7745G_BROADWAY_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G1TBn	South Africa	LX.PUM02.043	AS7745G_BROADWAY_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G1TBn	South Africa	LX.PUM02.046	AS7745G_BROADWAY_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G1TBn	South Africa	LX.PUM02.050	AS7745G_BROADWAY_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G1TBn	Spain	LX.PUM02.014	AS7745G_BROADWAY_PRO1GBCksQ_3D4V3J	Ci7720QM

Downloaded from www.Manualslib.com manuals search engine

Model	Country	Acer Part No	BOM Name	CPU
AS7745G-724G1TBn	Switzerland	LX.PUM02.032	AS7745G_BROADWAY_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G1TBn	Turkey	LX.PUM02.049	AS7745G_BROADWAY_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G1TBn	UK	LX.PUM02.028	AS7745G_BROADWAY_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G1TBn	Ukraine	LX.PUM02.019	AS7745G_BROADWAY_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-724G1TBi	Russia	LX.PUM02.018	AS7745G_BROADWAY_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-722G75Bn	GCTWN	S2.PUM02.001	AS7745G_BROADWAY_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-722G75Bn	GCTWN	S2.PUM02.001	AS7745G_BROADWAY_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-722G57Mn	GCTWN	S2.PUL02.001	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-722G57Mn	GCTWN	S2.PUL02.001	AS7745G_MADISON_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-72161.28TBn	Belgium	LX.PUM02.058	AS7745G_BROADWAY_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-72161.28TBn	Holland	LX.PUM02.057	AS7745G_BROADWAY_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-72161.28TBn	Luxembourg	LX.PUM02.056	AS7745G_BROADWAY_PRO1GBCksQ_3D4V3J	Ci7720QM
AS7745G-624G50Mn	France	LX.PUN02.101	AS7745G_MADISON_PRO1GBCks_3V3J	Ci7620M
AS7745G-624G16Mn	WW	S2.PUP02.001	AS7745G_BROADWAY_PRO1GBCks_3V3J	Ci7620M
AS7745G-624G16Mn	WW	S2.PUP02.001	AS7745G_BROADWAY_PRO1GBCks_3V3J	Ci7620M
AS7745G-542G16Mn	GCTWN	S2.PUN02.001	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5540M
AS7745G-542G16Mn	GCTWN	S2.PUN02.001	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5540M
AS7745G-542G16Mn	WW	S2.PUN02.002	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5540M
AS7745G-542G16Mn	WW	S2.PUN02.002	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5540M
AS7745G-526G64Bn	Germany	LX.PUN02.208	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5520M
AS7745G-524G64Bn	Germany	LX.PUN02.209	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5520M
AS7745G-524G50Mn	Turkey	LX.PUN02.217	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5520M
AS7745G-523G32Mn	Turkey	LX.PUN01.003	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5520M

Downloaded from www.Manualslib.com manuals search engine

Model	Country	Acer Part No	BOM Name	CPU
AS7745G-438G64Mn	Spain	LX.PUN02.096	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-438G64Mn	Switzerland	LX.PUN02.214	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-438G50Mn	Switzerland	LX.PUN02.215	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-438G1TBn	Switzerland	LX.PUN02.212	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-436G64Mn	Spain	LX.PUN02.097	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-436G64Bn	Germany	LX.PUN02.211	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-436G1.28TBn	Belgium	LX.PUN02.206	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-436G1.28TBn	Holland	LX.PUN02.205	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-436G1.28TBn	Luxembourg	LX.PUN02.204	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G82Mn	Belgium	LX.PUN02.203	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G82Mn	Holland	LX.PUN02.202	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G82Mn	Luxembourg	LX.PUN02.201	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G82Bn	Algeria	LX.PUN02.185	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G82Bn	Austria	LX.PUN02.150	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G82Bn	Baltic	LX.PUN02.162	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G82Bn	Baltic	LX.PUN02.165	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G82Bn	Baltic	LX.PUN02.176	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G82Bn	Belgium	LX.PUN02.174	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G82Bn	Cyprus	LX.PUN02.163	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G82Bn	Czech	LX.PUN02.168	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G82Bn	Denmark	LX.PUN02.158	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G82Bn	Eastern Europe	LX.PUN02.148	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G82Bn	Eastern Europe	LX.PUN02.153	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M

Downloaded from www.Manualslib.com manuals search engine

Model	Country	Acer Part No	BOM Name	CPU
AS7745G-434G82Bn	Eastern Europe	LX.PUN02.154	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G82Bn	Eastern Europe	LX.PUN02.156	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G82Bn	Eastern Europe	LX.PUN02.157	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G82Bn	France	LX.PUN02.149	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G82Bn	Germany	LX.PUN02.178	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G82Bn	Greece	LX.PUN02.155	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G82Bn	Holland	LX.PUN02.175	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G82Bn	Hungary	LX.PUN02.167	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G82Bn	Israel	LX.PUN02.166	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G82Bn	Italy	LX.PUN02.160	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G82Bn	Latvia	LX.PUN02.170	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G82Bn	Latvia	LX.PUN02.171	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G82Bn	Luxembourg	LX.PUN02.172	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G82Bn	Middle East	LX.PUN02.180	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G82Bn	Middle East	LX.PUN02.181	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G82Bn	Middle East	LX.PUN02.182	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G82Bn	Middle East	LX.PUN02.183	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G82Bn	Middle East	LX.PUN02.186	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G82Bn	Middle East	LX.PUN02.188	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G82Bn	Middle East	LX.PUN02.189	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G82Bn	Middle East	LX.PUN02.192	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G82Bn	Middle East	LX.PUN02.193	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G82Bn	Poland	LX.PUN02.177	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G82Bn	Portugal	LX.PUN02.164	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M

Downloaded from www.Manualslib.com manuals search engine

Model	Country	Acer Part No	BOM Name	CPU
AS7745G-434G82Bn	Serbia/ Macedonia	LX.PUN 02.161	AS7745G_MADISON_PRO1GBCks_3V 3J	Ci5430M
AS7745G-434G82Bn	South Africa	LX.PUN 02.179	AS7745G_MADISON_PRO1GBCks_3V 3J	Ci5430M
AS7745G-434G82Bn	South Africa	LX.PUN 02.184	AS7745G_MADISON_PRO1GBCks_3V 3J	Ci5430M
AS7745G-434G82Bn	South Africa	LX.PUN 02.187	AS7745G_MADISON_PRO1GBCks_3V 3J	Ci5430M
AS7745G-434G82Bn	South Africa	LX.PUN 02.191	AS7745G_MADISON_PRO1GBCks_3V 3J	Ci5430M
AS7745G-434G82Bn	Spain	LX.PUN 02.159	AS7745G_MADISON_PRO1GBCks_3V 3J	Ci5430M
AS7745G-434G82Bn	Switzerland	LX.PUN 02.173	AS7745G_MADISON_PRO1GBCks_3V 3J	Ci5430M
AS7745G-434G82Bn	Turkey	LX.PUN 02.190	AS7745G_MADISON_PRO1GBCks_3V 3J	Ci5430M
AS7745G-434G82Bn	UK	LX.PUN 02.169	AS7745G_MADISON_PRO1GBCks_3V 3J	Ci5430M
AS7745G-434G82Bn	Ukraine	LX.PUN 02.152	AS7745G_MADISON_PRO1GBCks_3V 3J	Ci5430M
AS7745G-434G82Bi	Russia	LX.PUN 02.151	AS7745G_MADISON_PRO1GBCks_3V 3J	Ci5430M
AS7745G-434G64Mn	Algeria	LX.PUN 02.137	AS7745G_MADISON_PRO1GBCks_3V 3J	Ci5430M
AS7745G-434G64Mn	Austria	LX.PUN 02.104	AS7745G_MADISON_PRO1GBCks_3V 3J	Ci5430M
AS7745G-434G64Mn	Baltic	LX.PUN 02.112	AS7745G_MADISON_PRO1GBCks_3V 3J	Ci5430M
AS7745G-434G64Mn	Baltic	LX.PUN 02.115	AS7745G_MADISON_PRO1GBCks_3V 3J	Ci5430M
AS7745G-434G64Mn	Baltic	LX.PUN 02.128	AS7745G_MADISON_PRO1GBCks_3V 3J	Ci5430M
AS7745G-434G64Mn	Belgium	LX.PUN 02.126	AS7745G_MADISON_PRO1GBCks_3V 3J	Ci5430M
AS7745G-434G64Mn	Cyprus	LX.PUN 02.113	AS7745G_MADISON_PRO1GBCks_3V 3J	Ci5430M
AS7745G-434G64Mn	Czech	LX.PUK 02.002	AS7745G_PARK_XT512Cks_3V3J	Ci5430M
AS7745G-434G64Mn	Czech	LX.PUN 02.118	AS7745G_MADISON_PRO1GBCks_3V 3J	Ci5430M
AS7745G-434G64Mn	Czech	LX.PUN 02.213	AS7745G_MADISON_PRO1GBCks_3V 3J	Ci5430M
AS7745G-434G64Mn	Czech	LX.PUP 02.086	AS7745G_BROADWAY_PRO1GBCks_3 V3J	Ci5430M
AS7745G-434G64Mn	Denmark	LX.PUN 02.108	AS7745G_MADISON_PRO1GBCks_3V 3J	Ci5430M
AS7745G-434G64Mn	Eastern Europe	LX.PUN 02.102	AS7745G_MADISON_PRO1GBCks_3V 3J	Ci5430M

Downloaded from www.Manualslib.com manuals search engine

Model	Country	Acer Part No	BOM Name	CPU
AS7745G-434G64Mn	Eastern Europe	LX.PUN02.106	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G64Mn	Eastern Europe	LX.PUN02.107	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G64Mn	Eastern Europe	LX.PUN02.119	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G64Mn	Eastern Europe	LX.PUN02.120	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G64Mn	France	LX.PUN02.103	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G64Mn	Germany	LX.PUN02.130	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G64Mn	Greece	LX.PUN02.105	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G64Mn	Holland	LX.PUN02.127	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G64Mn	Hungary	LX.PUN02.117	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G64Mn	Israel	LX.PUN02.116	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G64Mn	Italy	LX.PUN02.110	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G64Mn	Latvia	LX.PUN02.122	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G64Mn	Latvia	LX.PUN02.123	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G64Mn	Luxembourg	LX.PUN02.124	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G64Mn	Middle East	LX.PUN02.132	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G64Mn	Middle East	LX.PUN02.133	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G64Mn	Middle East	LX.PUN02.134	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G64Mn	Middle East	LX.PUN02.135	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G64Mn	Middle East	LX.PUN02.138	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G64Mn	Middle East	LX.PUN02.140	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G64Mn	Middle East	LX.PUN02.141	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G64Mn	Middle East	LX.PUN02.144	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G64Mn	Middle East	LX.PUN02.145	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G64Mn	Poland	LX.PUN02.129	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M

Downloaded from www.Manualslib.com manuals search engine

Model	Country	Acer Part No	BOM Name	CPU
AS7745G-434G64Mn	Portugal	LX.PUN02.114	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G64Mn	Serbia/ Macedonia	LX.PUN02.111	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G64Mn	South Africa	LX.PUN02.131	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G64Mn	South Africa	LX.PUN02.136	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G64Mn	South Africa	LX.PUN02.139	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G64Mn	South Africa	LX.PUN02.143	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G64Mn	South Africa	LX.PUN02.196	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G64Mn	Spain	LX.PUN02.109	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G64Mn	Switzerland	LX.PUN02.125	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G64Mn	Turkey	LX.PUN02.142	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G64Mn	UK	LX.PUN02.121	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G64Mn	Ukraine	LX.PUN02.147	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G64Mi	Russia	LX.PUN02.146	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G64Mi	Russia	LX.PUN02.194	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G64Bn	Germany	LX.PUN02.195	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G64Bn	Germany	LX.PUN02.207	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G57Mn	WW	S2.PUN02.003	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G57Mn	WW	S2.PUN02.003	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G50Mn	Spain	LX.PUN02.098	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G50Mn	Turkey	LX.PUN02.216	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G50Mn	UK	LX.PUK02.005	AS7745G_PARK_XT512Cks_3V3J	Ci5430M
AS7745G-434G50Bn	Germany	LX.PUN02.210	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G50Bn	Germany	LX.PUP02.084	AS7745G_BROADWAY_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G32Mn	Algeria	LX.PUN02.039	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M

Downloaded from www.Manualslib.com manuals search engine

Model	Country	Acer Part No	BOM Name	CPU
AS7745G-434G32Mn	Austria	LX.PUN02.018	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G32Mn	Baltic	LX.PUN02.013	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G32Mn	Baltic	LX.PUN02.016	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G32Mn	Baltic	LX.PUN02.030	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G32Mn	Belgium	LX.PUN02.027	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G32Mn	Cyprus	LX.PUN02.015	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G32Mn	Czech	LX.PUN02.020	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G32Mn	Denmark	LX.PUN02.011	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G32Mn	Denmark	LX.PUN02.094	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G32Mn	Eastern Europe	LX.PUN02.005	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G32Mn	Eastern Europe	LX.PUN02.009	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G32Mn	Eastern Europe	LX.PUN02.010	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G32Mn	Eastern Europe	LX.PUN02.022	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G32Mn	Eastern Europe	LX.PUN02.023	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G32Mn	France	LX.PUN02.004	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G32Mn	Germany	LX.PUN02.031	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G32Mn	Greece	LX.PUN02.006	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G32Mn	Holland	LX.PUN02.028	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G32Mn	Hungary	LX.PUN02.019	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G32Mn	Israel	LX.PUN02.017	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G32Mn	Italy	LX.PUN02.008	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G32Mn	Latvia	LX.PUN02.024	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G32Mn	Latvia	LX.PUN02.025	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G32Mn	Luxembourg	LX.PUN02.029	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M

Downloaded from www.Manualslib.com manuals search engine

Model	Country	Acer Part No	BOM Name	CPU
AS7745G-434G32Mn	Middle East	LX.PUN02.034	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G32Mn	Middle East	LX.PUN02.035	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G32Mn	Middle East	LX.PUN02.036	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G32Mn	Middle East	LX.PUN02.037	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G32Mn	Middle East	LX.PUN02.040	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G32Mn	Middle East	LX.PUN02.041	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G32Mn	Middle East	LX.PUN02.042	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G32Mn	Middle East	LX.PUN02.045	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G32Mn	Middle East	LX.PUN02.055	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G32Mn	Poland	LX.PUN02.032	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G32Mn	Portugal	LX.PUN02.014	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G32Mn	Serbia/ Macedonia	LX.PUN02.012	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G32Mn	South Africa	LX.PUN02.033	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G32Mn	South Africa	LX.PUN02.038	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G32Mn	South Africa	LX.PUN02.044	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G32Mn	Spain	LX.PUN02.007	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G32Mn	Switzerland	LX.PUN02.026	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G32Mn	Turkey	LX.PUN02.043	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G32Mn	UK	LX.PUN02.021	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G32Mn	Ukraine	LX.PUN02.047	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G32Mi	Russia	LX.PUK01.001	AS7745G_PARK_XT512Cks_3V3J	Ci5430M
AS7745G-434G32Mi	Russia	LX.PUN01.001	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G32Mi	Russia	LX.PUN02.046	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	Algeria	LX.PUN02.084	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M

Downloaded from www.Manualslib.com manuals search engine

Model	Country	Acer Part No	BOM Name	CPU
AS7745G-434G1TMn	Algeria	LX.PUP02.003	AS7745G_BROADWAY_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	Austria	LX.PUN02.050	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	Austria	LX.PUP02.053	AS7745G_BROADWAY_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	Baltic	LX.PUN02.059	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	Baltic	LX.PUN02.062	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	Baltic	LX.PUN02.075	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	Baltic	LX.PUP02.061	AS7745G_BROADWAY_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	Baltic	LX.PUP02.064	AS7745G_BROADWAY_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	Baltic	LX.PUP02.077	AS7745G_BROADWAY_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	Belgium	LX.PUN02.072	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	Belgium	LX.PUP02.075	AS7745G_BROADWAY_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	Cyprus	LX.PUN02.061	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	Cyprus	LX.PUP02.062	AS7745G_BROADWAY_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	Czech	LX.PUN02.065	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	Czech	LX.PUP02.067	AS7745G_BROADWAY_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	Denmark	LX.PUN02.057	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	Denmark	LX.PUP02.057	AS7745G_BROADWAY_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	Eastern Europe	LX.PUN02.002	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	Eastern Europe	LX.PUN02.003	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	Eastern Europe	LX.PUN02.049	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	Eastern Europe	LX.PUN02.054	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	Eastern Europe	LX.PUN02.056	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	Eastern Europe	LX.PUN02.067	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	Eastern Europe	LX.PUN02.068	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M

Downloaded from www.Manualslib.com manuals search engine

Model	Country	Acer Part No	BOM Name	CPU
AS7745G-434G1TMn	Eastern Europe	LX.PUP02.036	AS7745G_BROADWAY_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	Eastern Europe	LX.PUP02.055	AS7745G_BROADWAY_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	Eastern Europe	LX.PUP02.056	AS7745G_BROADWAY_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	Eastern Europe	LX.PUP02.068	AS7745G_BROADWAY_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	Eastern Europe	LX.PUP02.069	AS7745G_BROADWAY_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	France	LX.PUN02.048	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	France	LX.PUP02.048	AS7745G_BROADWAY_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	Germany	LX.PUN02.076	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	Germany	LX.PUP02.079	AS7745G_BROADWAY_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	Greece	LX.PUN02.051	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	Greece	LX.PUP02.054	AS7745G_BROADWAY_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	Holland	LX.PUN02.073	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	Holland	LX.PUP02.076	AS7745G_BROADWAY_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	Hungary	LX.PUN02.064	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	Hungary	LX.PUP02.066	AS7745G_BROADWAY_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	Israel	LX.PUN02.063	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	Israel	LX.PUP02.065	AS7745G_BROADWAY_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	Italy	LX.PUN02.053	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	Italy	LX.PUP02.059	AS7745G_BROADWAY_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	Latvia	LX.PUN02.069	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	Latvia	LX.PUN02.070	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	Latvia	LX.PUP02.071	AS7745G_BROADWAY_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	Latvia	LX.PUP02.072	AS7745G_BROADWAY_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	Luxembourg	LX.PUN02.074	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M

Downloaded from www.Manualslib.com manuals search engine

Model	Country	Acer Part No	BOM Name	CPU
AS7745G-434G1TMn	Luxembourg	LX.PUP02.073	AS7745G_BROADWAY_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	Middle East	LX.PUN02.079	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	Middle East	LX.PUN02.080	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	Middle East	LX.PUN02.081	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	Middle East	LX.PUN02.082	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	Middle East	LX.PUN02.085	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	Middle East	LX.PUN02.086	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	Middle East	LX.PUN02.087	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	Middle East	LX.PUN02.090	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	Middle East	LX.PUN02.091	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	Middle East	LX.PUP02.001	AS7745G_BROADWAY_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	Middle East	LX.PUP02.004	AS7745G_BROADWAY_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	Middle East	LX.PUP02.006	AS7745G_BROADWAY_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	Middle East	LX.PUP02.007	AS7745G_BROADWAY_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	Middle East	LX.PUP02.010	AS7745G_BROADWAY_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	Middle East	LX.PUP02.011	AS7745G_BROADWAY_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	Middle East	LX.PUP02.081	AS7745G_BROADWAY_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	Middle East	LX.PUP02.082	AS7745G_BROADWAY_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	Middle East	LX.PUP02.083	AS7745G_BROADWAY_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	Poland	LX.PUN02.077	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	Poland	LX.PUP02.078	AS7745G_BROADWAY_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	Portugal	LX.PUN02.060	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	Portugal	LX.PUP02.063	AS7745G_BROADWAY_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	Serbia/ Macedonia	LX.PUN02.058	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M

Downloaded from www.Manualslib.com manuals search engine

Model	Country	Acer Part No	BOM Name	CPU
AS7745G-434G1TMn	Serbia/ Macedonia	LX.PUP02.060	AS7745G_BROADWAY_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	South Africa	LX.PUN02.078	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	South Africa	LX.PUN02.083	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	South Africa	LX.PUN02.089	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	South Africa	LX.PUP02.002	AS7745G_BROADWAY_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	South Africa	LX.PUP02.005	AS7745G_BROADWAY_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	South Africa	LX.PUP02.009	AS7745G_BROADWAY_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	South Africa	LX.PUP02.080	AS7745G_BROADWAY_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	Spain	LX.PUN02.052	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	Spain	LX.PUP02.058	AS7745G_BROADWAY_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	Switzerland	LX.PUN02.071	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	Switzerland	LX.PUP02.074	AS7745G_BROADWAY_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	Turkey	LX.PUN02.088	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	Turkey	LX.PUP02.008	AS7745G_BROADWAY_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	UK	LX.PUN02.066	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	UK	LX.PUP02.070	AS7745G_BROADWAY_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	Ukraine	LX.PUN02.093	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMn	Ukraine	LX.PUP02.013	AS7745G_BROADWAY_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMi	Russia	LX.PUN02.092	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1TMi	Russia	LX.PUP02.012	AS7745G_BROADWAY_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1.28TMn	Belgium	LX.PUN02.199	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1.28TMn	Holland	LX.PUN02.198	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-434G1.28TMn	Luxembourg	LX.PUN02.197	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M

Downloaded from www.Manualslib.com manuals search engine

Model	Country	Acer Part No	BOM Name	CPU
AS7745G-434G1.28TMn	Spain	LX.PUN02.099	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-433G32Mn	Turkey	LX.PUN01.002	AS7745G_MADISON_PRO1GBCks_3V3J	Ci5430M
AS7745G-336G1TMn	Denmark	LX.PUP02.085	AS7745G_BROADWAY_PRO1GBCks_3V3J	Ci3330M
AS7745G-334G50Mn	Turkey	LX.PUK02.003	AS7745G_PARK_XT512Cks_3V3J	Ci3330M
AS7745G-334G1TMn	France	LX.PUN02.095	AS7745G_MADISON_PRO1GBCks_3V3J	Ci3330M
AS7745G-333G48Mn	Turkey	LX.PUK01.002	AS7745G_PARK_XT512Cks_3V3J	Ci3330M
AS7745G-333G32Mn	Turkey	LX.PUK01.003	AS7745G_PARK_XT512Cks_3V3J	Ci3330M
AS7745G-332G32Mn	WW	S2.PUK02.003	AS7745G_PARK_XT512Cks_3V3J	Ci3330M
AS7745G-332G32Mn	WW	S2.PUK02.003	AS7745G_PARK_XT512Cks_3V3J	Ci3330M
AS7745G-332G16Mn	GCTWN	S2.PUK02.001	AS7745G_PARK_XT512Cks_3V3J	Ci3330M
AS7745G-332G16Mn	GCTWN	S2.PUK02.001	AS7745G_PARK_XT512Cks_3V3J	Ci3330M
AS7745G-332G16Mn	South Africa	LX.PUK02.001	AS7745G_PARK_XT512Cks_3V3J	Ci3330M
AS7745G-332G16Mn	South Africa	LX.PUN02.001	AS7745G_MADISON_PRO1GBCks_3V3J	Ci3330M
AS7745G-332G16Mn	WW	S2.PUK02.002	AS7745G_PARK_XT512Cks_3V3J	Ci3330M
AS7745G-332G16Mn	WW	S2.PUK02.002	AS7745G_PARK_XT512Cks_3V3J	Ci3330M

Model	Country	Acer Part No	VGA Chip	VRAM 1	HDD 1(GB)	HDD 2(GB)
AS7745G-728G75Bn	WW	S2.PUM02.002	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N250GB5.4KS
AS7745G-728G75Bn	WW	S2.PUM02.002	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N250GB5.4KS
AS7745G-728G64Bn	Germany	LX.PUL02.143	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-728G57Mn	WW	S2.PUL02.002	MADISON_PRO	1G-DDR3 (64*16*8)	N320GB5.4KS	N250GB5.4KS
AS7745G-728G57Mn	WW	S2.PUL02.002	MADISON_PRO	1G-DDR3 (64*16*8)	N320GB5.4KS	N250GB5.4KS
AS7745G-728G50Bn	USA	LX.PUL02.144	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N
AS7745G-728G50Bn	USA	LX.PUL02.145	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N

Downloaded from www.Manualslib.com manuals search engine

Model	Country	Acer Part No	VGA Chip	VRAM 1	HDD 1(GB)	HDD 2(GB)
AS7745G-728G1TWn	France	LX.PUM02.003	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-728G1TMn	Spain	LX.PUL02.091	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-728G1TBn	France	LX.PUM02.004	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-728G1TBn	Switzerland	LX.PUM02.005	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-728G1TBi	Russia	LX.PUM02.053	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-728G1.28TWn	Germany	LX.PUM02.055	BROADWAY_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N640GB5.4KS
AS7745G-728G1.28TWn	Japan	LX.PUM02.064	BROADWAY_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N640GB5.4KS
AS7745G-728G1.28TBn	Algeria	LX.PUL02.078	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N640GB5.4KS
AS7745G-728G1.28TBn	Austria	LX.PUL02.049	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N640GB5.4KS
AS7745G-728G1.28TBn	Baltic	LX.PUL02.050	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N640GB5.4KS
AS7745G-728G1.28TBn	Baltic	LX.PUL02.063	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N640GB5.4KS
AS7745G-728G1.28TBn	Baltic	LX.PUL02.072	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N640GB5.4KS
AS7745G-728G1.28TBn	Belgium	LX.PUL02.074	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N640GB5.4KS
AS7745G-728G1.28TBn	Cyprus	LX.PUL02.065	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N640GB5.4KS
AS7745G-728G1.28TBn	Czech	LX.PUL02.066	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N640GB5.4KS
AS7745G-728G1.28TBn	Denmark	LX.PUL02.062	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N640GB5.4KS
AS7745G-728G1.28TBn	Eastern Europe	LX.PUL02.047	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N640GB5.4KS
AS7745G-728G1.28TBn	Eastern Europe	LX.PUL02.052	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N640GB5.4KS

Downloaded from www.Manualslib.com manuals search engine

Model	Country	Acer Part No	VGA Chip	VRAM 1	HDD 1(GB)	HDD 2(GB)
AS7745G-728G1.28TBn	Eastern Europe	LX.PUL02.057	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N640GB5.4KS
AS7745G-728G1.28TBn	Eastern Europe	LX.PUL02.058	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N640GB5.4KS
AS7745G-728G1.28TBn	Eastern Europe	LX.PUL02.061	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N640GB5.4KS
AS7745G-728G1.28TBn	France	LX.PUL02.046	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N640GB5.4KS
AS7745G-728G1.28TBn	Germany	LX.PUL02.080	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N640GB5.4KS
AS7745G-728G1.28TBn	Greece	LX.PUL02.048	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N640GB5.4KS
AS7745G-728G1.28TBn	Holland	LX.PUL02.075	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N640GB5.4KS
AS7745G-728G1.28TBn	Hungary	LX.PUL02.054	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N640GB5.4KS
AS7745G-728G1.28TBn	Israel	LX.PUL02.053	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N640GB5.4KS
AS7745G-728G1.28TBn	Italy	LX.PUL02.060	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N640GB5.4KS
AS7745G-728G1.28TBn	Latvia	LX.PUL02.055	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N640GB5.4KS
AS7745G-728G1.28TBn	Latvia	LX.PUL02.056	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N640GB5.4KS
AS7745G-728G1.28TBn	Luxembourg	LX.PUL02.076	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N640GB5.4KS
AS7745G-728G1.28TBn	Middle East	LX.PUL02.067	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N640GB5.4KS
AS7745G-728G1.28TBn	Middle East	LX.PUL02.068	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N640GB5.4KS
AS7745G-728G1.28TBn	Middle East	LX.PUL02.070	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N640GB5.4KS
AS7745G-728G1.28TBn	Middle East	LX.PUL02.077	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N640GB5.4KS

Downloaded from www.Manualslib.com manuals search engine

Model	Country	Acer Part No	VGA Chip	VRAM 1	HDD 1(GB)	HDD 2(GB)
AS7745G-728G1.28TBn	Middle East	LX.PUL02.079	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N640GB5.4KS
AS7745G-728G1.28TBn	Middle East	LX.PUL02.083	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N640GB5.4KS
AS7745G-728G1.28TBn	Middle East	LX.PUL02.084	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N640GB5.4KS
AS7745G-728G1.28TBn	Middle East	LX.PUL02.086	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N640GB5.4KS
AS7745G-728G1.28TBn	Middle East	LX.PUL02.087	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N640GB5.4KS
AS7745G-728G1.28TBn	Poland	LX.PUL02.081	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N640GB5.4KS
AS7745G-728G1.28TBn	Portugal	LX.PUL02.064	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N640GB5.4KS
AS7745G-728G1.28TBn	Serbia/ Macedonia	LX.PUL02.051	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N640GB5.4KS
AS7745G-728G1.28TBn	South Africa	LX.PUL02.069	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N640GB5.4KS
AS7745G-728G1.28TBn	South Africa	LX.PUL02.082	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N640GB5.4KS
AS7745G-728G1.28TBn	South Africa	LX.PUL02.088	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N640GB5.4KS
AS7745G-728G1.28TBn	Spain	LX.PUL02.059	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N640GB5.4KS
AS7745G-728G1.28TBn	Switzerland	LX.PUL02.073	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N640GB5.4KS
AS7745G-728G1.28TBn	Turkey	LX.PUL02.085	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N640GB5.4KS
AS7745G-728G1.28TBn	UK	LX.PUL02.071	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N640GB5.4KS
AS7745G-728G1.28TBn	Ukraine	LX.PUL02.090	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N640GB5.4KS
AS7745G-728G1.28TBi	Russia	LX.PUL02.089	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N640GB5.4KS

Downloaded from www.Manualslib.com manuals search engine

Model	Country	Acer Part No	VGA Chip	VRAM 1	HDD 1(GB)	HDD 2(GB)
AS7745G-726G64Mn	Czech	LX.PUM02.062	BROADWAY_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-726G1TMn	Belgium	LX.PUL02.139	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-726G1TMn	Belgium	LX.PUM02.059	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-726G1TMn	France	LX.PUM02.002	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-726G1TMn	Holland	LX.PUL02.141	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-726G1TMn	Holland	LX.PUM02.061	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-726G1TMn	Luxembourg	LX.PUL02.140	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-726G1TMn	Luxembourg	LX.PUM02.060	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-726G1TBn	UK	LX.PUM02.063	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-724G64Mn	Algeria	LX.PUL02.035	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-724G64Mn	Austria	LX.PUL02.004	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-724G64Mn	Baltic	LX.PUL02.005	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-724G64Mn	Baltic	LX.PUL02.008	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-724G64Mn	Baltic	LX.PUL02.023	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-724G64Mn	Belgium	LX.PUL02.025	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-724G64Mn	Cyprus	LX.PUL02.010	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-724G64Mn	Czech	LX.PUL02.011	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-724G64Mn	Denmark	LX.PUL02.007	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-724G64Mn	Eastern Europe	LX.PUL02.002	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-724G64Mn	Eastern Europe	LX.PUL02.016	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-724G64Mn	Eastern Europe	LX.PUL02.017	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-724G64Mn	Eastern Europe	LX.PUL02.020	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-724G64Mn	Eastern Europe	LX.PUL02.021	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-724G64Mn	France	LX.PUL02.001	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N

Downloaded from www.Manualslib.com manuals search engine

Model	Country	Acer Part No	VGA Chip	VRAM 1	HDD 1(GB)	HDD 2(GB)
AS7745G-724G64Mn	Germany	LX.PUL02.028	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-724G64Mn	Greece	LX.PUL02.003	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-724G64Mn	Holland	LX.PUL02.026	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-724G64Mn	Hungary	LX.PUL02.013	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-724G64Mn	Israel	LX.PUL02.012	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-724G64Mn	Italy	LX.PUL02.019	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-724G64Mn	Latvia	LX.PUL02.014	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-724G64Mn	Latvia	LX.PUL02.015	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-724G64Mn	Luxembourg	LX.PUL02.027	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-724G64Mn	Middle East	LX.PUL02.030	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-724G64Mn	Middle East	LX.PUL02.031	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-724G64Mn	Middle East	LX.PUL02.033	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-724G64Mn	Middle East	LX.PUL02.034	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-724G64Mn	Middle East	LX.PUL02.036	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-724G64Mn	Middle East	LX.PUL02.038	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-724G64Mn	Middle East	LX.PUL02.039	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-724G64Mn	Middle East	LX.PUL02.041	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-724G64Mn	Middle East	LX.PUL02.042	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-724G64Mn	Poland	LX.PUL02.029	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-724G64Mn	Portugal	LX.PUL02.009	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-724G64Mn	Serbia/ Macedonia	LX.PUL02.006	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-724G64Mn	South Africa	LX.PUL02.032	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-724G64Mn	South Africa	LX.PUL02.037	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-724G64Mn	South Africa	LX.PUL02.043	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N

Downloaded from www.Manualslib.com manuals search engine

Model	Country	Acer Part No	VGA Chip	VRAM 1	HDD 1(GB)	HDD 2(GB)
AS7745G-724G64Mn	Spain	LX.PUL02.018	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-724G64Mn	Switzerland	LX.PUL02.024	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-724G64Mn	Turkey	LX.PUL02.040	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-724G64Mn	UK	LX.PUL02.022	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-724G64Mn	Ukraine	LX.PUL02.045	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-724G64Mi	Russia	LX.PUL02.044	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-724G64Bn	Germany	LX.PUM02.006	BROADWAY_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-724G64Bn	Germany	LX.PUM02.054	BROADWAY_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-724G50Mn	Algeria	LX.PUL02.128	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N
AS7745G-724G50Mn	Austria	LX.PUL02.094	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N
AS7745G-724G50Mn	Baltic	LX.PUL02.103	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N
AS7745G-724G50Mn	Baltic	LX.PUL02.106	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N
AS7745G-724G50Mn	Baltic	LX.PUL02.119	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N
AS7745G-724G50Mn	Belgium	LX.PUL02.117	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N
AS7745G-724G50Mn	Cyprus	LX.PUL02.104	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N
AS7745G-724G50Mn	Czech	LX.PUL02.109	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N
AS7745G-724G50Mn	Denmark	LX.PUL02.098	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N
AS7745G-724G50Mn	Eastern Europe	LX.PUL02.092	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N
AS7745G-724G50Mn	Eastern Europe	LX.PUL02.096	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N
AS7745G-724G50Mn	Eastern Europe	LX.PUL02.097	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N
AS7745G-724G50Mn	Eastern Europe	LX.PUL02.110	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N
AS7745G-724G50Mn	Eastern Europe	LX.PUL02.111	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N
AS7745G-724G50Mn	France	LX.PUL02.093	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N
AS7745G-724G50Mn	France	LX.PUM02.001	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N

Downloaded from www.Manualslib.com manuals search engine

Model	Country	Acer Part No	VGA Chip	VRAM 1	HDD 1(GB)	HDD 2(GB)
AS7745G-724G50Mn	Germany	LX.PUL02.121	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N
AS7745G-724G50Mn	Greece	LX.PUL02.095	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N
AS7745G-724G50Mn	Holland	LX.PUL02.118	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N
AS7745G-724G50Mn	Hungary	LX.PUL02.108	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N
AS7745G-724G50Mn	Israel	LX.PUL02.107	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N
AS7745G-724G50Mn	Italy	LX.PUL02.101	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N
AS7745G-724G50Mn	Latvia	LX.PUL02.113	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N
AS7745G-724G50Mn	Latvia	LX.PUL02.114	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N
AS7745G-724G50Mn	Luxembourg	LX.PUL02.115	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N
AS7745G-724G50Mn	Middle East	LX.PUL02.123	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N
AS7745G-724G50Mn	Middle East	LX.PUL02.124	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N
AS7745G-724G50Mn	Middle East	LX.PUL02.125	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N
AS7745G-724G50Mn	Middle East	LX.PUL02.126	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N
AS7745G-724G50Mn	Middle East	LX.PUL02.129	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N
AS7745G-724G50Mn	Middle East	LX.PUL02.131	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N
AS7745G-724G50Mn	Middle East	LX.PUL02.132	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N
AS7745G-724G50Mn	Middle East	LX.PUL02.135	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N
AS7745G-724G50Mn	Middle East	LX.PUL02.136	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N
AS7745G-724G50Mn	Poland	LX.PUL02.120	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N
AS7745G-724G50Mn	Portugal	LX.PUL02.105	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N
AS7745G-724G50Mn	Serbia/ Macedonia	LX.PUL02.102	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N
AS7745G-724G50Mn	South Africa	LX.PUL02.122	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N
AS7745G-724G50Mn	South Africa	LX.PUL02.127	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N
AS7745G-724G50Mn	South Africa	LX.PUL02.130	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N

Downloaded from www.Manualslib.com manuals search engine

Model	Country	Acer Part No	VGA Chip	VRAM 1	HDD 1(GB)	HDD 2(GB)
AS7745G-724G50Mn	South Africa	LX.PUL02.134	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N
AS7745G-724G50Mn	Spain	LX.PUL02.099	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N
AS7745G-724G50Mn	Switzerland	LX.PUL02.116	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N
AS7745G-724G50Mn	Turkey	LX.PUL02.133	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N
AS7745G-724G50Mn	UK	LX.PUL02.112	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N
AS7745G-724G50Mn	Ukraine	LX.PUL02.138	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N
AS7745G-724G50Mn	USA	LX.PUL02.146	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N
AS7745G-724G50Mi	Russia	LX.PUL02.137	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N
AS7745G-724G50Bn	Germany	LX.PUL02.142	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N
AS7745G-724G48Bn	WW	S2.PUM02.003	BROADWAY_PRO	1G-DDR3 (64*16*8)	N320GB5.4KS	N160GB5.4KS
AS7745G-724G48Bn	WW	S2.PUM02.003	BROADWAY_PRO	1G-DDR3 (64*16*8)	N320GB5.4KS	N160GB5.4KS
AS7745G-724G1TBn	Algeria	LX.PUM02.044	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-724G1TBn	Austria	LX.PUM02.009	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-724G1TBn	Baltic	LX.PUM02.017	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-724G1TBn	Baltic	LX.PUM02.022	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-724G1TBn	Baltic	LX.PUM02.035	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-724G1TBn	Belgium	LX.PUM02.033	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-724G1TBn	Cyprus	LX.PUM02.020	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-724G1TBn	Czech	LX.PUM02.025	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-724G1TBn	Denmark	LX.PUM02.013	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-724G1TBn	Eastern Europe	LX.PUM02.007	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-724G1TBn	Eastern Europe	LX.PUM02.011	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-724G1TBn	Eastern Europe	LX.PUM02.012	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-724G1TBn	Eastern Europe	LX.PUM02.026	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS

Downloaded from www.Manualslib.com manuals search engine

Model	Country	Acer Part No	VGA Chip	VRAM 1	HDD 1(GB)	HDD 2(GB)
AS7745G-724G1TBn	Eastern Europe	LX.PUM02.027	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-724G1TBn	France	LX.PUM02.008	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-724G1TBn	Germany	LX.PUM02.037	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-724G1TBn	Greece	LX.PUM02.010	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-724G1TBn	Holland	LX.PUM02.034	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-724G1TBn	Hungary	LX.PUM02.024	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-724G1TBn	Israel	LX.PUM02.023	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-724G1TBn	Italy	LX.PUM02.015	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-724G1TBn	Latvia	LX.PUM02.029	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-724G1TBn	Latvia	LX.PUM02.030	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-724G1TBn	Luxembourg	LX.PUM02.031	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-724G1TBn	Middle East	LX.PUM02.039	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-724G1TBn	Middle East	LX.PUM02.040	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-724G1TBn	Middle East	LX.PUM02.041	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-724G1TBn	Middle East	LX.PUM02.042	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-724G1TBn	Middle East	LX.PUM02.045	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-724G1TBn	Middle East	LX.PUM02.047	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-724G1TBn	Middle East	LX.PUM02.048	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-724G1TBn	Middle East	LX.PUM02.051	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-724G1TBn	Middle East	LX.PUM02.052	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-724G1TBn	Poland	LX.PUM02.036	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-724G1TBn	Portugal	LX.PUM02.021	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-724G1TBn	Serbia/ Macedonia	LX.PUM02.016	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-724G1TBn	South Africa	LX.PUM02.038	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS

Downloaded from www.Manualslib.com manuals search engine

Model	Country	Acer Part No	VGA Chip	VRAM 1	HDD 1(GB)	HDD 2(GB)
AS7745G-724G1TBn	South Africa	LX.PUM02.043	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-724G1TBn	South Africa	LX.PUM02.046	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-724G1TBn	South Africa	LX.PUM02.050	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-724G1TBn	Spain	LX.PUM02.014	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-724G1TBn	Switzerland	LX.PUM02.032	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-724G1TBn	Turkey	LX.PUM02.049	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-724G1TBn	UK	LX.PUM02.028	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-724G1TBn	Ukraine	LX.PUM02.019	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-724G1TBi	Russia	LX.PUM02.018	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-722G75Bn	GCTWN	S2.PUM02.001	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N250GB5.4KS
AS7745G-722G75Bn	GCTWN	S2.PUM02.001	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N250GB5.4KS
AS7745G-722G57Mn	GCTWN	S2.PUL02.001	MADISON_PRO	1G-DDR3 (64*16*8)	N320GB5.4KS	N250GB5.4KS
AS7745G-722G57Mn	GCTWN	S2.PUL02.001	MADISON_PRO	1G-DDR3 (64*16*8)	N320GB5.4KS	N250GB5.4KS
AS7745G-72161.28TBn	Belgium	LX.PUM02.058	BROADWAY_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N640GB5.4KS
AS7745G-72161.28TBn	Holland	LX.PUM02.057	BROADWAY_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N640GB5.4KS
AS7745G-72161.28TBn	Luxembourg	LX.PUM02.056	BROADWAY_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N640GB5.4KS
AS7745G-624G50Mn	France	LX.PUN02.101	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N
AS7745G-624G16Mn	WW	S2.PUP02.001	BROADWAY_PRO	1G-DDR3 (64*16*8)	N160GB5.4KS	N
AS7745G-624G16Mn	WW	S2.PUP02.001	BROADWAY_PRO	1G-DDR3 (64*16*8)	N160GB5.4KS	N
AS7745G-542G16Mn	GCTWN	S2.PUN02.001	MADISON_PRO	1G-DDR3 (64*16*8)	N160GB5.4KS	N
AS7745G-542G16Mn	GCTWN	S2.PUN02.001	MADISON_PRO	1G-DDR3 (64*16*8)	N160GB5.4KS	N
AS7745G-542G16Mn	WW	S2.PUN02.002	MADISON_PRO	1G-DDR3 (64*16*8)	N160GB5.4KS	N
AS7745G-542G16Mn	WW	S2.PUN02.002	MADISON_PRO	1G-DDR3 (64*16*8)	N160GB5.4KS	N

Downloaded from www.Manualslib.com manuals search engine

Model	Country	Acer Part No	VGA Chip	VRAM 1	HDD 1(GB)	HDD 2(GB)
AS7745G-526G64Bn	Germany	LX.PUN02.208	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-524G64Bn	Germany	LX.PUN02.209	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-524G50Mn	Turkey	LX.PUN02.217	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N
AS7745G-523G32Mn	Turkey	LX.PUN01.003	MADISON_PRO	1G-DDR3 (64*16*8)	N320GB5.4KS	N
AS7745G-438G64Mn	Spain	LX.PUN02.096	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-438G64Mn	Switzerland	LX.PUN02.214	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-438G50Mn	Switzerland	LX.PUN02.215	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N
AS7745G-438G1TBn	Switzerland	LX.PUN02.212	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-436G64Mn	Spain	LX.PUN02.097	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-436G64Bn	Germany	LX.PUN02.211	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-436G1.28TBn	Belgium	LX.PUN02.206	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N640GB5.4KS
AS7745G-436G1.28TBn	Holland	LX.PUN02.205	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N640GB5.4KS
AS7745G-436G1.28TBn	Luxembourg	LX.PUN02.204	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N640GB5.4KS
AS7745G-434G82Mn	Belgium	LX.PUN02.203	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N320GB5.4KS
AS7745G-434G82Mn	Holland	LX.PUN02.202	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N320GB5.4KS
AS7745G-434G82Mn	Luxembourg	LX.PUN02.201	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N320GB5.4KS
AS7745G-434G82Bn	Algeria	LX.PUN02.185	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N320GB5.4KS
AS7745G-434G82Bn	Austria	LX.PUN02.150	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N320GB5.4KS
AS7745G-434G82Bn	Baltic	LX.PUN02.162	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N320GB5.4KS
AS7745G-434G82Bn	Baltic	LX.PUN02.165	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N320GB5.4KS
AS7745G-434G82Bn	Baltic	LX.PUN02.176	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N320GB5.4KS
AS7745G-434G82Bn	Belgium	LX.PUN02.174	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N320GB5.4KS
AS7745G-434G82Bn	Cyprus	LX.PUN02.163	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N320GB5.4KS

Downloaded from www.Manualslib.com manuals search engine

Model	Country	Acer Part No	VGA Chip	VRAM 1	HDD 1(GB)	HDD 2(GB)
AS7745G-434G82Bn	Czech	LX.PUN02.168	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N320GB5.4KS
AS7745G-434G82Bn	Denmark	LX.PUN02.158	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N320GB5.4KS
AS7745G-434G82Bn	Eastern Europe	LX.PUN02.148	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N320GB5.4KS
AS7745G-434G82Bn	Eastern Europe	LX.PUN02.153	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N320GB5.4KS
AS7745G-434G82Bn	Eastern Europe	LX.PUN02.154	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N320GB5.4KS
AS7745G-434G82Bn	Eastern Europe	LX.PUN02.156	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N320GB5.4KS
AS7745G-434G82Bn	Eastern Europe	LX.PUN02.157	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N320GB5.4KS
AS7745G-434G82Bn	France	LX.PUN02.149	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N320GB5.4KS
AS7745G-434G82Bn	Germany	LX.PUN02.178	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N320GB5.4KS
AS7745G-434G82Bn	Greece	LX.PUN02.155	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N320GB5.4KS
AS7745G-434G82Bn	Holland	LX.PUN02.175	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N320GB5.4KS
AS7745G-434G82Bn	Hungary	LX.PUN02.167	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N320GB5.4KS
AS7745G-434G82Bn	Israel	LX.PUN02.166	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N320GB5.4KS
AS7745G-434G82Bn	Italy	LX.PUN02.160	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N320GB5.4KS
AS7745G-434G82Bn	Latvia	LX.PUN02.170	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N320GB5.4KS
AS7745G-434G82Bn	Latvia	LX.PUN02.171	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N320GB5.4KS
AS7745G-434G82Bn	Luxembourg	LX.PUN02.172	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N320GB5.4KS
AS7745G-434G82Bn	Middle East	LX.PUN02.180	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N320GB5.4KS
AS7745G-434G82Bn	Middle East	LX.PUN02.181	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N320GB5.4KS
AS7745G-434G82Bn	Middle East	LX.PUN02.182	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N320GB5.4KS
AS7745G-434G82Bn	Middle East	LX.PUN02.183	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N320GB5.4KS
AS7745G-434G82Bn	Middle East	LX.PUN02.186	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N320GB5.4KS
AS7745G-434G82Bn	Middle East	LX.PUN02.188	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N320GB5.4KS
AS7745G-434G82Bn	Middle East	LX.PUN02.189	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N320GB5.4KS

Downloaded from www.Manualslib.com manuals search engine

Model	Country	Acer Part No	VGA Chip	VRAM 1	HDD 1(GB)	HDD 2(GB)
AS7745G-434G82Bn	Middle East	LX.PUN02.192	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N320GB5.4KS
AS7745G-434G82Bn	Middle East	LX.PUN02.193	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N320GB5.4KS
AS7745G-434G82Bn	Poland	LX.PUN02.177	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N320GB5.4KS
AS7745G-434G82Bn	Portugal	LX.PUN02.164	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N320GB5.4KS
AS7745G-434G82Bn	Serbia/ Macedonia	LX.PUN02.161	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N320GB5.4KS
AS7745G-434G82Bn	South Africa	LX.PUN02.179	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N320GB5.4KS
AS7745G-434G82Bn	South Africa	LX.PUN02.184	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N320GB5.4KS
AS7745G-434G82Bn	South Africa	LX.PUN02.187	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N320GB5.4KS
AS7745G-434G82Bn	South Africa	LX.PUN02.191	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N320GB5.4KS
AS7745G-434G82Bn	Spain	LX.PUN02.159	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N320GB5.4KS
AS7745G-434G82Bn	Switzerland	LX.PUN02.173	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N320GB5.4KS
AS7745G-434G82Bn	Turkey	LX.PUN02.190	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N320GB5.4KS
AS7745G-434G82Bn	UK	LX.PUN02.169	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N320GB5.4KS
AS7745G-434G82Bn	Ukraine	LX.PUN02.152	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N320GB5.4KS
AS7745G-434G82Bi	Russia	LX.PUN02.151	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N320GB5.4KS
AS7745G-434G64Mn	Algeria	LX.PUN02.137	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-434G64Mn	Austria	LX.PUN02.104	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-434G64Mn	Baltic	LX.PUN02.112	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-434G64Mn	Baltic	LX.PUN02.115	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-434G64Mn	Baltic	LX.PUN02.128	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-434G64Mn	Belgium	LX.PUN02.126	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-434G64Mn	Cyprus	LX.PUN02.113	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-434G64Mn	Czech	LX.PUK02.002	PARK_XT	512M-DDR3 (64*16*4)	N640GB5.4KS	N
AS7745G-434G64Mn	Czech	LX.PUN02.118	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N

Downloaded from www.Manualslib.com manuals search engine

Model	Country	Acer Part No	VGA Chip	VRAM 1	HDD 1(GB)	HDD 2(GB)
AS7745G-434G64Mn	Czech	LX.PUN02.213	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-434G64Mn	Czech	LX.PUP02.086	BROADWAY_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-434G64Mn	Denmark	LX.PUN02.108	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-434G64Mn	Eastern Europe	LX.PUN02.102	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-434G64Mn	Eastern Europe	LX.PUN02.106	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-434G64Mn	Eastern Europe	LX.PUN02.107	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-434G64Mn	Eastern Europe	LX.PUN02.119	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-434G64Mn	Eastern Europe	LX.PUN02.120	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-434G64Mn	France	LX.PUN02.103	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-434G64Mn	Germany	LX.PUN02.130	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-434G64Mn	Greece	LX.PUN02.105	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-434G64Mn	Holland	LX.PUN02.127	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-434G64Mn	Hungary	LX.PUN02.117	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-434G64Mn	Israel	LX.PUN02.116	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-434G64Mn	Italy	LX.PUN02.110	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-434G64Mn	Latvia	LX.PUN02.122	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-434G64Mn	Latvia	LX.PUN02.123	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-434G64Mn	Luxembourg	LX.PUN02.124	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-434G64Mn	Middle East	LX.PUN02.132	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-434G64Mn	Middle East	LX.PUN02.133	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-434G64Mn	Middle East	LX.PUN02.134	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-434G64Mn	Middle East	LX.PUN02.135	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-434G64Mn	Middle East	LX.PUN02.138	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-434G64Mn	Middle East	LX.PUN02.140	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N

Downloaded from www.Manualslib.com manuals search engine

Model	Country	Acer Part No	VGA Chip	VRAM 1	HDD 1(GB)	HDD 2(GB)
AS7745G-434G64Mn	Middle East	LX.PUN02.141	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-434G64Mn	Middle East	LX.PUN02.144	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-434G64Mn	Middle East	LX.PUN02.145	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-434G64Mn	Poland	LX.PUN02.129	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-434G64Mn	Portugal	LX.PUN02.114	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-434G64Mn	Serbia/ Macedonia	LX.PUN02.111	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-434G64Mn	South Africa	LX.PUN02.131	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-434G64Mn	South Africa	LX.PUN02.136	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-434G64Mn	South Africa	LX.PUN02.139	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-434G64Mn	South Africa	LX.PUN02.143	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-434G64Mn	South Africa	LX.PUN02.196	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-434G64Mn	Spain	LX.PUN02.109	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-434G64Mn	Switzerland	LX.PUN02.125	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-434G64Mn	Turkey	LX.PUN02.142	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-434G64Mn	UK	LX.PUN02.121	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-434G64Mn	Ukraine	LX.PUN02.147	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-434G64Mi	Russia	LX.PUN02.146	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-434G64Mi	Russia	LX.PUN02.194	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-434G64Bn	Germany	LX.PUN02.195	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-434G64Bn	Germany	LX.PUN02.207	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N
AS7745G-434G57Mn	WW	S2.PUN02.003	MADISON_PRO	1G-DDR3 (64*16*8)	N250GB5.4KS	N320GB5.4KS
AS7745G-434G57Mn	WW	S2.PUN02.003	MADISON_PRO	1G-DDR3 (64*16*8)	N250GB5.4KS	N320GB5.4KS
AS7745G-434G50Mn	Spain	LX.PUN02.098	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N
AS7745G-434G50Mn	Turkey	LX.PUN02.216	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N

Downloaded from www.Manualslib.com manuals search engine

Model	Country	Acer Part No	VGA Chip	VRAM 1	HDD 1(GB)	HDD 2(GB)
AS7745G-434G50Mn	UK	LX.PUK02.005	PARK_XT	512M-DDR3 (64*16*4)	N500GB5.4KS	N
AS7745G-434G50Bn	Germany	LX.PUN02.210	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N
AS7745G-434G50Bn	Germany	LX.PUP02.084	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N
AS7745G-434G32Mn	Algeria	LX.PUN02.039	MADISON_PRO	1G-DDR3 (64*16*8)	N320GB5.4KS	N
AS7745G-434G32Mn	Austria	LX.PUN02.018	MADISON_PRO	1G-DDR3 (64*16*8)	N320GB5.4KS	N
AS7745G-434G32Mn	Baltic	LX.PUN02.013	MADISON_PRO	1G-DDR3 (64*16*8)	N320GB5.4KS	N
AS7745G-434G32Mn	Baltic	LX.PUN02.016	MADISON_PRO	1G-DDR3 (64*16*8)	N320GB5.4KS	N
AS7745G-434G32Mn	Baltic	LX.PUN02.030	MADISON_PRO	1G-DDR3 (64*16*8)	N320GB5.4KS	N
AS7745G-434G32Mn	Belgium	LX.PUN02.027	MADISON_PRO	1G-DDR3 (64*16*8)	N320GB5.4KS	N
AS7745G-434G32Mn	Cyprus	LX.PUN02.015	MADISON_PRO	1G-DDR3 (64*16*8)	N320GB5.4KS	N
AS7745G-434G32Mn	Czech	LX.PUN02.020	MADISON_PRO	1G-DDR3 (64*16*8)	N320GB5.4KS	N
AS7745G-434G32Mn	Denmark	LX.PUN02.011	MADISON_PRO	1G-DDR3 (64*16*8)	N320GB5.4KS	N
AS7745G-434G32Mn	Denmark	LX.PUN02.094	MADISON_PRO	1G-DDR3 (64*16*8)	N320GB5.4KS	N
AS7745G-434G32Mn	Eastern Europe	LX.PUN02.005	MADISON_PRO	1G-DDR3 (64*16*8)	N320GB5.4KS	N
AS7745G-434G32Mn	Eastern Europe	LX.PUN02.009	MADISON_PRO	1G-DDR3 (64*16*8)	N320GB5.4KS	N
AS7745G-434G32Mn	Eastern Europe	LX.PUN02.010	MADISON_PRO	1G-DDR3 (64*16*8)	N320GB5.4KS	N
AS7745G-434G32Mn	Eastern Europe	LX.PUN02.022	MADISON_PRO	1G-DDR3 (64*16*8)	N320GB5.4KS	N
AS7745G-434G32Mn	Eastern Europe	LX.PUN02.023	MADISON_PRO	1G-DDR3 (64*16*8)	N320GB5.4KS	N
AS7745G-434G32Mn	France	LX.PUN02.004	MADISON_PRO	1G-DDR3 (64*16*8)	N320GB5.4KS	N
AS7745G-434G32Mn	Germany	LX.PUN02.031	MADISON_PRO	1G-DDR3 (64*16*8)	N320GB5.4KS	N
AS7745G-434G32Mn	Greece	LX.PUN02.006	MADISON_PRO	1G-DDR3 (64*16*8)	N320GB5.4KS	N
AS7745G-434G32Mn	Holland	LX.PUN02.028	MADISON_PRO	1G-DDR3 (64*16*8)	N320GB5.4KS	N
AS7745G-434G32Mn	Hungary	LX.PUN02.019	MADISON_PRO	1G-DDR3 (64*16*8)	N320GB5.4KS	N
AS7745G-434G32Mn	Israel	LX.PUN02.017	MADISON_PRO	1G-DDR3 (64*16*8)	N320GB5.4KS	N

Downloaded from www.Manualslib.com manuals search engine

Model	Country	Acer Part No	VGA Chip	VRAM 1	HDD 1(GB)	HDD 2(GB)
AS7745G-434G32Mn	Italy	LX.PUN02.008	MADISON_PRO	1G-DDR3 (64*16*8)	N320GB5.4KS	N
AS7745G-434G32Mn	Latvia	LX.PUN02.024	MADISON_PRO	1G-DDR3 (64*16*8)	N320GB5.4KS	N
AS7745G-434G32Mn	Latvia	LX.PUN02.025	MADISON_PRO	1G-DDR3 (64*16*8)	N320GB5.4KS	N
AS7745G-434G32Mn	Luxembourg	LX.PUN02.029	MADISON_PRO	1G-DDR3 (64*16*8)	N320GB5.4KS	N
AS7745G-434G32Mn	Middle East	LX.PUN02.034	MADISON_PRO	1G-DDR3 (64*16*8)	N320GB5.4KS	N
AS7745G-434G32Mn	Middle East	LX.PUN02.035	MADISON_PRO	1G-DDR3 (64*16*8)	N320GB5.4KS	N
AS7745G-434G32Mn	Middle East	LX.PUN02.036	MADISON_PRO	1G-DDR3 (64*16*8)	N320GB5.4KS	N
AS7745G-434G32Mn	Middle East	LX.PUN02.037	MADISON_PRO	1G-DDR3 (64*16*8)	N320GB5.4KS	N
AS7745G-434G32Mn	Middle East	LX.PUN02.040	MADISON_PRO	1G-DDR3 (64*16*8)	N320GB5.4KS	N
AS7745G-434G32Mn	Middle East	LX.PUN02.041	MADISON_PRO	1G-DDR3 (64*16*8)	N320GB5.4KS	N
AS7745G-434G32Mn	Middle East	LX.PUN02.042	MADISON_PRO	1G-DDR3 (64*16*8)	N320GB5.4KS	N
AS7745G-434G32Mn	Middle East	LX.PUN02.045	MADISON_PRO	1G-DDR3 (64*16*8)	N320GB5.4KS	N
AS7745G-434G32Mn	Middle East	LX.PUN02.055	MADISON_PRO	1G-DDR3 (64*16*8)	N320GB5.4KS	N
AS7745G-434G32Mn	Poland	LX.PUN02.032	MADISON_PRO	1G-DDR3 (64*16*8)	N320GB5.4KS	N
AS7745G-434G32Mn	Portugal	LX.PUN02.014	MADISON_PRO	1G-DDR3 (64*16*8)	N320GB5.4KS	N
AS7745G-434G32Mn	Serbia/ Macedonia	LX.PUN02.012	MADISON_PRO	1G-DDR3 (64*16*8)	N320GB5.4KS	N
AS7745G-434G32Mn	South Africa	LX.PUN02.033	MADISON_PRO	1G-DDR3 (64*16*8)	N320GB5.4KS	N
AS7745G-434G32Mn	South Africa	LX.PUN02.038	MADISON_PRO	1G-DDR3 (64*16*8)	N320GB5.4KS	N
AS7745G-434G32Mn	South Africa	LX.PUN02.044	MADISON_PRO	1G-DDR3 (64*16*8)	N320GB5.4KS	N
AS7745G-434G32Mn	Spain	LX.PUN02.007	MADISON_PRO	1G-DDR3 (64*16*8)	N320GB5.4KS	N
AS7745G-434G32Mn	Switzerland	LX.PUN02.026	MADISON_PRO	1G-DDR3 (64*16*8)	N320GB5.4KS	N
AS7745G-434G32Mn	Turkey	LX.PUN02.043	MADISON_PRO	1G-DDR3 (64*16*8)	N320GB5.4KS	N
AS7745G-434G32Mn	UK	LX.PUN02.021	MADISON_PRO	1G-DDR3 (64*16*8)	N320GB5.4KS	N
AS7745G-434G32Mn	Ukraine	LX.PUN02.047	MADISON_PRO	1G-DDR3 (64*16*8)	N320GB5.4KS	N

Downloaded from www.Manualslib.com manuals search engine

Model	Country	Acer Part No	VGA Chip	VRAM 1	HDD 1(GB)	HDD 2(GB)
AS7745G-434G32Mi	Russia	LX.PUK01.001	PARK_XT	512M-DDR3 (64*16*4)	N320GB5.4KS	N
AS7745G-434G32Mi	Russia	LX.PUN01.001	MADISON_PRO	1G-DDR3 (64*16*8)	N160GB5.4KS	N160GB5.4KS
AS7745G-434G32Mi	Russia	LX.PUN02.046	MADISON_PRO	1G-DDR3 (64*16*8)	N320GB5.4KS	N
AS7745G-434G1TMn	Algeria	LX.PUN02.084	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	Algeria	LX.PUP02.003	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	Austria	LX.PUN02.050	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	Austria	LX.PUP02.053	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	Baltic	LX.PUN02.059	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	Baltic	LX.PUN02.062	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	Baltic	LX.PUN02.075	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	Baltic	LX.PUP02.061	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	Baltic	LX.PUP02.064	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	Baltic	LX.PUP02.077	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	Belgium	LX.PUN02.072	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	Belgium	LX.PUP02.075	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	Cyprus	LX.PUN02.061	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	Cyprus	LX.PUP02.062	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	Czech	LX.PUN02.065	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	Czech	LX.PUP02.067	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	Denmark	LX.PUN02.057	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	Denmark	LX.PUP02.057	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	Eastern Europe	LX.PUN02.002	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	Eastern Europe	LX.PUN02.003	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	Eastern Europe	LX.PUN02.049	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS

Downloaded from www.Manualslib.com manuals search engine

Model	Country	Acer Part No	VGA Chip	VRAM 1	HDD 1(GB)	HDD 2(GB)
AS7745G-434G1TMn	Eastern Europe	LX.PUN02.054	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	Eastern Europe	LX.PUN02.056	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	Eastern Europe	LX.PUN02.067	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	Eastern Europe	LX.PUN02.068	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	Eastern Europe	LX.PUP02.036	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	Eastern Europe	LX.PUP02.055	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	Eastern Europe	LX.PUP02.056	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	Eastern Europe	LX.PUP02.068	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	Eastern Europe	LX.PUP02.069	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	France	LX.PUN02.048	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	France	LX.PUP02.048	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	Germany	LX.PUN02.076	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	Germany	LX.PUP02.079	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	Greece	LX.PUN02.051	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	Greece	LX.PUP02.054	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	Holland	LX.PUN02.073	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	Holland	LX.PUP02.076	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	Hungary	LX.PUN02.064	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	Hungary	LX.PUP02.066	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	Israel	LX.PUN02.063	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	Israel	LX.PUP02.065	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	Italy	LX.PUN02.053	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	Italy	LX.PUP02.059	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	Latvia	LX.PUN02.069	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS

Downloaded from www.Manualslib.com manuals search engine

Model	Country	Acer Part No	VGA Chip	VRAM 1	HDD 1(GB)	HDD 2(GB)
AS7745G-434G1TMn	Latvia	LX.PUN02.070	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	Latvia	LX.PUP02.071	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	Latvia	LX.PUP02.072	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	Luxembourg	LX.PUN02.074	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	Luxembourg	LX.PUP02.073	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	Middle East	LX.PUN02.079	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	Middle East	LX.PUN02.080	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	Middle East	LX.PUN02.081	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	Middle East	LX.PUN02.082	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	Middle East	LX.PUN02.085	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	Middle East	LX.PUN02.086	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	Middle East	LX.PUN02.087	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	Middle East	LX.PUN02.090	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	Middle East	LX.PUN02.091	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	Middle East	LX.PUP02.001	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	Middle East	LX.PUP02.004	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	Middle East	LX.PUP02.006	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	Middle East	LX.PUP02.007	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	Middle East	LX.PUP02.010	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	Middle East	LX.PUP02.011	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	Middle East	LX.PUP02.081	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	Middle East	LX.PUP02.082	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	Middle East	LX.PUP02.083	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	Poland	LX.PUN02.077	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS

Downloaded from www.Manualslib.com manuals search engine

Model	Country	Acer Part No	VGA Chip	VRAM 1	HDD 1(GB)	HDD 2(GB)
AS7745G-434G1TMn	Poland	LX.PUP02.078	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	Portugal	LX.PUN02.060	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	Portugal	LX.PUP02.063	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	Serbia/ Macedonia	LX.PUN02.058	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	Serbia/ Macedonia	LX.PUP02.060	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	South Africa	LX.PUN02.078	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	South Africa	LX.PUN02.083	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	South Africa	LX.PUN02.089	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	South Africa	LX.PUP02.002	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	South Africa	LX.PUP02.005	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	South Africa	LX.PUP02.009	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	South Africa	LX.PUP02.080	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	Spain	LX.PUN02.052	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	Spain	LX.PUP02.058	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	Switzerland	LX.PUN02.071	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	Switzerland	LX.PUP02.074	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	Turkey	LX.PUN02.088	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	Turkey	LX.PUP02.008	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	UK	LX.PUN02.066	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	UK	LX.PUP02.070	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	Ukraine	LX.PUN02.093	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMn	Ukraine	LX.PUP02.013	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMi	Russia	LX.PUN02.092	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-434G1TMi	Russia	LX.PUP02.012	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS

Downloaded from www.Manualslib.com manuals search engine

Model	Country	Acer Part No	VGA Chip	VRAM 1	HDD 1(GB)	HDD 2(GB)
AS7745G-434G1.28TMn	Belgium	LX.PUN02.199	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N640GB5.4KS
AS7745G-434G1.28TMn	Holland	LX.PUN02.198	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N640GB5.4KS
AS7745G-434G1.28TMn	Luxembourg	LX.PUN02.197	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N640GB5.4KS
AS7745G-434G1.28TMn	Spain	LX.PUN02.099	MADISON_PRO	1G-DDR3 (64*16*8)	N640GB5.4KS	N640GB5.4KS
AS7745G-433G32Mn	Turkey	LX.PUN01.002	MADISON_PRO	1G-DDR3 (64*16*8)	N320GB5.4KS	N
AS7745G-336G1TMn	Denmark	LX.PUP02.085	BROADWAY_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-334G50Mn	Turkey	LX.PUK02.003	PARK_XT	512M-DDR3 (64*16*4)	N500GB5.4KS	N
AS7745G-334G1TMn	France	LX.PUN02.095	MADISON_PRO	1G-DDR3 (64*16*8)	N500GB5.4KS	N500GB5.4KS
AS7745G-333G48Mn	Turkey	LX.PUK01.002	PARK_XT	512M-DDR3 (64*16*4)	N160GB5.4KS	N320GB5.4KS
AS7745G-333G32Mn	Turkey	LX.PUK01.003	PARK_XT	512M-DDR3 (64*16*4)	N320GB5.4KS	N
AS7745G-332G32Mn	WW	S2.PUK02.003	PARK_XT	512M-DDR3 (64*16*4)	N160GB5.4KS	N160GB5.4KS
AS7745G-332G32Mn	WW	S2.PUK02.003	PARK_XT	512M-DDR3 (64*16*4)	N160GB5.4KS	N160GB5.4KS
AS7745G-332G16Mn	GCTWN	S2.PUK02.001	PARK_XT	512M-DDR3 (64*16*4)	N160GB5.4KS	N
AS7745G-332G16Mn	GCTWN	S2.PUK02.001	PARK_XT	512M-DDR3 (64*16*4)	N160GB5.4KS	N
AS7745G-332G16Mn	South Africa	LX.PUK02.001	PARK_XT	512M-DDR3 (64*16*4)	N160GB5.4KS	N
AS7745G-332G16Mn	South Africa	LX.PUN02.001	MADISON_PRO	1G-DDR3 (64*16*8)	N160GB5.4KS	N
AS7745G-332G16Mn	WW	S2.PUK02.002	PARK_XT	512M-DDR3 (64*16*4)	N160GB5.4KS	N
AS7745G-332G16Mn	WW	S2.PUK02.002	PARK_XT	512M-DDR3 (64*16*4)	N160GB5.4KS	N

Downloaded from www.Manualslib.com manuals search engine

Model	Country	Acer Part No	Memory 1	Memory 2	Memory 3	Memory 4
AS7745G-728G75Bn	WW	S2.PUM02.002	SO2GBIII10	SO2GBIII10	SO2GBIII10	SO2GBIII10
AS7745G-728G75Bn	WW	S2.PUM02.002	SO2GBIII10	SO2GBIII10	SO2GBIII10	SO2GBIII10
AS7745G-728G64Bn	Germany	LX.PUL02.143	SO2GBIII10	SO2GBIII10	SO2GBIII10	SO2GBIII10
AS7745G-728G57Mn	WW	S2.PUL02.002	SO2GBIII10	SO2GBIII10	SO2GBIII10	SO2GBIII10
AS7745G-728G57Mn	WW	S2.PUL02.002	SO2GBIII10	SO2GBIII10	SO2GBIII10	SO2GBIII10
AS7745G-728G50Bn	USA	LX.PUL02.144	SO2GBIII10	SO2GBIII10	SO2GBIII10	SO2GBIII10
AS7745G-728G50Bn	USA	LX.PUL02.145	SO2GBIII10	SO2GBIII10	SO2GBIII10	SO2GBIII10
AS7745G-728G1TWn	France	LX.PUM02.003	SO2GBIII10	SO2GBIII10	SO2GBIII10	SO2GBIII10
AS7745G-728G1TMn	Spain	LX.PUL02.091	SO2GBIII10	SO2GBIII10	SO2GBIII10	SO2GBIII10
AS7745G-728G1TBn	France	LX.PUM02.004	SO2GBIII10	SO2GBIII10	SO2GBIII10	SO2GBIII10
AS7745G-728G1TBn	Switzerland	LX.PUM02.005	SO2GBIII10	SO2GBIII10	SO2GBIII10	SO2GBIII10
AS7745G-728G1TBi	Russia	LX.PUM02.053	SO2GBIII10	SO2GBIII10	SO2GBIII10	SO2GBIII10
AS7745G-728G1.28TWn	Germany	LX.PUM02.055	SO2GBIII10	SO2GBIII10	SO2GBIII10	SO2GBIII10
AS7745G-728G1.28TWn	Japan	LX.PUM02.064	SO2GBIII10	SO2GBIII10	SO2GBIII10	SO2GBIII10
AS7745G-728G1.28TBn	Algeria	LX.PUL02.078	SO2GBIII10	SO2GBIII10	SO2GBIII10	SO2GBIII10
AS7745G-728G1.28TBn	Austria	LX.PUL02.049	SO2GBIII10	SO2GBIII10	SO2GBIII10	SO2GBIII10
AS7745G-728G1.28TBn	Baltic	LX.PUL02.050	SO2GBIII10	SO2GBIII10	SO2GBIII10	SO2GBIII10
AS7745G-728G1.28TBn	Baltic	LX.PUL02.063	SO2GBIII10	SO2GBIII10	SO2GBIII10	SO2GBIII10
AS7745G-728G1.28TBn	Baltic	LX.PUL02.072	SO2GBIII10	SO2GBIII10	SO2GBIII10	SO2GBIII10
AS7745G-728G1.28TBn	Belgium	LX.PUL02.074	SO2GBIII10	SO2GBIII10	SO2GBIII10	SO2GBIII10

Downloaded from www.Manualslib.com manuals search engine

Model	Country	Acer Part No	Memory 1	Memory 2	Memory 3	Memory 4
AS7745G-728G1.28TBn	Cyprus	LX.PUL02.065	SO2GBIII10	SO2GBIII10	SO2GBIII10	SO2GBIII10
AS7745G-728G1.28TBn	Czech	LX.PUL02.066	SO2GBIII10	SO2GBIII10	SO2GBIII10	SO2GBIII10
AS7745G-728G1.28TBn	Denmark	LX.PUL02.062	SO2GBIII10	SO2GBIII10	SO2GBIII10	SO2GBIII10
AS7745G-728G1.28TBn	Eastern Europe	LX.PUL02.047	SO2GBIII10	SO2GBIII10	SO2GBIII10	SO2GBIII10
AS7745G-728G1.28TBn	Eastern Europe	LX.PUL02.052	SO2GBIII10	SO2GBIII10	SO2GBIII10	SO2GBIII10
AS7745G-728G1.28TBn	Eastern Europe	LX.PUL02.057	SO2GBIII10	SO2GBIII10	SO2GBIII10	SO2GBIII10
AS7745G-728G1.28TBn	Eastern Europe	LX.PUL02.058	SO2GBIII10	SO2GBIII10	SO2GBIII10	SO2GBIII10
AS7745G-728G1.28TBn	Eastern Europe	LX.PUL02.061	SO2GBIII10	SO2GBIII10	SO2GBIII10	SO2GBIII10
AS7745G-728G1.28TBn	France	LX.PUL02.046	SO2GBIII10	SO2GBIII10	SO2GBIII10	SO2GBIII10
AS7745G-728G1.28TBn	Germany	LX.PUL02.080	SO2GBIII10	SO2GBIII10	SO2GBIII10	SO2GBIII10
AS7745G-728G1.28TBn	Greece	LX.PUL02.048	SO2GBIII10	SO2GBIII10	SO2GBIII10	SO2GBIII10
AS7745G-728G1.28TBn	Holland	LX.PUL02.075	SO2GBIII10	SO2GBIII10	SO2GBIII10	SO2GBIII10
AS7745G-728G1.28TBn	Hungary	LX.PUL02.054	SO2GBIII10	SO2GBIII10	SO2GBIII10	SO2GBIII10
AS7745G-728G1.28TBn	Israel	LX.PUL02.053	SO2GBIII10	SO2GBIII10	SO2GBIII10	SO2GBIII10
AS7745G-728G1.28TBn	Italy	LX.PUL02.060	SO2GBIII10	SO2GBIII10	SO2GBIII10	SO2GBIII10
AS7745G-728G1.28TBn	Latvia	LX.PUL02.055	SO2GBIII10	SO2GBIII10	SO2GBIII10	SO2GBIII10
AS7745G-728G1.28TBn	Latvia	LX.PUL02.056	SO2GBIII10	SO2GBIII10	SO2GBIII10	SO2GBIII10

Downloaded from www.Manualslib.com manuals search engine

Model	Country	Acer Part No	Memory 1	Memory 2	Memory 3	Memory 4
AS7745G-728G1.28TBn	Luxembourg	LX.PUL02.076	SO2GBIII10	SO2GBIII10	SO2GBIII10	SO2GBIII10
AS7745G-728G1.28TBn	Middle East	LX.PUL02.067	SO2GBIII10	SO2GBIII10	SO2GBIII10	SO2GBIII10
AS7745G-728G1.28TBn	Middle East	LX.PUL02.068	SO2GBIII10	SO2GBIII10	SO2GBIII10	SO2GBIII10
AS7745G-728G1.28TBn	Middle East	LX.PUL02.070	SO2GBIII10	SO2GBIII10	SO2GBIII10	SO2GBIII10
AS7745G-728G1.28TBn	Middle East	LX.PUL02.077	SO2GBIII10	SO2GBIII10	SO2GBIII10	SO2GBIII10
AS7745G-728G1.28TBn	Middle East	LX.PUL02.079	SO2GBIII10	SO2GBIII10	SO2GBIII10	SO2GBIII10
AS7745G-728G1.28TBn	Middle East	LX.PUL02.083	SO2GBIII10	SO2GBIII10	SO2GBIII10	SO2GBIII10
AS7745G-728G1.28TBn	Middle East	LX.PUL02.084	SO2GBIII10	SO2GBIII10	SO2GBIII10	SO2GBIII10
AS7745G-728G1.28TBn	Middle East	LX.PUL02.086	SO2GBIII10	SO2GBIII10	SO2GBIII10	SO2GBIII10
AS7745G-728G1.28TBn	Middle East	LX.PUL02.087	SO2GBIII10	SO2GBIII10	SO2GBIII10	SO2GBIII10
AS7745G-728G1.28TBn	Poland	LX.PUL02.081	SO2GBIII10	SO2GBIII10	SO2GBIII10	SO2GBIII10
AS7745G-728G1.28TBn	Portugal	LX.PUL02.064	SO2GBIII10	SO2GBIII10	SO2GBIII10	SO2GBIII10
AS7745G-728G1.28TBn	Serbia/ Macedonia	LX.PUL02.051	SO2GBIII10	SO2GBIII10	SO2GBIII10	SO2GBIII10
AS7745G-728G1.28TBn	South Africa	LX.PUL02.069	SO2GBIII10	SO2GBIII10	SO2GBIII10	SO2GBIII10
AS7745G-728G1.28TBn	South Africa	LX.PUL02.082	SO2GBIII10	SO2GBIII10	SO2GBIII10	SO2GBIII10
AS7745G-728G1.28TBn	South Africa	LX.PUL02.088	SO2GBIII10	SO2GBIII10	SO2GBIII10	SO2GBIII10
AS7745G-728G1.28TBn	Spain	LX.PUL02.059	SO2GBIII10	SO2GBIII10	SO2GBIII10	SO2GBIII10

Downloaded from www.Manualslib.com manuals search engine

Model	Country	Acer Part No	Memory 1	Memory 2	Memory 3	Memory 4
AS7745G-728G1.28TBn	Switzerland	LX.PUL02.073	SO2GBIII10	SO2GBIII10	SO2GBIII10	SO2GBIII10
AS7745G-728G1.28TBn	Turkey	LX.PUL02.085	SO2GBIII10	SO2GBIII10	SO2GBIII10	SO2GBIII10
AS7745G-728G1.28TBn	UK	LX.PUL02.071	SO2GBIII10	SO2GBIII10	SO2GBIII10	SO2GBIII10
AS7745G-728G1.28TBn	Ukraine	LX.PUL02.090	SO2GBIII10	SO2GBIII10	SO2GBIII10	SO2GBIII10
AS7745G-728G1.28TBi	Russia	LX.PUL02.089	SO2GBIII10	SO2GBIII10	SO2GBIII10	SO2GBIII10
AS7745G-726G64Mn	Czech	LX.PUM02.062	SO2GBIII10	SO2GBIII10	SO2GBIII10	N
AS7745G-726G1TMn	Belgium	LX.PUL02.139	SO2GBIII10	SO2GBIII10	SO2GBIII10	N
AS7745G-726G1TMn	Belgium	LX.PUM02.059	SO2GBIII10	SO2GBIII10	SO2GBIII10	N
AS7745G-726G1TMn	France	LX.PUM02.002	SO2GBIII10	SO2GBIII10	SO2GBIII10	N
AS7745G-726G1TMn	Holland	LX.PUL02.141	SO2GBIII10	SO2GBIII10	SO2GBIII10	N
AS7745G-726G1TMn	Holland	LX.PUM02.061	SO2GBIII10	SO2GBIII10	SO2GBIII10	N
AS7745G-726G1TMn	Luxemburg	LX.PUL02.140	SO2GBIII10	SO2GBIII10	SO2GBIII10	N
AS7745G-726G1TMn	Luxemburg	LX.PUM02.060	SO2GBIII10	SO2GBIII10	SO2GBIII10	N
AS7745G-726G1TBn	UK	LX.PUM02.063	SO2GBIII10	SO2GBIII10	SO2GBIII10	N
AS7745G-724G64Mn	Algeria	LX.PUL02.035	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G64Mn	Austria	LX.PUL02.004	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G64Mn	Baltic	LX.PUL02.005	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G64Mn	Baltic	LX.PUL02.008	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G64Mn	Baltic	LX.PUL02.023	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G64Mn	Belgium	LX.PUL02.025	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G64Mn	Cyprus	LX.PUL02.010	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G64Mn	Czech	LX.PUL02.011	SO2GBIII10	SO2GBIII10	N	N

Downloaded from www.Manualslib.com manuals search engine

Model	Country	Acer Part No	Memory 1	Memory 2	Memory 3	Memory 4
AS7745G-724G64Mn	Denmark	LX.PUL02.007	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G64Mn	Eastern Europe	LX.PUL02.002	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G64Mn	Eastern Europe	LX.PUL02.016	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G64Mn	Eastern Europe	LX.PUL02.017	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G64Mn	Eastern Europe	LX.PUL02.020	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G64Mn	Eastern Europe	LX.PUL02.021	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G64Mn	France	LX.PUL02.001	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G64Mn	Germany	LX.PUL02.028	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G64Mn	Greece	LX.PUL02.003	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G64Mn	Holland	LX.PUL02.026	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G64Mn	Hungary	LX.PUL02.013	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G64Mn	Israel	LX.PUL02.012	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G64Mn	Italy	LX.PUL02.019	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G64Mn	Latvia	LX.PUL02.014	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G64Mn	Latvia	LX.PUL02.015	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G64Mn	Luxembourg	LX.PUL02.027	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G64Mn	Middle East	LX.PUL02.030	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G64Mn	Middle East	LX.PUL02.031	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G64Mn	Middle East	LX.PUL02.033	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G64Mn	Middle East	LX.PUL02.034	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G64Mn	Middle East	LX.PUL02.036	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G64Mn	Middle East	LX.PUL02.038	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G64Mn	Middle East	LX.PUL02.039	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G64Mn	Middle East	LX.PUL02.041	SO2GBIII10	SO2GBIII10	N	N

Downloaded from www.Manualslib.com manuals search engine

Model	Country	Acer Part No	Memory 1	Memory 2	Memory 3	Memory 4
AS7745G-724G64Mn	Middle East	LX.PUL02.042	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G64Mn	Poland	LX.PUL02.029	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G64Mn	Portugal	LX.PUL02.009	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G64Mn	Serbia/ Macedonia	LX.PUL02.006	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G64Mn	South Africa	LX.PUL02.032	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G64Mn	South Africa	LX.PUL02.037	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G64Mn	South Africa	LX.PUL02.043	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G64Mn	Spain	LX.PUL02.018	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G64Mn	Switzerland	LX.PUL02.024	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G64Mn	Turkey	LX.PUL02.040	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G64Mn	UK	LX.PUL02.022	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G64Mn	Ukraine	LX.PUL02.045	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G64Mi	Russia	LX.PUL02.044	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G64Bn	Germany	LX.PUM02.006	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G64Bn	Germany	LX.PUM02.054	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G50Mn	Algeria	LX.PUL02.128	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G50Mn	Austria	LX.PUL02.094	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G50Mn	Baltic	LX.PUL02.103	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G50Mn	Baltic	LX.PUL02.106	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G50Mn	Baltic	LX.PUL02.119	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G50Mn	Belgium	LX.PUL02.117	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G50Mn	Cyprus	LX.PUL02.104	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G50Mn	Czech	LX.PUL02.109	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G50Mn	Denmark	LX.PUL02.098	SO2GBIII10	SO2GBIII10	N	N

Downloaded from www.Manualslib.com manuals search engine

Model	Country	Acer Part No	Memory 1	Memory 2	Memory 3	Memory 4
AS7745G-724G50Mn	Eastern Europe	LX.PUL02.092	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G50Mn	Eastern Europe	LX.PUL02.096	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G50Mn	Eastern Europe	LX.PUL02.097	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G50Mn	Eastern Europe	LX.PUL02.110	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G50Mn	Eastern Europe	LX.PUL02.111	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G50Mn	France	LX.PUL02.093	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G50Mn	France	LX.PUM02.001	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G50Mn	Germany	LX.PUL02.121	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G50Mn	Greece	LX.PUL02.095	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G50Mn	Holland	LX.PUL02.118	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G50Mn	Hungary	LX.PUL02.108	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G50Mn	Israel	LX.PUL02.107	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G50Mn	Italy	LX.PUL02.101	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G50Mn	Latvia	LX.PUL02.113	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G50Mn	Latvia	LX.PUL02.114	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G50Mn	Luxembourg	LX.PUL02.115	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G50Mn	Middle East	LX.PUL02.123	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G50Mn	Middle East	LX.PUL02.124	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G50Mn	Middle East	LX.PUL02.125	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G50Mn	Middle East	LX.PUL02.126	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G50Mn	Middle East	LX.PUL02.129	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G50Mn	Middle East	LX.PUL02.131	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G50Mn	Middle East	LX.PUL02.132	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G50Mn	Middle East	LX.PUL02.135	SO2GBIII10	SO2GBIII10	N	N

Downloaded from www.Manualslib.com manuals search engine

Model	Country	Acer Part No	Memory 1	Memory 2	Memory 3	Memory 4
AS7745G-724G50Mn	Middle East	LX.PUL02.136	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G50Mn	Poland	LX.PUL02.120	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G50Mn	Portugal	LX.PUL02.105	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G50Mn	Serbia/ Macedonia	LX.PUL02.102	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G50Mn	South Africa	LX.PUL02.122	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G50Mn	South Africa	LX.PUL02.127	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G50Mn	South Africa	LX.PUL02.130	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G50Mn	South Africa	LX.PUL02.134	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G50Mn	Spain	LX.PUL02.099	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G50Mn	Switzerland	LX.PUL02.116	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G50Mn	Turkey	LX.PUL02.133	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G50Mn	UK	LX.PUL02.112	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G50Mn	Ukraine	LX.PUL02.138	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G50Mn	USA	LX.PUL02.146	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G50Mi	Russia	LX.PUL02.137	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G50Bn	Germany	LX.PUL02.142	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G48Bn	WW	S2.PUM02.003	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G48Bn	WW	S2.PUM02.003	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G1TBn	Algeria	LX.PUM02.044	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G1TBn	Austria	LX.PUM02.009	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G1TBn	Baltic	LX.PUM02.017	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G1TBn	Baltic	LX.PUM02.022	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G1TBn	Baltic	LX.PUM02.035	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G1TBn	Belgium	LX.PUM02.033	SO2GBIII10	SO2GBIII10	N	N

Downloaded from www.Manualslib.com manuals search engine

Model	Country	Acer Part No	Memory 1	Memory 2	Memory 3	Memory 4
AS7745G-724G1TBn	Cyprus	LX.PUM 02.020	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G1TBn	Czech	LX.PUM 02.025	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G1TBn	Denmark	LX.PUM 02.013	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G1TBn	Eastern Europe	LX.PUM 02.007	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G1TBn	Eastern Europe	LX.PUM 02.011	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G1TBn	Eastern Europe	LX.PUM 02.012	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G1TBn	Eastern Europe	LX.PUM 02.026	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G1TBn	Eastern Europe	LX.PUM 02.027	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G1TBn	France	LX.PUM 02.008	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G1TBn	Germany	LX.PUM 02.037	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G1TBn	Greece	LX.PUM 02.010	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G1TBn	Holland	LX.PUM 02.034	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G1TBn	Hungary	LX.PUM 02.024	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G1TBn	Israel	LX.PUM 02.023	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G1TBn	Italy	LX.PUM 02.015	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G1TBn	Latvia	LX.PUM 02.029	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G1TBn	Latvia	LX.PUM 02.030	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G1TBn	Luxembourg	LX.PUM 02.031	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G1TBn	Middle East	LX.PUM 02.039	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G1TBn	Middle East	LX.PUM 02.040	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G1TBn	Middle East	LX.PUM 02.041	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G1TBn	Middle East	LX.PUM 02.042	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G1TBn	Middle East	LX.PUM 02.045	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G1TBn	Middle East	LX.PUM 02.047	SO2GBIII10	SO2GBIII10	N	N

Downloaded from www.Manualslib.com manuals search engine

Model	Country	Acer Part No	Memory 1	Memory 2	Memory 3	Memory 4
AS7745G-724G1TBn	Middle East	LX.PUM02.048	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G1TBn	Middle East	LX.PUM02.051	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G1TBn	Middle East	LX.PUM02.052	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G1TBn	Poland	LX.PUM02.036	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G1TBn	Portugal	LX.PUM02.021	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G1TBn	Serbia/ Macedonia	LX.PUM02.016	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G1TBn	South Africa	LX.PUM02.038	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G1TBn	South Africa	LX.PUM02.043	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G1TBn	South Africa	LX.PUM02.046	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G1TBn	South Africa	LX.PUM02.050	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G1TBn	Spain	LX.PUM02.014	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G1TBn	Switzerland	LX.PUM02.032	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G1TBn	Turkey	LX.PUM02.049	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G1TBn	UK	LX.PUM02.028	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G1TBn	Ukraine	LX.PUM02.019	SO2GBIII10	SO2GBIII10	N	N
AS7745G-724G1TBi	Russia	LX.PUM02.018	SO2GBIII10	SO2GBIII10	N	N
AS7745G-722G75Bn	GCTWN	S2.PUM02.001	SO2GBIII10	N	N	N
AS7745G-722G75Bn	GCTWN	S2.PUM02.001	SO2GBIII10	N	N	N
AS7745G-722G57Mn	GCTWN	S2.PUL02.001	SO2GBIII10	N	N	N
AS7745G-722G57Mn	GCTWN	S2.PUL02.001	SO2GBIII10	N	N	N
AS7745G-72161.28TBn	Belgium	LX.PUM02.058	SO4GBIII10	SO4GBIII10	SO4GBIII10	SO4GBIII10
AS7745G-72161.28TBn	Holland	LX.PUM02.057	SO4GBIII10	SO4GBIII10	SO4GBIII10	SO4GBIII10
AS7745G-72161.28TBn	Luxembourg	LX.PUM02.056	SO4GBIII10	SO4GBIII10	SO4GBIII10	SO4GBIII10

Downloaded from www.Manualslib.com manuals search engine

Model	Country	Acer Part No	Memory 1	Memory 2	Memory 3	Memory 4
AS7745G-624G50Mn	France	LX.PUN02.101	SO2GBIII10	SO2GBIII10	N	N
AS7745G-624G16Mn	WW	S2.PUP02.001	SO2GBIII10	SO2GBIII10	N	N
AS7745G-624G16Mn	WW	S2.PUP02.001	SO2GBIII10	SO2GBIII10	N	N
AS7745G-542G16Mn	GCTWN	S2.PUN02.001	SO2GBIII10	N	N	N
AS7745G-542G16Mn	GCTWN	S2.PUN02.001	SO2GBIII10	N	N	N
AS7745G-542G16Mn	WW	S2.PUN02.002	SO2GBIII10	N	N	N
AS7745G-542G16Mn	WW	S2.PUN02.002	SO2GBIII10	N	N	N
AS7745G-526G64Bn	Germany	LX.PUN02.208	SO4GBIII10	SO2GBIII10	N	N
AS7745G-524G64Bn	Germany	LX.PUN02.209	SO2GBIII10	SO2GBIII10	N	N
AS7745G-524G50Mn	Turkey	LX.PUN02.217	SO2GBIII10	SO2GBIII10	N	N
AS7745G-523G32Mn	Turkey	LX.PUN01.003	SO2GBIII10	SO1GBIII10	N	N
AS7745G-438G64Mn	Spain	LX.PUN02.096	SO4GBIII10	SO4GBIII10	N	N
AS7745G-438G64Mn	Switzerland	LX.PUN02.214	SO4GBIII10	SO4GBIII10	N	N
AS7745G-438G50Mn	Switzerland	LX.PUN02.215	SO4GBIII10	SO4GBIII10	N	N
AS7745G-438G1TBn	Switzerland	LX.PUN02.212	SO4GBIII10	SO4GBIII10	N	N
AS7745G-436G64Mn	Spain	LX.PUN02.097	SO4GBIII10	SO2GBIII10	N	N
AS7745G-436G64Bn	Germany	LX.PUN02.211	SO4GBIII10	SO2GBIII10	N	N
AS7745G-436G1.28TBn	Belgium	LX.PUN02.206	SO4GBIII10	SO2GBIII10	N	N
AS7745G-436G1.28TBn	Holland	LX.PUN02.205	SO4GBIII10	SO2GBIII10	N	N
AS7745G-436G1.28TBn	Luxembourg	LX.PUN02.204	SO4GBIII10	SO2GBIII10	N	N
AS7745G-434G82Mn	Belgium	LX.PUN02.203	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G82Mn	Holland	LX.PUN02.202	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G82Mn	Luxembourg	LX.PUN02.201	SO2GBIII10	SO2GBIII10	N	N

Downloaded from www.Manualslib.com manuals search engine

Model	Country	Acer Part No	Memory 1	Memory 2	Memory 3	Memory 4
AS7745G-434G82Bn	Algeria	LX.PUN02.185	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G82Bn	Austria	LX.PUN02.150	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G82Bn	Baltic	LX.PUN02.162	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G82Bn	Baltic	LX.PUN02.165	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G82Bn	Baltic	LX.PUN02.176	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G82Bn	Belgium	LX.PUN02.174	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G82Bn	Cyprus	LX.PUN02.163	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G82Bn	Czech	LX.PUN02.168	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G82Bn	Denmark	LX.PUN02.158	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G82Bn	Eastern Europe	LX.PUN02.148	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G82Bn	Eastern Europe	LX.PUN02.153	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G82Bn	Eastern Europe	LX.PUN02.154	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G82Bn	Eastern Europe	LX.PUN02.156	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G82Bn	Eastern Europe	LX.PUN02.157	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G82Bn	France	LX.PUN02.149	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G82Bn	Germany	LX.PUN02.178	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G82Bn	Greece	LX.PUN02.155	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G82Bn	Holland	LX.PUN02.175	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G82Bn	Hungary	LX.PUN02.167	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G82Bn	Israel	LX.PUN02.166	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G82Bn	Italy	LX.PUN02.160	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G82Bn	Latvia	LX.PUN02.170	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G82Bn	Latvia	LX.PUN02.171	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G82Bn	Luxembourg	LX.PUN02.172	SO2GBIII10	SO2GBIII10	N	N

Downloaded from www.Manualslib.com manuals search engine

Model	Country	Acer Part No	Memory 1	Memory 2	Memory 3	Memory 4
AS7745G-434G82Bn	Middle East	LX.PUN02.180	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G82Bn	Middle East	LX.PUN02.181	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G82Bn	Middle East	LX.PUN02.182	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G82Bn	Middle East	LX.PUN02.183	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G82Bn	Middle East	LX.PUN02.186	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G82Bn	Middle East	LX.PUN02.188	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G82Bn	Middle East	LX.PUN02.189	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G82Bn	Middle East	LX.PUN02.192	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G82Bn	Middle East	LX.PUN02.193	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G82Bn	Poland	LX.PUN02.177	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G82Bn	Portugal	LX.PUN02.164	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G82Bn	Serbia/ Macedonia	LX.PUN02.161	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G82Bn	South Africa	LX.PUN02.179	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G82Bn	South Africa	LX.PUN02.184	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G82Bn	South Africa	LX.PUN02.187	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G82Bn	South Africa	LX.PUN02.191	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G82Bn	Spain	LX.PUN02.159	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G82Bn	Switzerland	LX.PUN02.173	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G82Bn	Turkey	LX.PUN02.190	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G82Bn	UK	LX.PUN02.169	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G82Bn	Ukraine	LX.PUN02.152	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G82Bi	Russia	LX.PUN02.151	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G64Mn	Algeria	LX.PUN02.137	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G64Mn	Austria	LX.PUN02.104	SO2GBIII10	SO2GBIII10	N	N

Downloaded from www.Manualslib.com manuals search engine

Model	Country	Acer Part No	Memory 1	Memory 2	Memory 3	Memory 4
AS7745G-434G64Mn	Baltic	LX.PUN02.112	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G64Mn	Baltic	LX.PUN02.115	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G64Mn	Baltic	LX.PUN02.128	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G64Mn	Belgium	LX.PUN02.126	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G64Mn	Cyprus	LX.PUN02.113	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G64Mn	Czech	LX.PUK02.002	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G64Mn	Czech	LX.PUN02.118	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G64Mn	Czech	LX.PUN02.213	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G64Mn	Czech	LX.PUP02.086	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G64Mn	Denmark	LX.PUN02.108	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G64Mn	Eastern Europe	LX.PUN02.102	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G64Mn	Eastern Europe	LX.PUN02.106	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G64Mn	Eastern Europe	LX.PUN02.107	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G64Mn	Eastern Europe	LX.PUN02.119	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G64Mn	Eastern Europe	LX.PUN02.120	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G64Mn	France	LX.PUN02.103	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G64Mn	Germany	LX.PUN02.130	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G64Mn	Greece	LX.PUN02.105	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G64Mn	Holland	LX.PUN02.127	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G64Mn	Hungary	LX.PUN02.117	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G64Mn	Israel	LX.PUN02.116	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G64Mn	Italy	LX.PUN02.110	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G64Mn	Latvia	LX.PUN02.122	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G64Mn	Latvia	LX.PUN02.123	SO2GBIII10	SO2GBIII10	N	N

Downloaded from www.Manualslib.com manuals search engine

Model	Country	Acer Part No	Memory 1	Memory 2	Memory 3	Memory 4
AS7745G-434G64Mn	Luxembourg	LX.PUN02.124	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G64Mn	Middle East	LX.PUN02.132	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G64Mn	Middle East	LX.PUN02.133	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G64Mn	Middle East	LX.PUN02.134	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G64Mn	Middle East	LX.PUN02.135	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G64Mn	Middle East	LX.PUN02.138	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G64Mn	Middle East	LX.PUN02.140	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G64Mn	Middle East	LX.PUN02.141	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G64Mn	Middle East	LX.PUN02.144	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G64Mn	Middle East	LX.PUN02.145	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G64Mn	Poland	LX.PUN02.129	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G64Mn	Portugal	LX.PUN02.114	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G64Mn	Serbia/ Macedonia	LX.PUN02.111	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G64Mn	South Africa	LX.PUN02.131	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G64Mn	South Africa	LX.PUN02.136	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G64Mn	South Africa	LX.PUN02.139	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G64Mn	South Africa	LX.PUN02.143	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G64Mn	South Africa	LX.PUN02.196	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G64Mn	Spain	LX.PUN02.109	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G64Mn	Switzerland	LX.PUN02.125	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G64Mn	Turkey	LX.PUN02.142	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G64Mn	UK	LX.PUN02.121	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G64Mn	Ukraine	LX.PUN02.147	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G64Mi	Russia	LX.PUN02.146	SO2GBIII10	SO2GBIII10	N	N

Downloaded from www.Manualslib.com manuals search engine

Model	Country	Acer Part No	Memory 1	Memory 2	Memory 3	Memory 4
AS7745G-434G64Mi	Russia	LX.PUN02.194	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G64Bn	Germany	LX.PUN02.195	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G64Bn	Germany	LX.PUN02.207	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G57Mn	WW	S2.PUN02.003	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G57Mn	WW	S2.PUN02.003	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G50Mn	Spain	LX.PUN02.098	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G50Mn	Turkey	LX.PUN02.216	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G50Mn	UK	LX.PUK02.005	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G50Bn	Germany	LX.PUN02.210	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G50Bn	Germany	LX.PUP02.084	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G32Mn	Algeria	LX.PUN02.039	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G32Mn	Austria	LX.PUN02.018	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G32Mn	Baltic	LX.PUN02.013	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G32Mn	Baltic	LX.PUN02.016	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G32Mn	Baltic	LX.PUN02.030	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G32Mn	Belgium	LX.PUN02.027	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G32Mn	Cyprus	LX.PUN02.015	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G32Mn	Czech	LX.PUN02.020	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G32Mn	Denmark	LX.PUN02.011	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G32Mn	Denmark	LX.PUN02.094	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G32Mn	Eastern Europe	LX.PUN02.005	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G32Mn	Eastern Europe	LX.PUN02.009	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G32Mn	Eastern Europe	LX.PUN02.010	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G32Mn	Eastern Europe	LX.PUN02.022	SO2GBIII10	SO2GBIII10	N	N

Downloaded from www.Manualslib.com manuals search engine

Model	Country	Acer Part No	Memory 1	Memory 2	Memory 3	Memory 4
AS7745G-434G32Mn	Eastern Europe	LX.PUN02.023	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G32Mn	France	LX.PUN02.004	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G32Mn	Germany	LX.PUN02.031	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G32Mn	Greece	LX.PUN02.006	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G32Mn	Holland	LX.PUN02.028	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G32Mn	Hungary	LX.PUN02.019	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G32Mn	Israel	LX.PUN02.017	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G32Mn	Italy	LX.PUN02.008	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G32Mn	Latvia	LX.PUN02.024	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G32Mn	Latvia	LX.PUN02.025	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G32Mn	Luxembourg	LX.PUN02.029	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G32Mn	Middle East	LX.PUN02.034	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G32Mn	Middle East	LX.PUN02.035	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G32Mn	Middle East	LX.PUN02.036	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G32Mn	Middle East	LX.PUN02.037	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G32Mn	Middle East	LX.PUN02.040	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G32Mn	Middle East	LX.PUN02.041	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G32Mn	Middle East	LX.PUN02.042	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G32Mn	Middle East	LX.PUN02.045	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G32Mn	Middle East	LX.PUN02.055	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G32Mn	Poland	LX.PUN02.032	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G32Mn	Portugal	LX.PUN02.014	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G32Mn	Serbia/ Macedonia	LX.PUN02.012	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G32Mn	South Africa	LX.PUN02.033	SO2GBIII10	SO2GBIII10	N	N

Downloaded from www.Manualslib.com manuals search engine

Model	Country	Acer Part No	Memory 1	Memory 2	Memory 3	Memory 4
AS7745G-434G32Mn	South Africa	LX.PUN02.038	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G32Mn	South Africa	LX.PUN02.044	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G32Mn	Spain	LX.PUN02.007	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G32Mn	Switzerland	LX.PUN02.026	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G32Mn	Turkey	LX.PUN02.043	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G32Mn	UK	LX.PUN02.021	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G32Mn	Ukraine	LX.PUN02.047	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G32Mi	Russia	LX.PUK01.001	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G32Mi	Russia	LX.PUN01.001	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G32Mi	Russia	LX.PUN02.046	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	Algeria	LX.PUN02.084	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	Algeria	LX.PUP02.003	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	Austria	LX.PUN02.050	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	Austria	LX.PUP02.053	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	Baltic	LX.PUN02.059	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	Baltic	LX.PUN02.062	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	Baltic	LX.PUN02.075	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	Baltic	LX.PUP02.061	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	Baltic	LX.PUP02.064	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	Baltic	LX.PUP02.077	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	Belgium	LX.PUN02.072	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	Belgium	LX.PUP02.075	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	Cyprus	LX.PUN02.061	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	Cyprus	LX.PUP02.062	SO2GBIII10	SO2GBIII10	N	N

Downloaded from www.Manualslib.com manuals search engine

Model	Country	Acer Part No	Memory 1	Memory 2	Memory 3	Memory 4
AS7745G-434G1TMn	Czech	LX.PUN02.065	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	Czech	LX.PUP02.067	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	Denmark	LX.PUN02.057	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	Denmark	LX.PUP02.057	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	Eastern Europe	LX.PUN02.002	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	Eastern Europe	LX.PUN02.003	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	Eastern Europe	LX.PUN02.049	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	Eastern Europe	LX.PUN02.054	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	Eastern Europe	LX.PUN02.056	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	Eastern Europe	LX.PUN02.067	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	Eastern Europe	LX.PUN02.068	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	Eastern Europe	LX.PUP02.036	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	Eastern Europe	LX.PUP02.055	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	Eastern Europe	LX.PUP02.056	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	Eastern Europe	LX.PUP02.068	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	Eastern Europe	LX.PUP02.069	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	France	LX.PUN02.048	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	France	LX.PUP02.048	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	Germany	LX.PUN02.076	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	Germany	LX.PUP02.079	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	Greece	LX.PUN02.051	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	Greece	LX.PUP02.054	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	Holland	LX.PUN02.073	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	Holland	LX.PUP02.076	SO2GBIII10	SO2GBIII10	N	N

Downloaded from www.Manualslib.com manuals search engine

Model	Country	Acer Part No	Memory 1	Memory 2	Memory 3	Memory 4
AS7745G-434G1TMn	Hungary	LX.PUN02.064	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	Hungary	LX.PUP02.066	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	Israel	LX.PUN02.063	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	Israel	LX.PUP02.065	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	Italy	LX.PUN02.053	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	Italy	LX.PUP02.059	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	Latvia	LX.PUN02.069	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	Latvia	LX.PUN02.070	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	Latvia	LX.PUP02.071	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	Latvia	LX.PUP02.072	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	Luxembourg	LX.PUN02.074	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	Luxembourg	LX.PUP02.073	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	Middle East	LX.PUN02.079	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	Middle East	LX.PUN02.080	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	Middle East	LX.PUN02.081	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	Middle East	LX.PUN02.082	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	Middle East	LX.PUN02.085	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	Middle East	LX.PUN02.086	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	Middle East	LX.PUN02.087	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	Middle East	LX.PUN02.090	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	Middle East	LX.PUN02.091	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	Middle East	LX.PUP02.001	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	Middle East	LX.PUP02.004	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	Middle East	LX.PUP02.006	SO2GBIII10	SO2GBIII10	N	N

Downloaded from www.Manualslib.com manuals search engine

Model	Country	Acer Part No	Memory 1	Memory 2	Memory 3	Memory 4
AS7745G-434G1TMn	Middle East	LX.PUP02.007	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	Middle East	LX.PUP02.010	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	Middle East	LX.PUP02.011	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	Middle East	LX.PUP02.081	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	Middle East	LX.PUP02.082	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	Middle East	LX.PUP02.083	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	Poland	LX.PUN02.077	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	Poland	LX.PUP02.078	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	Portugal	LX.PUN02.060	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	Portugal	LX.PUP02.063	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	Serbia/ Macedonia	LX.PUN02.058	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	Serbia/ Macedonia	LX.PUP02.060	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	South Africa	LX.PUN02.078	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	South Africa	LX.PUN02.083	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	South Africa	LX.PUN02.089	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	South Africa	LX.PUP02.002	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	South Africa	LX.PUP02.005	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	South Africa	LX.PUP02.009	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	South Africa	LX.PUP02.080	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	Spain	LX.PUN02.052	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	Spain	LX.PUP02.058	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	Switzerland	LX.PUN02.071	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	Switzerland	LX.PUP02.074	SO2GBIII10	SO2GBIII10	N	N

Downloaded from www.Manualslib.com manuals search engine

Model	Country	Acer Part No	Memory 1	Memory 2	Memory 3	Memory 4
AS7745G-434G1TMn	Turkey	LX.PUN02.088	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	Turkey	LX.PUP02.008	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	UK	LX.PUN02.066	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	UK	LX.PUP02.070	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	Ukraine	LX.PUN02.093	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMn	Ukraine	LX.PUP02.013	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMi	Russia	LX.PUN02.092	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1TMi	Russia	LX.PUP02.012	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1.28TMn	Belgium	LX.PUN02.199	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1.28TMn	Holland	LX.PUN02.198	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1.28TMn	Luxembourg	LX.PUN02.197	SO2GBIII10	SO2GBIII10	N	N
AS7745G-434G1.28TMn	Spain	LX.PUN02.099	SO2GBIII10	SO2GBIII10	N	N
AS7745G-433G32Mn	Turkey	LX.PUN01.002	SO2GBIII10	SO1GBIII10	N	N
AS7745G-336G1TMn	Denmark	LX.PUP02.085	SO2GBIII10	SO4GBIII10	N	N
AS7745G-334G50Mn	Turkey	LX.PUK02.003	SO2GBIII10	SO2GBIII10	N	N
AS7745G-334G1TMn	France	LX.PUN02.095	SO2GBIII10	SO2GBIII10	N	N
AS7745G-333G48Mn	Turkey	LX.PUK01.002	SO2GBIII10	SO1GBIII10	N	N
AS7745G-333G32Mn	Turkey	LX.PUK01.003	SO2GBIII10	SO1GBIII10	N	N
AS7745G-332G32Mn	WW	S2.PUK02.003	SO1GBIII10	SO1GBIII10	N	N
AS7745G-332G32Mn	WW	S2.PUK02.003	SO1GBIII10	SO1GBIII10	N	N
AS7745G-332G16Mn	GCTWN	S2.PUK02.001	SO2GBIII10	N	N	N
AS7745G-332G16Mn	GCTWN	S2.PUK02.001	SO2GBIII10	N	N	N
AS7745G-332G16Mn	South Africa	LX.PUK02.001	SO2GBIII10	N	N	N

Downloaded from www.Manualslib.com manuals search engine

Model	Country	Acer Part No	Memory 1	Memory 2	Memory 3	Memory 4
AS7745G-332G16Mn	South Africa	LX.PUN02.001	SO2GBIII10	N	N	N
AS7745G-332G16Mn	WW	S2.PUK02.002	SO2GBIII10	N	N	N
AS7745G-332G16Mn	WW	S2.PUK02.002	SO2GBIII10	N	N	N

Acer Aspire 7745 Series

Model	RO	Country	Acer Part No	Description
AS7745-434G50Mn	EMEA	UK	LX.PTZ02.001	AS7745-434G50Mn W7HP64ATGB1 MC UMACks_3J 2*2G/500_L/6L2.2/5R/ CB_bgn_1.3C_GEk_EN11
AS7745-432G48Mi	WW	GCTWN	S2.PTZ02.005	AS7745-432G48Mi W7HP64AWW1 MC UMACks_3V3J 2*1G/320+160/BT/6L2.2/5R/ CB_bg_1.3C_GEk_ES61
AS7745-432G48Mi	WW	GCTWN	S2.PTZ02.005	AS7745-432G48Mi W7HP64AWW1 MC UMACks_3V3J 2*1G/320+160/BT/6L2.2/5R/ CB_bg_1.3C_GEk_ES61
AS7745-432G48Mi	WW	WW	S2.PTZ02.006	AS7745-432G48Mi W7HP64AWW1 MC UMACks_3V3J 2*1G/320+160/BT/6L2.2/5R/ CB_bg_1.3C_GEk_ES62
AS7745-432G48Mi	WW	WW	S2.PTZ02.006	AS7745-432G48Mi W7HP64AWW1 MC UMACks_3V3J 2*1G/320+160/BT/6L2.2/5R/ CB_bg_1.3C_GEk_ES62
AS7745-431G48Mn	WW	GCTWN	S2.PTZ02.001	AS7745-431G48Mn W7HP64AWW1 MC UMACks_3V3J 1*1G/320+160/BT/6L2.2/5R/ CB_bgn_1.3C_GEk_ES61
AS7745-431G48Mn	WW	GCTWN	S2.PTZ02.001	AS7745-431G48Mn W7HP64AWW1 MC UMACks_3V3J 1*1G/320+160/BT/6L2.2/5R/ CB_bgn_1.3C_GEk_ES61
AS7745-431G48Mn	WW	WW	S2.PTZ02.002	AS7745-431G48Mn W7HP64AWW1 MC UMACks_3V3J 1*1G/320+160/BT/6L2.2/5R/ CB_bgn_1.3C_GEk_ES62
AS7745-431G48Mn	WW	WW	S2.PTZ02.002	AS7745-431G48Mn W7HP64AWW1 MC UMACks_3V3J 1*1G/320+160/BT/6L2.2/5R/ CB_bgn_1.3C_GEk_ES62
AS7745-431G32Mi	WW	GCTWN	S2.PTZ02.003	AS7745-431G32Mi W7HP64AWW1 MC UMACks_3V3J 1*1G/320/BT/6L2.2/5R/ CB_bg_1.3C_GEk_ES61
AS7745-431G32Mi	WW	GCTWN	S2.PTZ02.003	AS7745-431G32Mi W7HP64AWW1 MC UMACks_3V3J 1*1G/320/BT/6L2.2/5R/ CB_bg_1.3C_GEk_ES61
AS7745-431G32Mi	WW	WW	S2.PTZ02.004	AS7745-431G32Mi W7HP64AWW1 MC UMACks_3V3J 1*1G/320/BT/6L2.2/5R/ CB_bg_1.3C_GEk_ES62

Downloaded from www.Manualslib.com manuals search engine

Model	RO	Country	Acer Part No	Description
AS7745-431G32Mi	WW	WW	S2.PTZ02.004	AS7745-431G32Mi W7HP64AWW1 MC UMACks_3V3J 1*1G/320/BT/6L2.2/5R/ CB_bg_1.3C_GEk_ES62
AS7745-332G57Bn	WW	WW	S2.PTZ02.007	AS7745-332G57Bn W7HP64AWW1 MC UMACks_3V3J 2*1G/250+320/BT/6L2.2/5R/ CB_bgn_1.3C_GEk_ES62
AS7745-332G57Bn	WW	WW	S2.PTZ02.007	AS7745-332G57Bn W7HP64AWW1 MC UMACks_3V3J 2*1G/250+320/BT/6L2.2/5R/ CB_bgn_1.3C_GEk_ES62

Model	RO	Country	Acer Part No	BOM Name	CPU
AS7745-434G50Mn	EMEA	UK	LX.PTZ02.001	AS7745_UMACks_3J	Ci5430M
AS7745-432G48Mi	WW	GCTWN	S2.PTZ02.005	AS7745_UMACks_3J	Ci5430M
AS7745-432G48Mi	WW	GCTWN	S2.PTZ02.005	AS7745_UMACks_3J	Ci5430M
AS7745-432G48Mi	WW	WW	S2.PTZ02.006	AS7745_UMACks_3J	Ci5430M
AS7745-432G48Mi	WW	WW	S2.PTZ02.006	AS7745_UMACks_3J	Ci5430M
AS7745-431G48Mn	WW	GCTWN	S2.PTZ02.001	AS7745_UMACks_3J	Ci5430M
AS7745-431G48Mn	WW	GCTWN	S2.PTZ02.001	AS7745_UMACks_3J	Ci5430M
AS7745-431G48Mn	WW	WW	S2.PTZ02.002	AS7745_UMACks_3J	Ci5430M
AS7745-431G48Mn	WW	WW	S2.PTZ02.002	AS7745_UMACks_3J	Ci5430M
AS7745-431G32Mi	WW	GCTWN	S2.PTZ02.003	AS7745_UMACks_3J	Ci5430M
AS7745-431G32Mi	WW	GCTWN	S2.PTZ02.003	AS7745_UMACks_3J	Ci5430M
AS7745-431G32Mi	WW	WW	S2.PTZ02.004	AS7745_UMACks_3J	Ci5430M
AS7745-431G32Mi	WW	WW	S2.PTZ02.004	AS7745_UMACks_3J	Ci5430M
AS7745-332G57Bn	WW	WW	S2.PTZ02.007	AS7745_UMACks_3J	Ci3330M
AS7745-332G57Bn	WW	WW	S2.PTZ02.007	AS7745_UMACks_3J	Ci3330M

Model	RO	Country	Acer Part No	VGA Chip	VRAM 1	HDD 1(GB)	HDD 2(GB)
AS7745-434G50Mn	EMEA	UK	LX.PTZ02.001	UMA	N	N500GB5.4KS	N
AS7745-432G48Mi	WW	GCTWN	S2.PTZ02.005	UMA	N	N320GB5.4KS	N160GB5.4KS

Downloaded from www.Manualslib.com manuals search engine

Model	RO	Country	Acer Part No	VGA Chip	VRAM 1	HDD 1(GB)	HDD 2(GB)
AS7745-432G48Mi	WW	GCTWN	S2.PTZ 02.005	UMA	N	N320GB5.4KS	N160GB5.4KS
AS7745-432G48Mi	WW	WW	S2.PTZ 02.006	UMA	N	N320GB5.4KS	N160GB5.4KS
AS7745-432G48Mi	WW	WW	S2.PTZ 02.006	UMA	N	N320GB5.4KS	N160GB5.4KS
AS7745-431G48Mn	WW	GCTWN	S2.PTZ 02.001	UMA	N	N320GB5.4KS	N160GB5.4KS
AS7745-431G48Mn	WW	GCTWN	S2.PTZ 02.001	UMA	N	N320GB5.4KS	N160GB5.4KS
AS7745-431G48Mn	WW	WW	S2.PTZ 02.002	UMA	N	N320GB5.4KS	N160GB5.4KS
AS7745-431G48Mn	WW	WW	S2.PTZ 02.002	UMA	N	N320GB5.4KS	N160GB5.4KS
AS7745-431G32Mi	WW	GCTWN	S2.PTZ 02.003	UMA	N	N320GB5.4KS	N
AS7745-431G32Mi	WW	GCTWN	S2.PTZ 02.003	UMA	N	N320GB5.4KS	N
AS7745-431G32Mi	WW	WW	S2.PTZ 02.004	UMA	N	N320GB5.4KS	N
AS7745-431G32Mi	WW	WW	S2.PTZ 02.004	UMA	N	N320GB5.4KS	N
AS7745-332G57Bn	WW	WW	S2.PTZ 02.007	UMA	N	N250GB5.4KS	N320GB5.4KS
AS7745-332G57Bn	WW	WW	S2.PTZ 02.007	UMA	N	N250GB5.4KS	N320GB5.4KS

Model	Country	Acer Part No	Memory 1	Memory 2	Memory 3	Memory 4
AS7745-434G50Mn	UK	LX.PTZ 02.001	SO2GBIII10	SO2GBIII10	N	N
AS7745-432G48Mi	GCTWN	S2.PTZ 02.005	SO1GBIII10	SO1GBIII10	N	N
AS7745-432G48Mi	GCTWN	S2.PTZ 02.005	SO1GBIII10	SO1GBIII10	N	N
AS7745-432G48Mi	WW	S2.PTZ 02.006	SO1GBIII10	SO1GBIII10	N	N
AS7745-432G48Mi	WW	S2.PTZ 02.006	SO1GBIII10	SO1GBIII10	N	N
AS7745-431G48Mn	GCTWN	S2.PTZ 02.001	SO1GBIII10	N	N	N
AS7745-431G48Mn	GCTWN	S2.PTZ 02.001	SO1GBIII10	N	N	N
AS7745-431G48Mn	WW	S2.PTZ 02.002	SO1GBIII10	N	N	N
AS7745-431G48Mn	WW	S2.PTZ 02.002	SO1GBIII10	N	N	N

Downloaded from www.Manualslib.com manuals search engine

Model	Country	Acer Part No	Memory 1	Memory 2	Memory 3	Memory 4
AS7745-431G32Mi	GCTWN	S2.PTZ02.003	SO1GBIII10	N	N	N
AS7745-431G32Mi	GCTWN	S2.PTZ02.003	SO1GBIII10	N	N	N
AS7745-431G32Mi	WW	S2.PTZ02.004	SO1GBIII10	N	N	N
AS7745-431G32Mi	WW	S2.PTZ02.004	SO1GBIII10	N	N	N
AS7745-332G57Bn	WW	S2.PTZ02.007	SO1GBIII10	SO1GBIII10	N	N
AS7745-332G57Bn	WW	S2.PTZ02.007	SO1GBIII10	SO1GBIII10	N	N

Downloaded from www.Manualslib.com manuals search engine

Test Compatible Components

This computer's compatibility is tested and verified by Acer's internal testing department. All of its system functions are tested under Windows® 7 environment.

Refer to the following lists for components, adapter cards, and peripherals which have passed these tests. Regarding configuration, combination and test procedures, please refer to the Compatibility Test Report released by the Acer Mobile System Testing Department.

Aspire 7745 Series

Vendor	Type	Description	P/N
2nd HDD			
HGST	N500GB5.4KS	HDD HGST 2.5" 5400rpm 500GB HTS545050B9A300 Panther B SATA LF F/W:C60F Disk imbalance criteria = 0.014g-cm	KH.50007.010
SEAGATE	N160GB5.4KS	HDD SEAGATE 2.5" 5400rpm 160GB ST9160314AS Wyatt SATA LF F/W:0001SDM1	KH.16001.042
SEAGATE	N250GB5.4KS	HDD SEAGATE 2.5" 5400rpm 250GB ST9250315AS Wyatt SATA LF F/W:0001SDM1	KH.25001.016
SEAGATE	N500GB5.4KS	HDD SEAGATE 2.5" 5400rpm 500GB ST9500325AS Wyatt SATA LF F/W:0001SDM1	KH.50001.011
TOSHIBA	N250GB5.4KS	HDD TOSHIBA 2.5" 5400rpm 250GB MK2565GSX, Capricorn BS, 320G/P SATA 8MB LF F/W:GJ002J	KH.25004.005
TOSHIBA	N320GB5.4KS	HDD TOSHIBA 2.5" 5400rpm 320GB Capricorn BS ,MK3265GSX SATA 8MB LF F/W:GJ002J	KH.32004.004
TOSHIBA	N500GB5.4KS	HDD TOSHIBA 2.5" 5400rpm 500GB MK5065GSX,Capricorn BS, 320G/P SATA 8MB LF F/W:GJ002J	KH.50004.002
TOSHIBA	N640GB5.4KS	HDD TOSHIBA 2.5" 5400rpm 640GB MK6465GSX,Capricorn BS,320G/P SATA 8MB LF F/W:GJ002J	KH.64004.001
WD	N500GB5.4KS	HDD WD 2.5" 5400rpm 500GB WD5000BEVT-22A0RT0, ML320M,WD SATA 8MB LF F/W:01.01A01	KH.50008.017
Adapter			
DELTA	120W-DE	Adapter DELTA 120W-DE 19V 1.7x5.5x11 Green ADP-120ZB BBGB, LV5+OBL LED LF	AP.12001.009
DELTA	65W	Adapter DELTA 65W 19V 1.7x5.5x11 Yellow ADP-65JH DB A, LV5 LED LF	AP.06501.026
DELTA	90W	Adapter DELTA 90W 19V 1.7x5.5x11 Blue ADP-90CD DB A, LV5 LED LF	AP.09001.027
LITE-ON	65W	Adapter LITE-ON 65W 19V 1.7x5.5x11 Yellow PA-1650-22AC LV5 LED LF	AP.06503.024
LITE-ON	90W	Adapter LITE-ON 90W 19V 1.7x5.5x11 Blue PA-1900-34AR, LV5 LED LF	AP.09003.021
Audio Codec			
Realtek	ALC669X	Realtek ALC669X	LZ.21000.060

Downloaded from www.Manualslib.com manuals search engine

Vendor	Type	Description	P/N
Battery			
SANYO	6CELL2.2	Battery SANYO AS10B Li-Ion 3S2P SANYO 6 cell 4400mAh Main COMMON ID:AS10B31	BT.00603.110
SANYO	9CELL2.8	Battery SANYO AS10E Li-Ion 3S3P SANYO 9 cell 8400mAh Main COMMON ID:AS10E36	BT.00903.014
SIMPLO	6CELL2.2	Battery SIMPLO AS10B Li-Ion 3S2P SAMSUNG 6 cell 4400mAh Main COMMON ID:AS10B75	BT.00607.124
SIMPLO	9CELL2.8	Battery SIMPLO AS10E Li-Ion 3S3P PANASONIC 9 cell 8400mAh Main COMMON ID:AS10E76	BT.00907.015
SIMPLO	9CELL3.0	Battery SIMPLO AS10E Li-Ion 3S3P SAMSUNG 9 cell 9000mAh Main COMMON ID:AS10E7E	BT.00907.013
Bluetooth			
Foxconn	BT 3.0	Foxconn Bluetooth ATH AR3011 (BT3.0)	BH.21100.009
Foxconn	BT 3.0	Foxconn Bluetooth BRM 2046 BT3.0 (T60H928.33) f/w:861	BH.21100.008
Foxconn	BT 3.0	Foxconn Bluetooth BRM 2070 (T77H114.01) BT 3.0	BH.21100.010
Camera			
Chicony	1.3M	Chicony 1.3M CH9665SN (CNF9157)	AM.21400.067
Suyin	1.3M	Suyin 1.3M SY9665SN	AM.21400.068
Card Reader			
	5 in 1-Build in	5 in 1-Build in MS, MS Pro, SD, SC, XD	CR.21500.013
CPU			
INTEL	Ci3330M	CPU Intel Core i3 330M PGA 2.13G 35W Arrandale, TJ90, VT, 3M L3	KC.33001.DMP
INTEL	Ci3350M	CPU Intel Core i3 350M PGA 2.26G 35W Arrandale, TJ90, VT, 3M L3	KC.35001.DMP
INTEL	Ci3350M	CPU Intel Core i3 350M PGA 2.26G 35W K-0 TJ90, VT	KC.35K01.DMP
INTEL	Ci3370M	CPU Intel Core i3 370M PGA 2.4G 35W K-0 TJ90, VT	KC.37K01.DMP
INTEL	Ci5430M	CPU Intel Core i5 430M PGA 2.26G ARD, up to SC 2.53G, 3M L3	KC.43001.DMP
INTEL	Ci5450M	CPU Intel Core i5 450M PGA 2.4G 35W K-0 up to SC 2.66G	KC.45K01.DMP
INTEL	Ci5520M	CPU Intel Core i5 520M 2.4G	KC.52001.DMP
INTEL	Ci5540M	CPU Intel Core i5 540M 2.53G 3M	KC.54001.DMP
INTEL	Ci7620M	CPU Intel Core i7 620M PGA 2.66G	KC.62001.DMP
INTEL	Ci7720QM	CPU Intel Core i7 720QM PGA 1.6G 6M 45W	KC.72001.QMP
INTEL	Ci7740QM	CPU Intel Core i7 740QM PGA 1.73G 6M 45W	KC.74001.QMP
INTEL	Ci7820QM	CPU Intel Core i7 820QM 1.73G 1333 45W	KC.82001.QMP
INTEL	PMDP6000	CPU Intel Pentium Dual-Core P6000 1.86G 35W C2 DDR3-1066	KC.60001.DPP

Downloaded from www.Manualslib.com manuals search engine

Vendor	Type	Description	P/N
HDD			
HGST	N160GB5.4KS	HDD HGST 2.5" 5400rpm 160GB HTS545016B9A300 Panther B SATA LF F/W:C60F Disk imbalance criteria = 0.014g-cm	KH.16007.026
HGST	N500GB5.4KS	HDD HGST 2.5" 5400rpm 500GB HTS545050B9A300 Panther B SATA LF F/W:C60F Disk imbalance criteria = 0.014g-cm	KH.50007.010
SEAGATE	N160GB5.4KS	HDD SEAGATE 2.5" 5400rpm 160GB ST9160314AS Wyatt SATA LF F/W:0001SDM1	KH.16001.042
SEAGATE	N250GB5.4KS	HDD SEAGATE 2.5" 5400rpm 250GB ST9250315AS Wyatt SATA LF F/W:0001SDM1	KH.25001.016
SEAGATE	N320GB5.4KS	HDD SEAGATE 2.5" 5400rpm 320GB ST9320325AS Wyatt SATA LF F/W:0001SDM1	KH.32001.017
SEAGATE	N500GB5.4KS	HDD SEAGATE 2.5" 5400rpm 500GB ST9500325AS Wyatt SATA LF F/W:0001SDM1	KH.50001.011
TOSHIBA	N250GB5.4KS	HDD TOSHIBA 2.5" 5400rpm 250GB MK2565GSX, Capricorn BS, 320G/P SATA 8MB LF F/W:GJ002J	KH.25004.005
TOSHIBA	N320GB5.4KS	HDD TOSHIBA 2.5" 5400rpm 320GB Capricorn BS ,MK3265GSX SATA 8MB LF F/W:GJ002J	KH.32004.004
TOSHIBA	N500GB5.4KS	HDD TOSHIBA 2.5" 5400rpm 500GB MK5065GSX,Capricorn BS, 320G/P SATA 8MB LF F/W:GJ002J	KH.50004.002
TOSHIBA	N640GB5.4KS	HDD TOSHIBA 2.5" 5400rpm 640GB MK6465GSX,Capricorn BS,320G/P SATA 8MB LF F/W:GJ002J	KH.64004.001
WD	N500GB5.4KS	HDD WD 2.5" 5400rpm 500GB WD5000BEVT-22A0RT0, ML320M,WD SATA 8MB LF F/W:01.01A01	KH.50008.017
WD	N640GB5.4KS	HDD WD 2.5" 5400rpm 640GB WD6400BEVT-22A0RT0, ML320 SATA 8MB LF F/W:01.01A01	KH.64008.004
Keyboard			
ACER	AC7T_A10B	Keyboard ACER AC7T_A10B AC7T Internal 17 Standard Black NONE Y2010 Acer Texture	KB.I170A.143
LAN			
Atheros	AR8151L	Atheros AR8151L	NI.22400.048
LCD			
AUO	NLED17.3WXGA+G	LED LCD AUO 17.3" WXGA+ Glare B173RW01-V3 LF 220nit 8ms 500:1	LK.17305.002
MEM			
ELPIDA	SO1GBIII10	Memory ELPIDA SO-DIMM DDRIII 1066 1GB EBJ10UE8BDS0-AE-F LF 128*8 0.065um	KN.1GB09.012
ELPIDA	SO2GBIII10	Memory ELPIDA SO-DIMM DDRIII 1066 2GB EBJ21UE8BDS0-AE-F LF 128*8 0.065um	KN.2GB09.006
HYNIX	SO1GBIII10	Memory HYNIX SO-DIMM DDRIII 1066 1GB HMT112S6BFR6C-G7 N0 LF 64*16 0.055um	KN.1GB0G.025
HYNIX	SO2GBIII10	Memory HYNIX SO-DIMM DDRIII 1066 2GB HMT125S6BFR8C-G7 N0 LF 128*8 0.055um	KN.2GB0G.014

Downloaded from www.Manualslib.com manuals search engine

Vendor	Type	Description	P/N
KINGSTON	SO2GBIII13	Memory KINGSTON SO-DIMM DDRIII 1333 2GB ACR256X64D3S1333C9 LF 128*8 0.065um	KN.2GB07.004
NONE	SO4GBIII10	Memory NONE SO-DIMM DDRIII 1066 4GB dummy P/N LF	KN.4GB00.001
SAMSUNG	SO1GBIII10	Memory SAMSUNG SO-DIMM DDRIII 1066 1GB M471B2873EH1-CF8 LF 64*16 0.055um	KN.1GB0B.028
SAMSUNG	SO2GBIII10	Memory SAMSUNG SO-DIMM DDRIII 1066 2GB M471B5673EH1-CF8 LF 128*8 0.055um	KN.2GB0B.012
NB Chipset			
INTEL	HM55	NB Chipset Intel CS BD82HM55	KI.G5501.002
ODD			
HLDS	NBDCB4XS	ODD HLDS BD COMBO 12.7mm Tray DL 4X CT21N LF W/O bezel 1.00 SATA (HF + Windows 7)	KO.0040D.004
HLDS	NSM8XS	ODD HLDS Super-Multi DRIVE 12.7mm Tray DL 8X GT30N LF W/O bezel SATA (HF + Windows 7)	KU.0080D.048
PANASONIC	NBDRW4XS	ODD PANASONIC BD RW 12.7mm Tray DL 4X UJ240A LF W/O bezel SATA (HF+Windows 7)	KU.00407.015
PANASONIC	NSM8XS	ODD PANASONIC Super-Multi DRIVE 12.7mm Tray DL 8X UJ890A LF W/O bezel SATA (HF + Windows 7)	KU.00807.070
PLDS	NBDCB4XS	ODD PLDS BD COMBO 12.7mm Tray DL 4X DS-4E1S LF W/O bezel SATA (Windows 7)	KO.0040F.003
PLDS	NSM8XS	ODD PLDS Super-Multi DRIVE 12.7mm Tray DL 8X DS-8A4SH LF W/O bezel SATA (HF + Windows 7)	KU.0080F.006
SONY	NSM8XS	ODD SONY Super-Multi DRIVE 12.7mm Tray DL 8X AD-7585H LF W/O bezel SATA (HF + Windows 7)	KU.0080E.027
VGA Chip			
AMD	BROADWAY_PRO	AMD BROADWAY_PRO 40nm 29mm*29mm M2 package	KI.23200.172
AMD	MADISON_PRO	AMD MADISON_PRO 40nm 29mm*29mm M2 package	KI.23200.169
AMD	PARK_XT	AMD PARK_XT 40nm 29mm*29mm M2 package	KI.23200.162
None	UMA	UMA (Intel)	KI.23200.038
VRAM			
	1G-DDR3 (64*16*8)	1G-DDR3 64*16*8	KI.23300.018
	512M-DDR3 (64*16*4)	512M-DDR3 64*16*4	KI.23300.019
WiFi Antenna			
WNC	PIFA	PIFA	LZ.23500.006
Wireless LAN			
Foxconn	3rd WiFi 2x2 BGN	Foxconn Wireless LAN Atheros HB93 2x2 BGN (HM)	NI.23600.062

Downloaded from www.Manualslib.com manuals search engine

Vendor	Type	Description	P/N
Foxconn	3rd WiFi 2x2 BGN	Foxconn Wireless LAN Broadcomm 43225 2x2 BGN (HM) T77H103.00	NI.23600.066
Foxconn	3rd WiFi 2x2 BGN	Foxconn Wireless LAN Atheros HB97 2x2 BGN (HM)	NI.23600.072

Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine

Online Support Information

This section describes online technical support services available to help you repair your Acer Systems.

If you are a distributor, dealer, ASP or TPM, please refer your technical queries to your local Acer branch office. Acer Branch Offices and Regional Business Units may access our website. However some information sources will require a user i.d. and password. These can be obtained directly from Acer CSD Taiwan.

Acer's Website offers you convenient and valuable support resources whenever you need them.

In the Technical Information section you can download information on all of Acer's Notebook, Desktop and Server models including:

- Service guides for all models
- BIOS updates
- Software utilities
- Spare parts lists
- TABs (Technical Announcement Bulletin)

For these purposes, we have included an Acrobat File to facilitate the problem-free downloading of our technical material.

Also contained on this website are:

- Detailed information on Acer's International Traveler's Warranty (ITW)
- Returned material authorization procedures
- An overview of all the support services we offer, accompanied by a list of telephone, fax and email contacts for all your technical queries.

We are always looking for ways to optimize and improve our services, so if you have any suggestions or comments, please do not hesitate to communicate these to us.

Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine

A

Antennas
Removing 97, 100

B

Battery Pack
Removing 51
BIOS
ROM type 21
vendor 21
BIOS Utility 31–39
Advanced 34
Boot 37
Exit 38
Navigating 31
Power 37
Save and Exit 38
Security 34
System Security 38
brightness
hotkeys 15

C

Camera Board
Removing 92, 106
caps lock
on indicator 11
Common Problems 140
CPU
Replacing 110
CRT Cable
Removing 76

D

DIMM Module
Removing 56
Display 6
display
hotkeys 15

E

Euro Key 16
External Module Disassembly
Flowchart 50

F

Features 1
FLASH Utility 39
Flash Utility 39
FRU (Field Replaceable Unit) List 161

H

Hard Disk Drive Module
Removing 54
Hibernation mode
hotkey 15
Hot Keys 13

I

Indicators 11
Intermittent Problems 150
Internal Microphone Failure 147
Internal Speaker Failure 146

J

Jumper and Connector Locations 157

K

Keyboard
Removing 66
Keyboard Failure 144

L

LCD Bezel
Removing 90, 107
LCD Failure 143
LCD Module
Removing 120
LCD Module Disassembly
Flowchart 89
LCD Panel
Removing 93

M

Main Unit Disassembly
Flowchart 64

Downloaded from www.Manualslib.com manuals search engine

Mainboard
Removing 76
media access
on indicator 11
Memory Check 140
Microphone
Removing 93
Model Definition 171

N

No Display Issue 141
num lock
on indicator 11

O

ODD Failure 149
Online Support Information 279

P

Panel 7
PC Card 11
Power On Failure 140

S

Speaker Module
Removing 72
speakers
hotkey 15
System
Block Diagram 6

T

Test Compatible Components 273
Thermal Module
Removing 80
Touch Pad Failure 145
TouchPad FFC
Removing 74, 78, 114
Troubleshooting
Built-in KB Failure 144
Internal Microphone 147
Internal Speakers 146
LCD Failure 143
No Display 141
ODD 149
Other Failures 149
Power On 140
Touch Pad 145
USB 149

U

Undetermined Problems 150
Upper Cover
Removing 68
USB Failure (Rightside) 149
utility
BIOS 31–39

V

volume
hotkeys 15

W

Windows 2000 Environment Test 273
WLAN Board
Removing 57

Downloaded from www.Manualslib.com manuals search engine